
Assembly Instructions

Willy Series

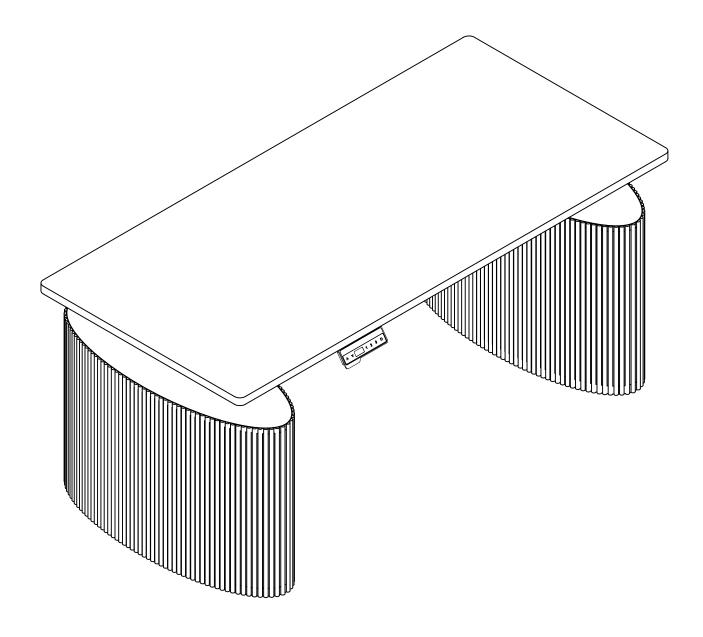

Lifely*

Product Code
WILY-ED160-BLK
Willy Electric Height Adjustable Office Desk
Dimensions(W x D x H)
1600*800*727mm

Important

Please read through instruction carefully Before assembly and keep for future reference. For our full catalogue of assembly instructions, Visit: lifely.com.au/assembly.

Important Tips and Maintenance

 




1.
Keep children and animals
away from working area as
smaller parts may cause choking if swallowed.



Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.




To avoid fading, keep furniture out of direct sunlight.




Never use ammonia based cleaning products as it will damage the finish.



 5. Use a soft or dry cloth when wiping or cleaning surfaces.



Two person are required.

 


Lay a soft matt down to protect the furniture piece before and during assembly. So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead. E.g. "You're so good looking."

This 5-step assembly should take around 25 minutes with an Allen key-or 15 minutes with an electric drill.

Designed for everyday

Component Hardware are in box one.

Please check you have all the fittings part or tools are listed in below.

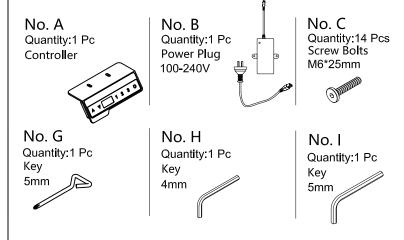












Component Panels & part List Please check you have all the panels are listed below.

1. Top Panelx1	CTN 1/3
2. Leg-L x1	CTN 3/3
3. Leg-R x1	CTN 2/3
4. Metal Framex1	CTN 1/3
5. Transfer Rod x1	CTN 1/3

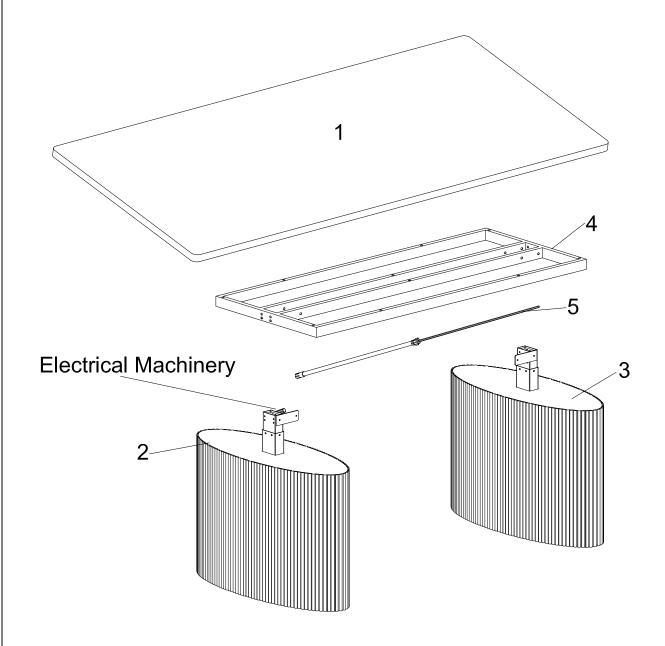

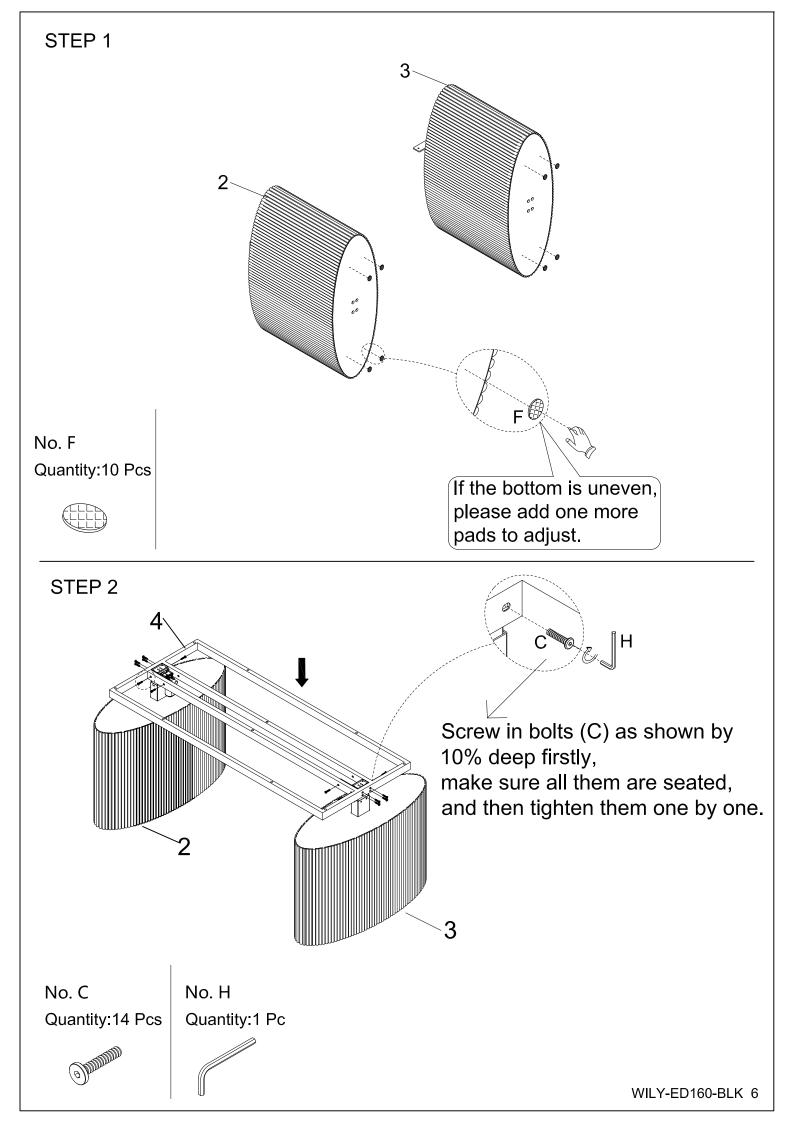


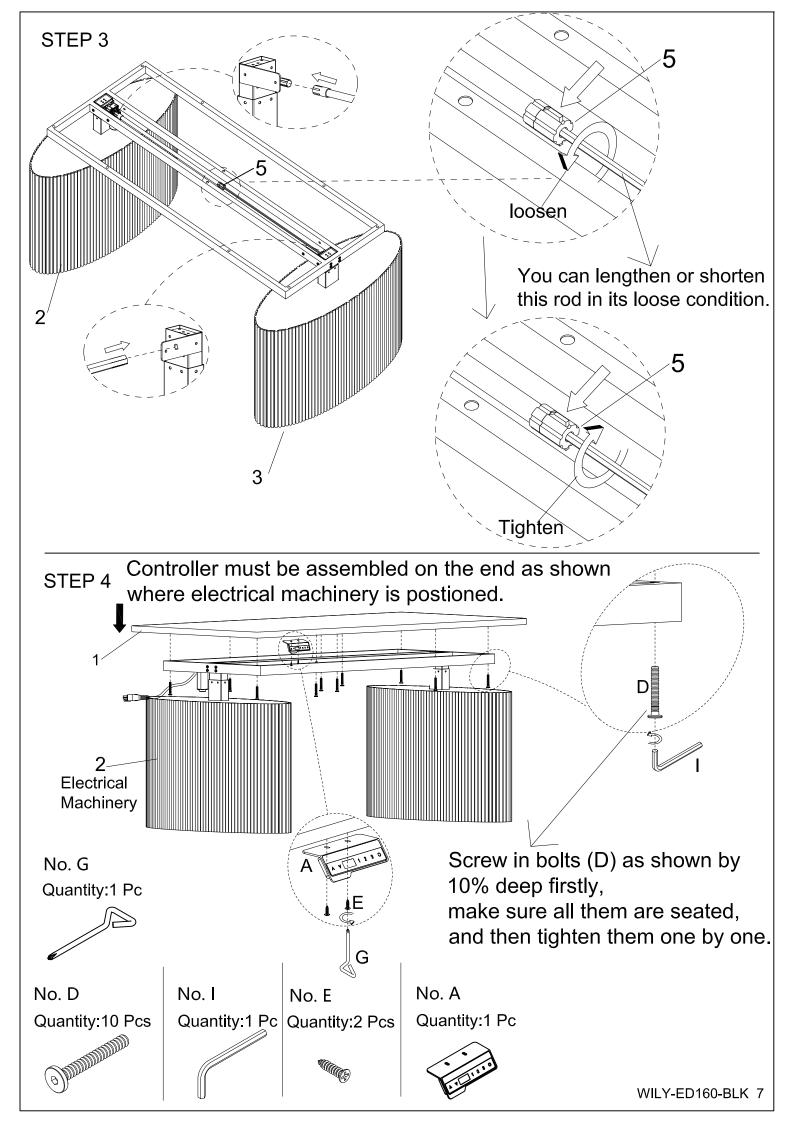


STEP 5 Height recording: This controller can record three heights by numbers 1, 2, and 3 Press down 'Up or Down' key until tabletop goes to the desired height, and then hold down number 1 key until the indicator flickers. Now you are done with the 1st height recording. Repeat this procedure for the 2nd height recording and the 3rd height recording.

Set height running: Press a number, the indicator shows recorded height, and tabletop goes to the recorded height automatically. Abort it by pressing any key in the middle.

Reset to factory value: Hold down RST key for three seconds until the indicator flickers with '---'. Controller goes into reset mode, tabletop will go down to the lowest position and come back by 3-5mm, then done resetting.

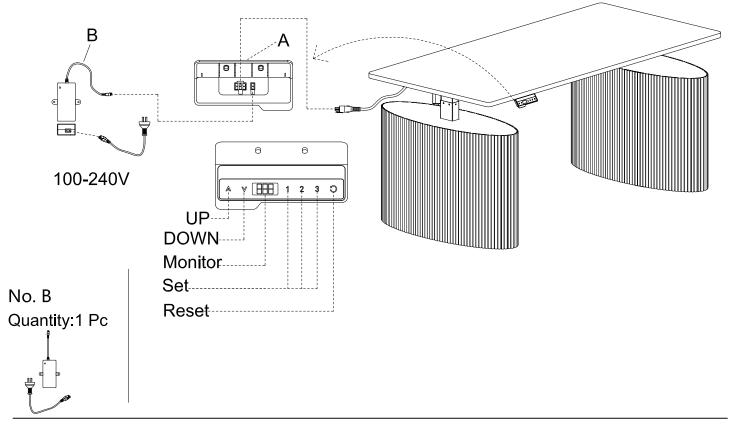

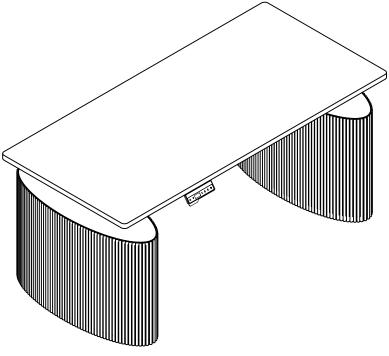

lifely.com.au
Great job. You're done!
Don't forget to share how it looks in
your space and tag us on Instagram. @lifelyhome #homewithlifely!