
Assembly Instructions

May Series

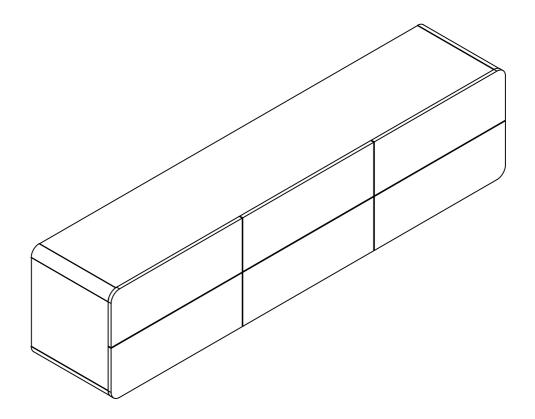

Lifely*

Product Code
MAY-TV200-OAK May TV 200cm
Dimensions(W x D x H)
2000*400*500mm

Important

Please read through instruction carefully Before assembly and keep for future reference.

For our full catalogue of assembly instructions, Visit: lifely.com.au/assembly.

Important Tips and Maintenance





 Keep children and animals away from working area as smaller parts may cause chok-

ing if swallowed.




2.

Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.




 Never use ammonia based cleaning products as it will damage the finish.

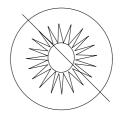


To avoid fading, keep furniture out of direct sunlight.



 Use a soft cloth(dry cloth)when wiping or cleaning surfaces.



Two person are required.

 

Lay a soft matt down to protect the furniture piece before and during assembly. So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea(or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead.E.g. "You're so good looking"

This 16-step assembly should take around 70 minutes with an Allen Key - or 50 minutes with and electric drill. Godspeed.


Designed for everyday

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

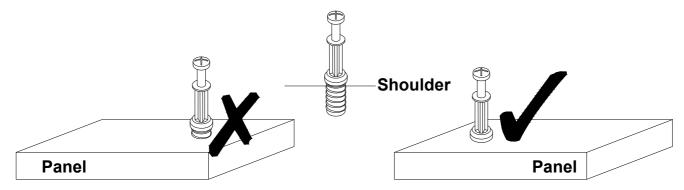

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

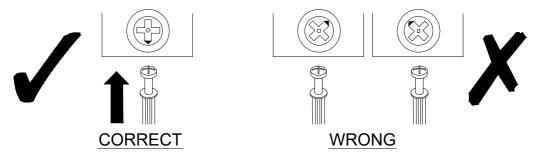

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

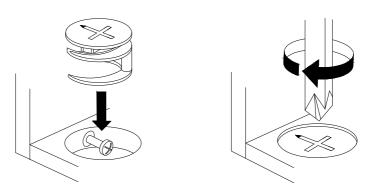

Turn cam lock clockwise to tighten.

Hardware is in box 1

Please check you have all the fittings part or tools are listed in below.
























Before Assembly


Tips Before Your Start

How to separate the drawer slider:

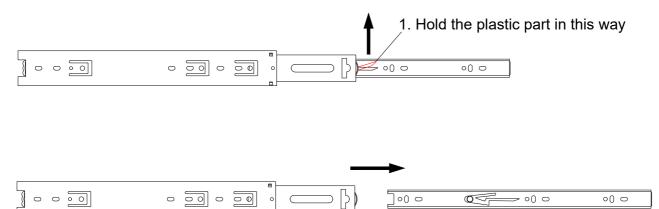


2. Pull out the inner slider for drawer box fixing

Drawer Front Alignment

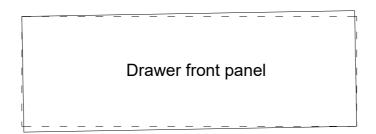


If the drawer front panel is NOT level after being assembled, then...

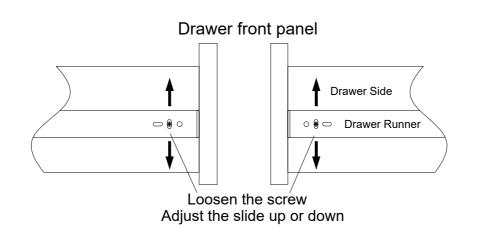


Component Panels & part List Please check you have all the panels are listed below.


1.	TOP PANEL	x 1	CTN 2/2
2.	BOTTOM PANEL	x 1	CTN 2/2
3.	SIDE PANEL	x2	CTN 2/2
4.	DIVISION PANEL	x2	CTN 2/2
5.	CORNER	x4	CTN 1/2
6.	BACK BOARD	·x1	CTN 2/2
7.	BRACE LEG	x2	CTN 2/2
8.	SIDE BRACE LEG	х3	CTN 1/2

9L		DOOR PANEL_UP LEFTx1	CTN 1/2	-
9F	₹.	DOOR PANEL_UP RIGHT x1	CTN 1/2)
10	L.	DOOR PANEL_DOWN LEFT x1	CTN 1/2)
10	R.	DOOR PANEL_DOWN RIGHT x1	CTN 1/2	
11		DOOR PANEL_MIDDLE x2	CTN 1/2	
12	L.	DRAWER PANEL_LEFT x6	CTN 1/2	
12	R.	DRAWER PANEL_ RIGHT x6	CTN 1/2	
13	3.	DRAWER BACK PANEL x6	CTN 1/2)
14	١.	DRAWER BOTTOM PANEL x6	CTN 1/2)
		POWER DRIVER x1	CTN 1/2)

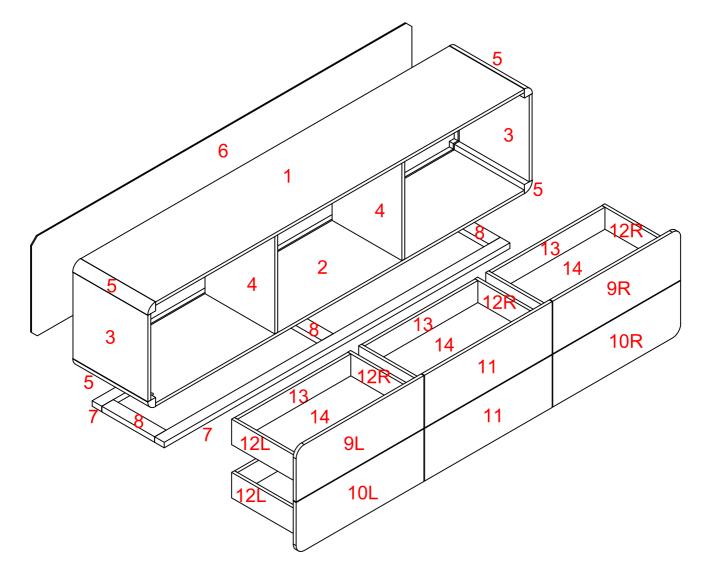

STEP 1

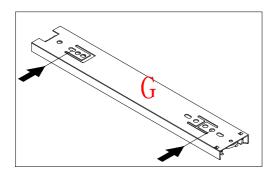

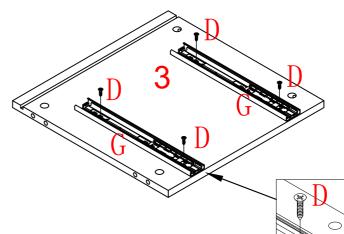

Note:


This is the drawer rail back side for holes position reference only.

No. D Quantity:8 Pcs Screw 3.5*15mm






STEP 2

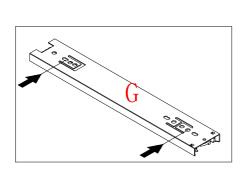


Note:

This is the drawer rail back side for holes position reference only.

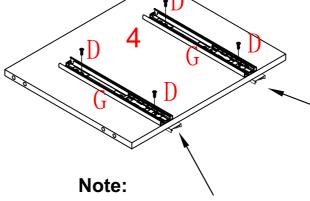

 
Please be noted the Part G drawer slider is fixed on the both sides of the Part 4.





No. D Quantity:16 Pcs Screw 3.5*15mm







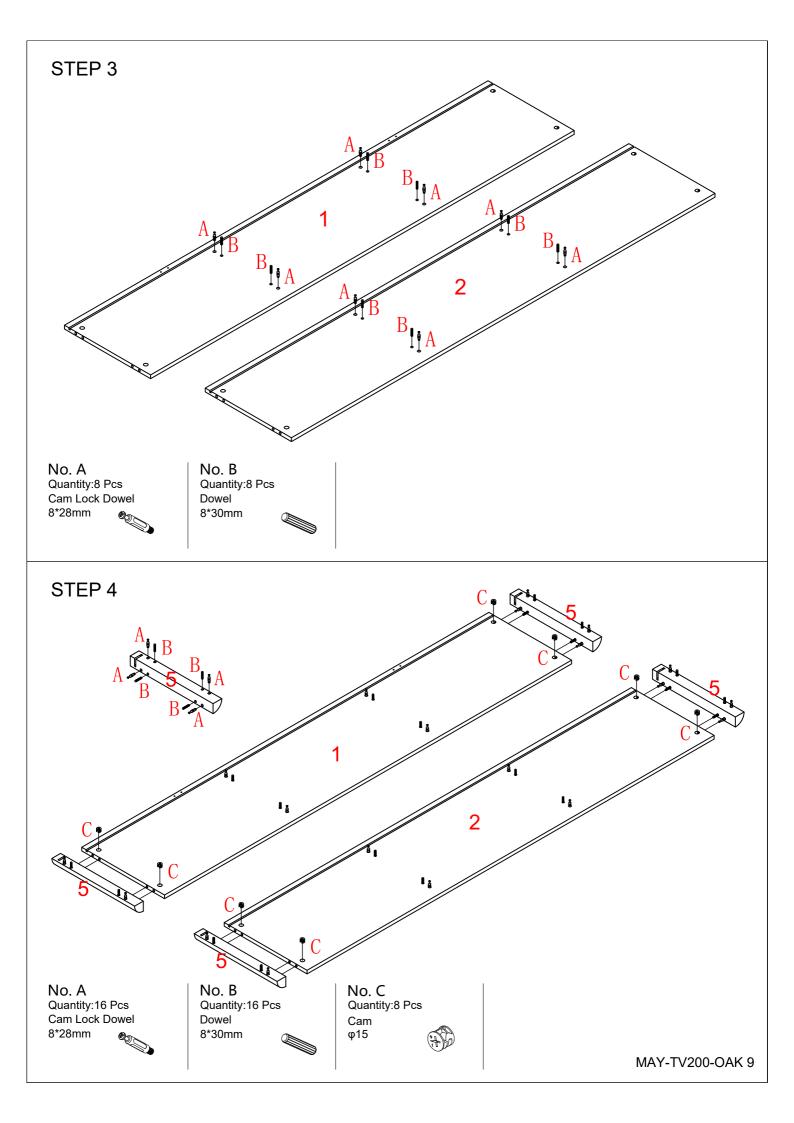

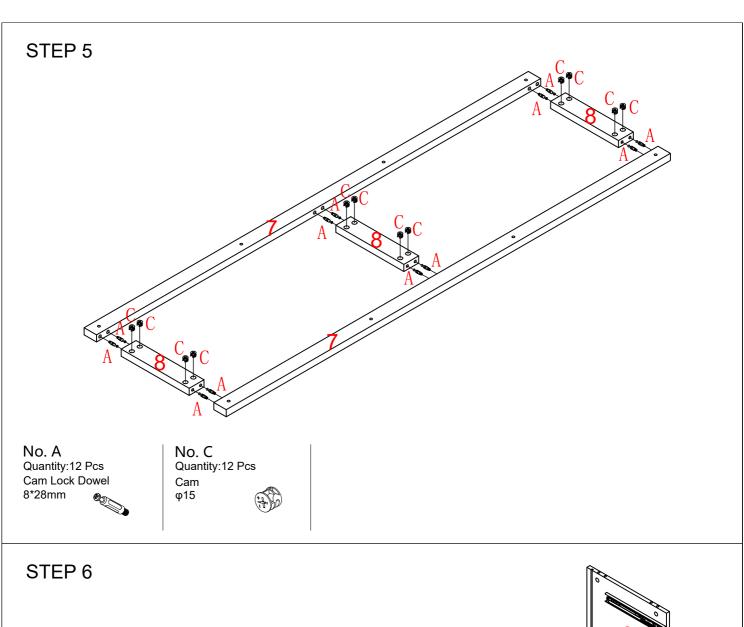

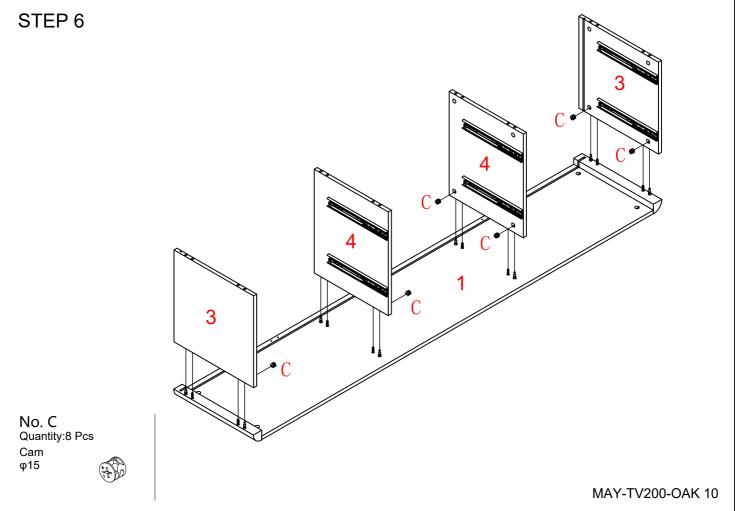

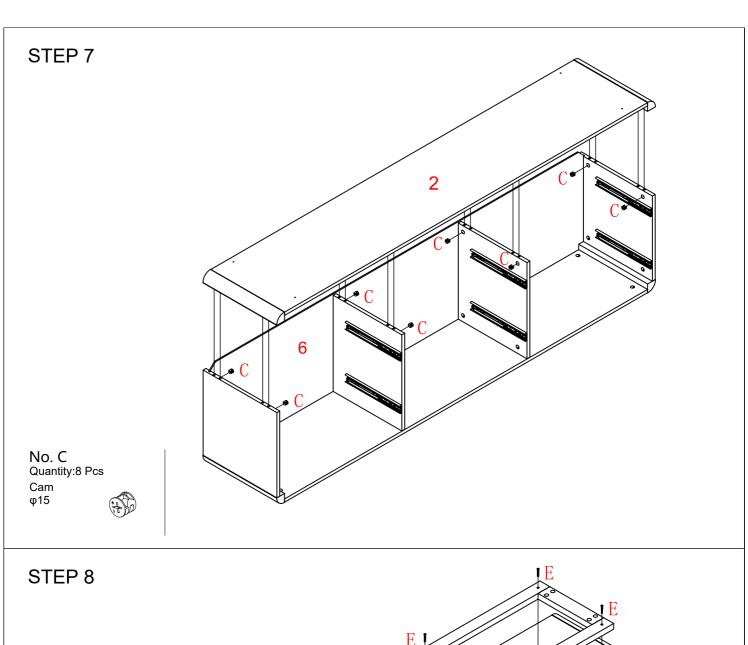

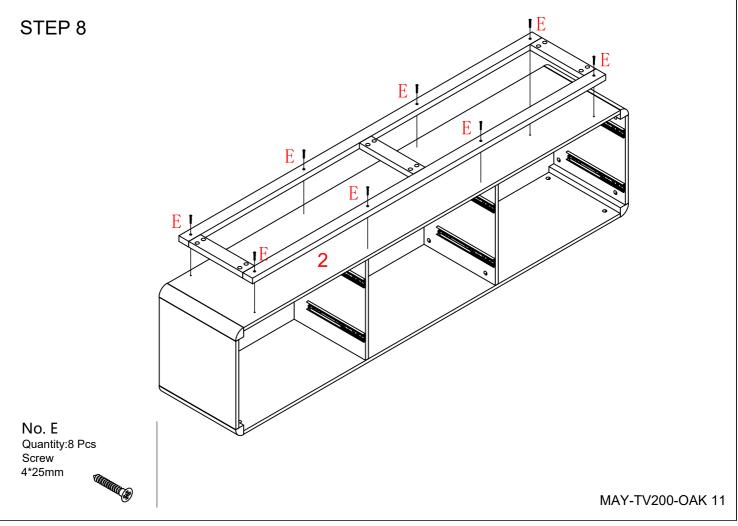



STEP 9 No. A Quantity:24 Pcs Cam Lock Dowel 8*28mm


STEP 10

No. F Quantity:24 Pcs

Screw 4*35mm

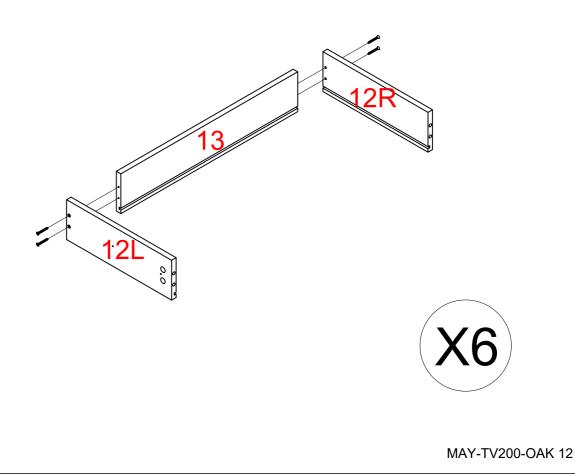


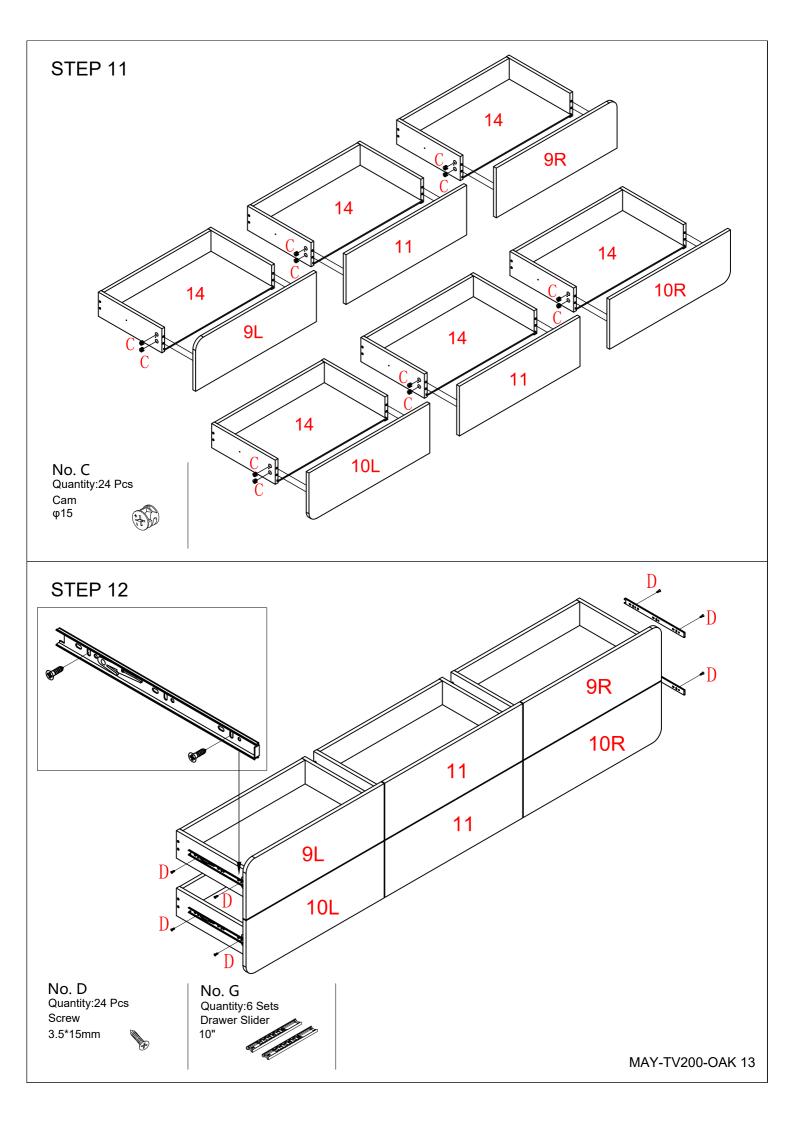

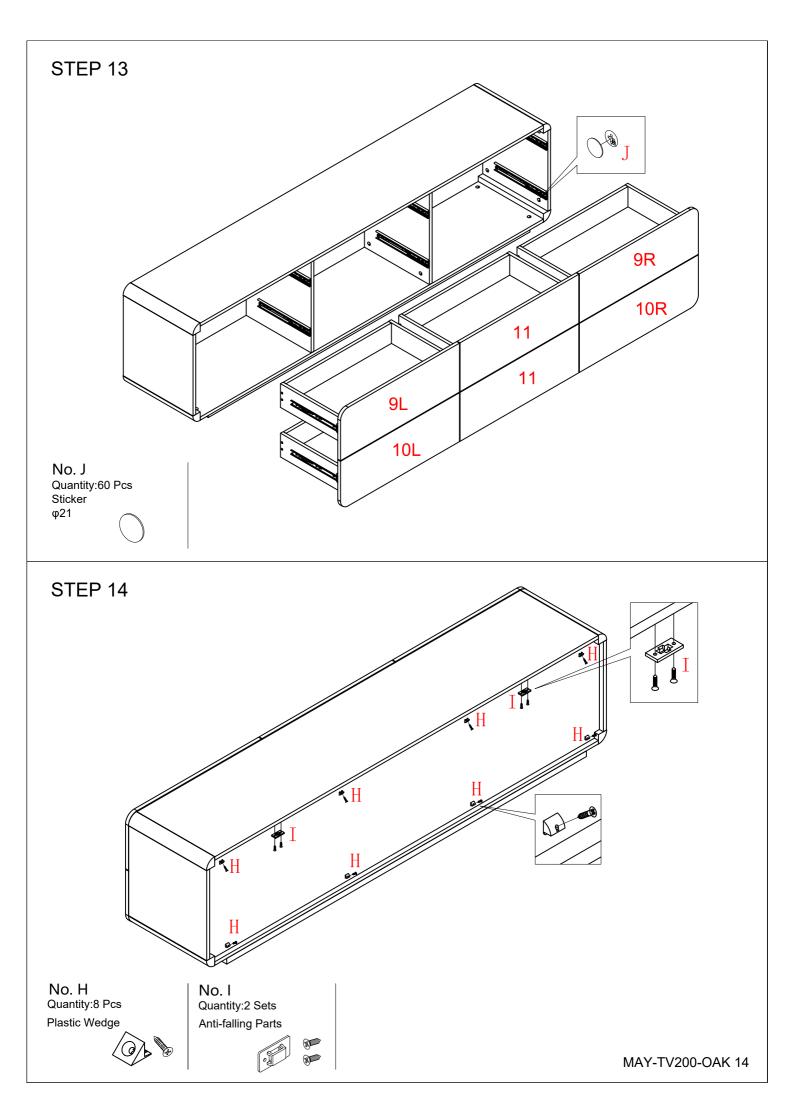

STEP 15



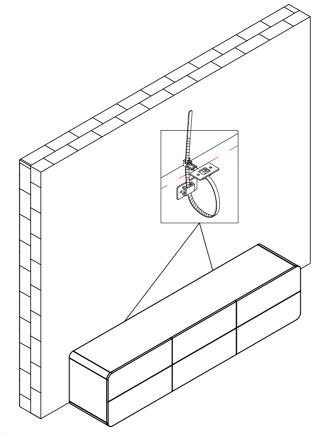

No. I Quantity:2 Sets Anti-falling Parts




Note:

Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.

MAY-TV200-OAK 15





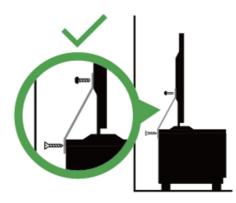

Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device.

This is a permanent label! Do not remove!

Great job. You're done!

Don't forget to share how it looks in your space and tag us on Instagram. @lifelyhome#homewithlifely!