
Assembly Instructions

Tate Series

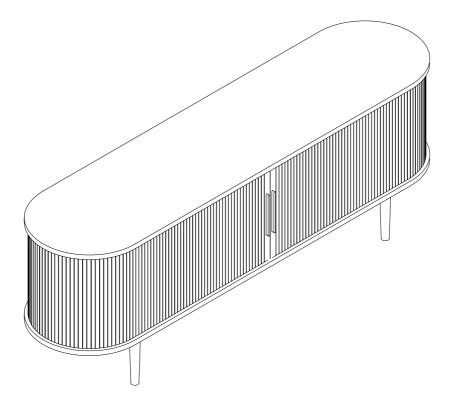

Lifely*

Product Code
TATE-TV-BLACK TV STAND
TATE-TV-NATURAL TV STAND
Dimensions(W x D x H)
1600x400x580mm

Important

Please read through instruction carefully Before assembly and keep for future reference.

For our full catalogue of assembly instructions, Visit: lifely.com.au/assembly.

Important Tips and Maintenance





1

Keep children and animals away from working area as smaller parts may cause choking if swallowed.



 
2.

Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.



3.

Never use ammonia based cleaning products as it will damage the finish.




4.

To avoid fading, keep furniture out of direct sunlight.



5.

 Use a soft cloth (dry cloth) when wiping or cleaning surfaces.



6.

Two person are required.



7.

Lay a soft matt down to protect the furniture piece before and during assembly. So your relationship is strong.But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful.We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time.If you feel a passive aggressive remark coming on, try a compliment instead.E.g. "You' re so good looking"

This 13-step assembly should take around 70 minutes with an Allen Key - or 50 minutes with and electric drill. Godspeed.


Designed for everyday

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

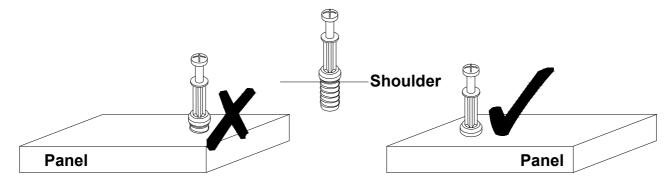

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

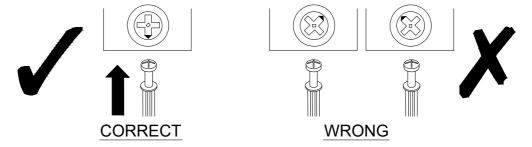

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.


Cam lock should be inserted before quickfit.

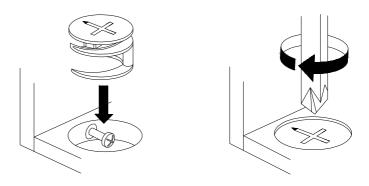

Turn cam lock clockwise to tighten.

Hardware is in box 1

 Please check you have all the fittings part or tools are listed in below.



No. B Quantity:2Pcs Full Thread Screw M6*35mm

No. C Quantity:10Pcs Cam φ15

Full M6*

No. D Quantity:2Pcs Full Thread Screw M6*55mm No. E Quantity:12Pcs Screw M6*50mm

No. F Quantity:1Pc Allen Key 4#

No. G Quantity:6Pcs Assembly Assistor No. H Quantity:3Pcs Dowel 8*30mm No. I Quantity:2Pcs Screw M6*35mm No. J Quantity:2Pcs Handle 200*20mm

No. K Quantity:4Pcs Screw 4*14

No. L Quantity:14Pcs Sticker No. M Quantity:4Pcs Foot Pad φ20







Component Panels & Part List

Please check you have all the panels are listed below.

- 1. Top Panel x1 CTN 2/2
- 2. Bottom Panel x1 CTN 2/2
- 3. Shelf x1 CTN 2/2
- 4. Back Panel x1 CTN 1/2
- 5. Division Panel_up x1 CTN 1/2
- 6. Division Panel_down x1 CTN 1/2
- 7. Supporting Pillar x4 CTN 1/2
- 8. Leg x4 CTN 1/2
- 9L. Tambor Door_left x1 CTN 1/2
- 9R. Tambor Door_right x1 CTN 1/2

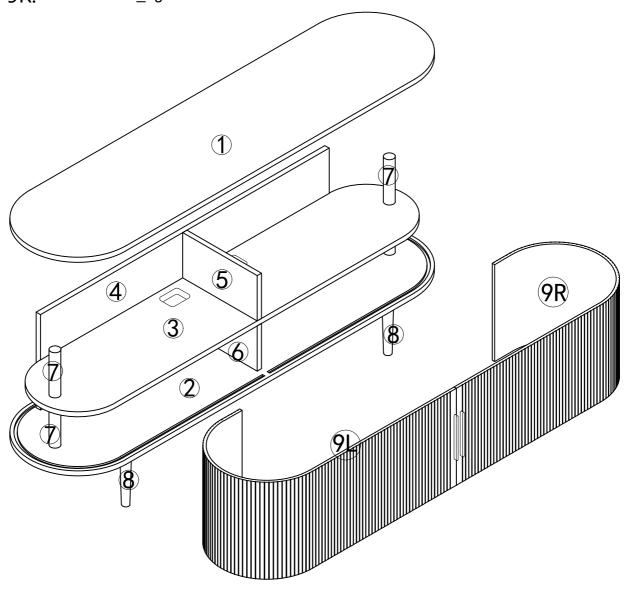

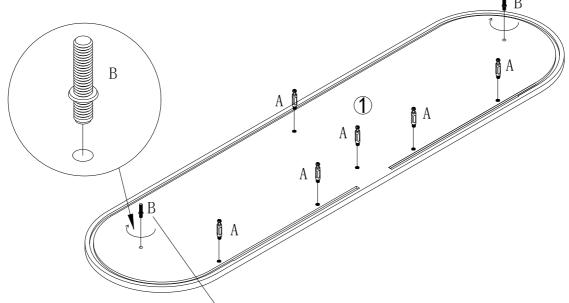


No. A
Quantity:6 Pcs
Cam Lock Dowel
8*28 mm

No. B
Quantity:2 Pcs
Full Thread Screw
M6*35 mm


Please note the screw B have different thread length at both side, ensure the shorter thread side towards down as drawing shows.


STEP 2

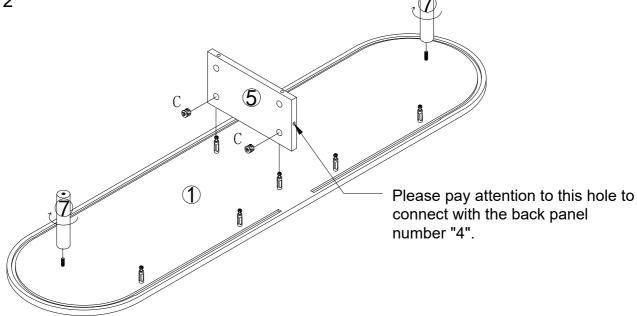


No. C Quantity:2 PcS Cam




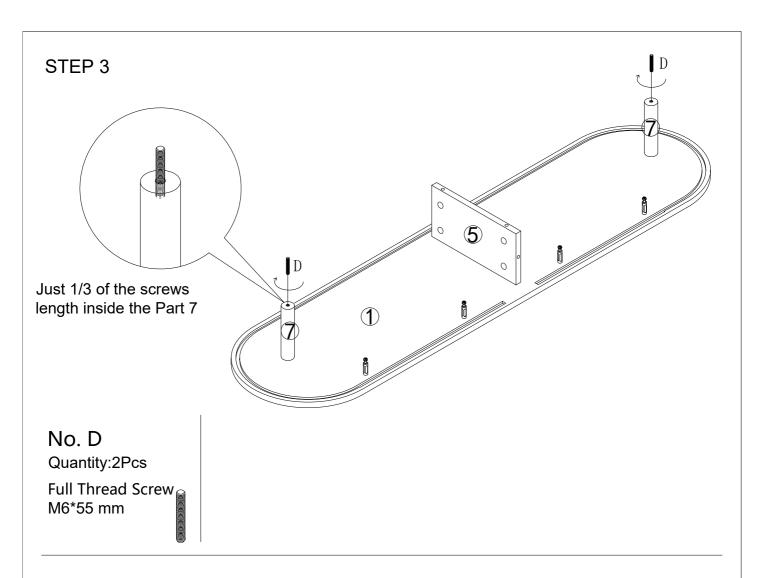

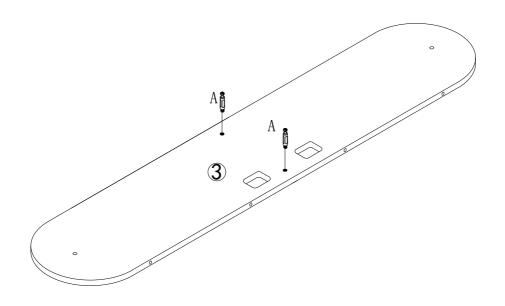

No. A
Quantity:2 Pcs
Cam Lock Dowel
8*28 mm

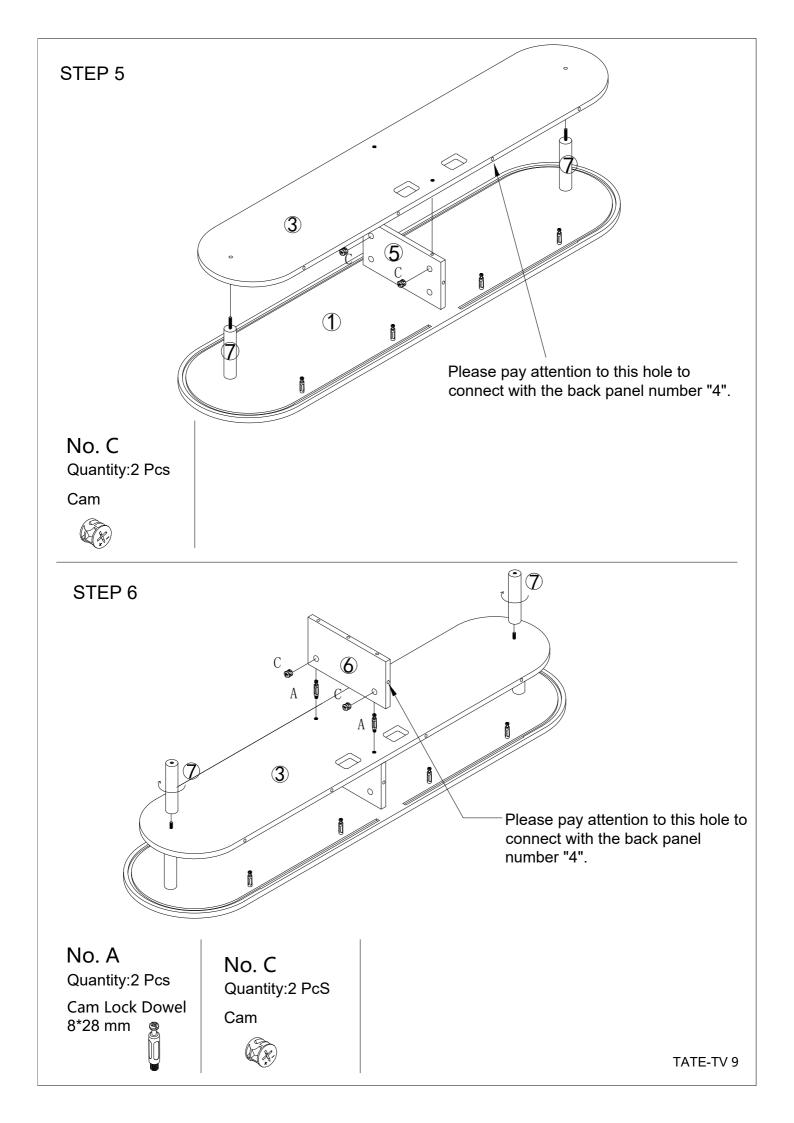


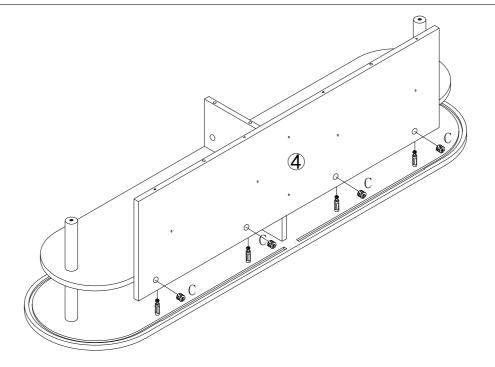

No. C Quantity:4 Pcs Cam



STEP 8

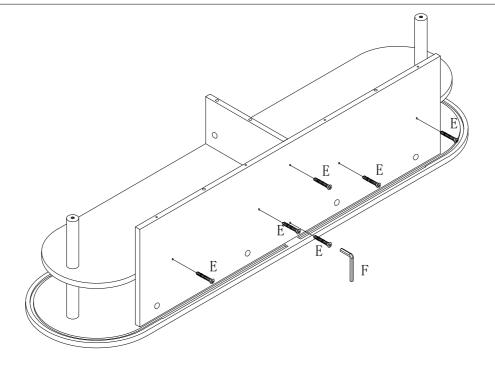



No. E Quantity:6 Pcs Screw M6*50mm



No. F Quantity:1 Pc Allen Key 4#

TATE-TV 10

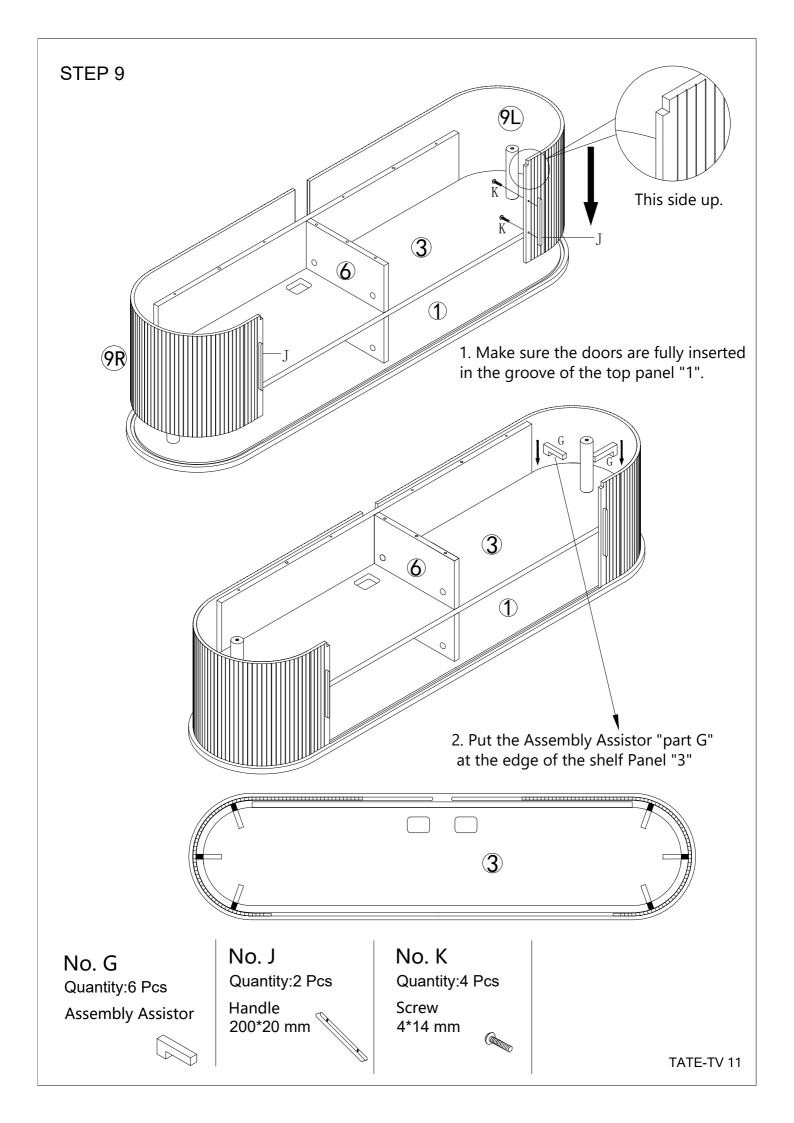

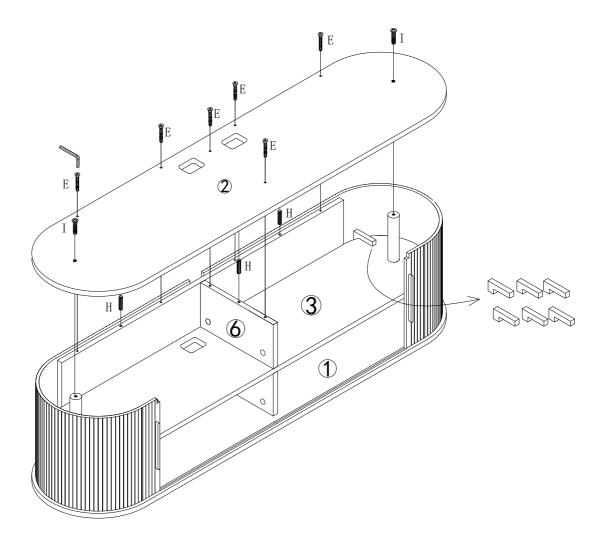


3. Make sure the doors are fully inserted in the groove of the top and bottom panels, then tight the screw I and E.
4. After finish fixing the tambor doors, please remove the Part G "Assembly Assistor"


No. E Quantity:6 Pcs Screw M6*50mm



No. H Quantity:3 Pcs Dowel 8*30mm


No. I Quantity:2 Pcs Screw M6*35mm

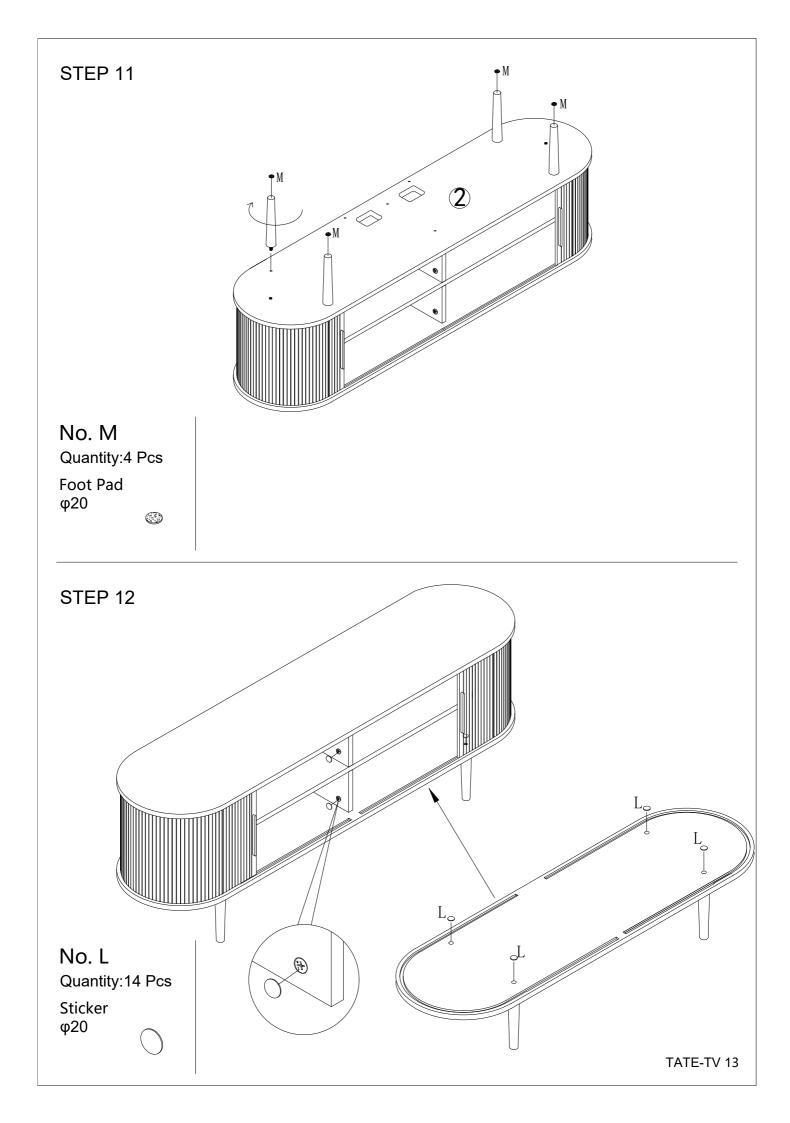

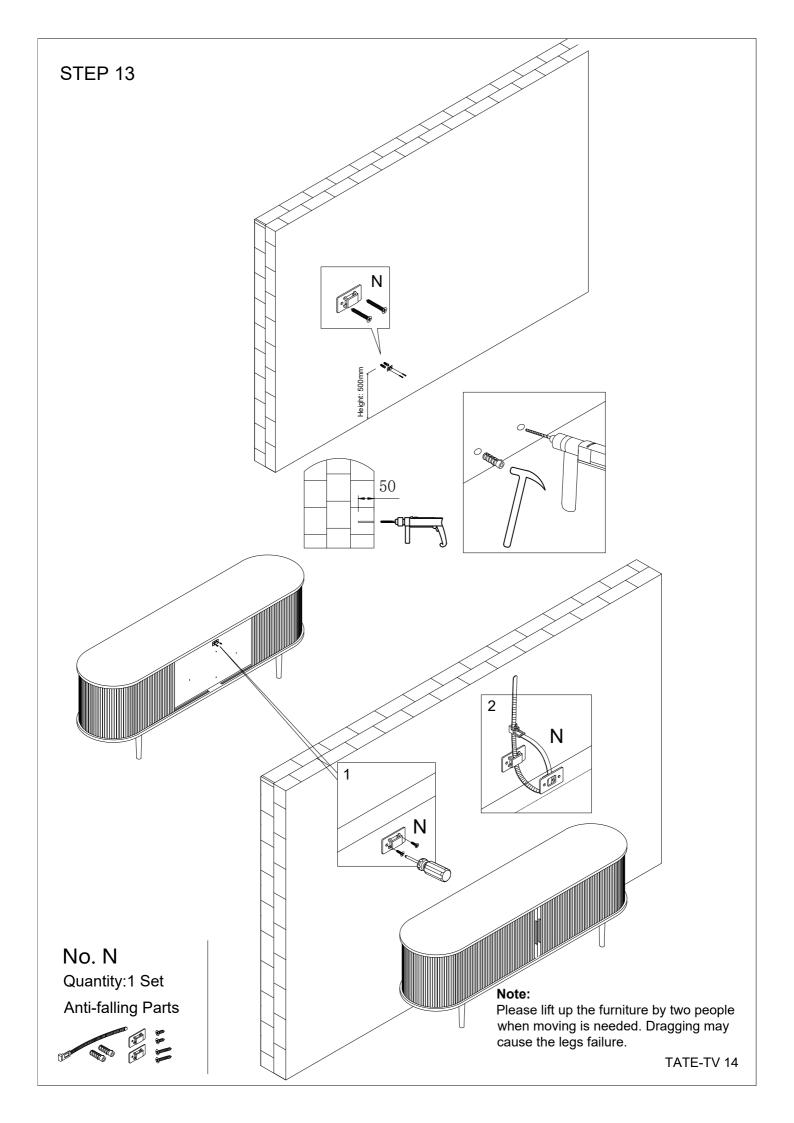





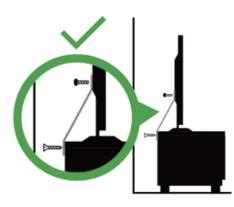

Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device.

This is a permanent label! Do not remove!

Great job. You're done!

Don't forget to share how it looks in your space and tag us on Instagram. @lifelyhome#homewithlifely!