
Assembly Instructions

Trudy Series

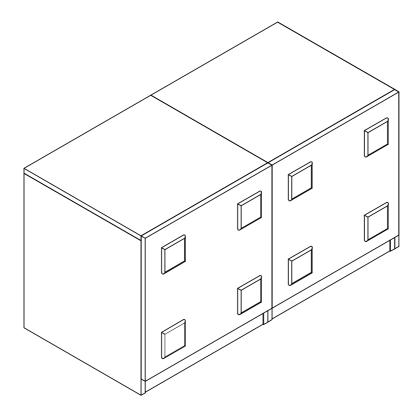

Lifely*

Product Code TDY-TV-180 Trudy TV Unit

Dimensions(W x D x H) 900*430*500mm

Important

Please read through instruction carefully Before assembly and keep for future reference.

For our full catalogue of assembly instructions, Visit: lifely.com.au/assembly.

Important Tips and Maintenance





1. Keep children and animals away from working area as smaller parts may cause choking if swallowed.

 


Use a soft or damp cloth(dry cloth)when wiping or cleaning surfaces.



2.

Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.




Two person are required.



Never use ammonia based cleaning products as it will damage the finish.



 Lay a soft matt down to protect the furniture piece before and



To avoid fading, keep furniture out of direct sunlight.

4.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly sressful. We recommend meditating quietly, pouring yourself a herbal tea(or slightly less herbal wine) and tackling things one step at a time.If you feel a passive aggressive remark coming on, try a compliment instead.E.g. "You're so good looking"

This 12-step assembly should take around 75 minutes with an Allen Key - or 60 minutes with and electric drill. Godspeed.


Designed for everyday

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

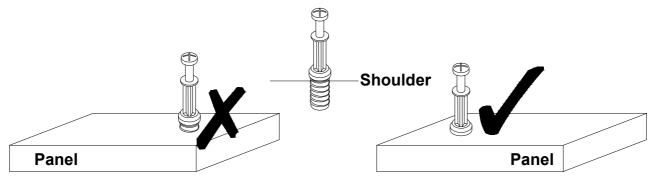

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

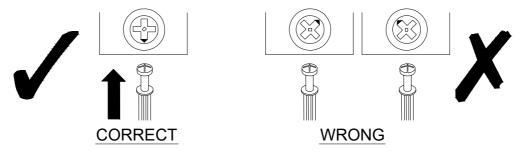


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

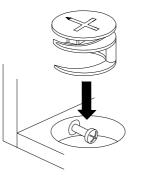

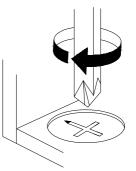

Turn cam lock clockwise to tighten.

Component Hardware

Please check you have all the fittings part or tools are listed in below.

No. A Quantity:36Pcs Cam Lock Dowel 8*28mm

No. F Quantity:8Pcs Screw 4*14mm No. B Quantity:24Pcs Dowel 8*30mm

No. G Quantity:4Pcs Hinge No. C Quantity:36Pcs Cam ϕ 15

No. H Quantity:1 Set Anti-falling Parts




No. D Quantity:8Pcs Shelf Support No. E Quantity:16Pcs Screw 4*16mm


TDY-TV-180-5


Component Panels & part List


Please check you have all the panels are listed below.


- 1. TOP PANEL _____ x2
- 2L. SIDE PANEL_LEFT _____ x2
- 2R. SIDE PANEL_RIGHT x2
- 3. BOTTOM PANEL x2
- 4. FRONT BRACE _____ x2
- 5. BACK PANEL _____ x2
- 6. BACK PANEL _____ x2
- 7. SHELF _____ x2
- 8. DOOR PANEL _____ x2

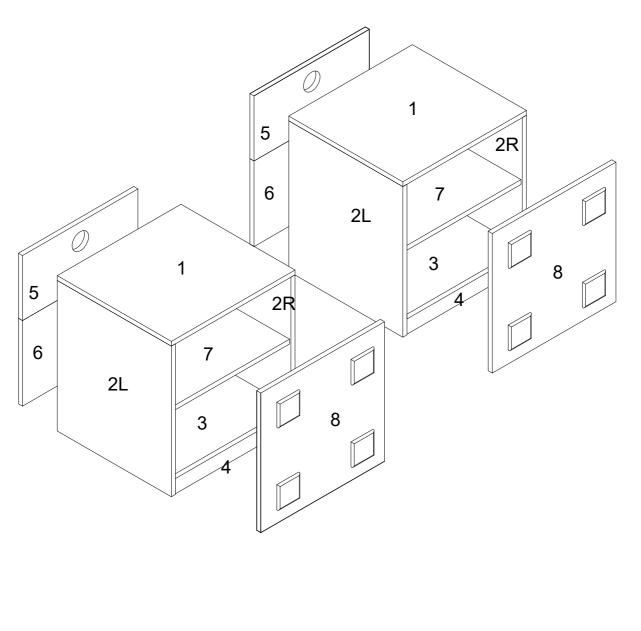


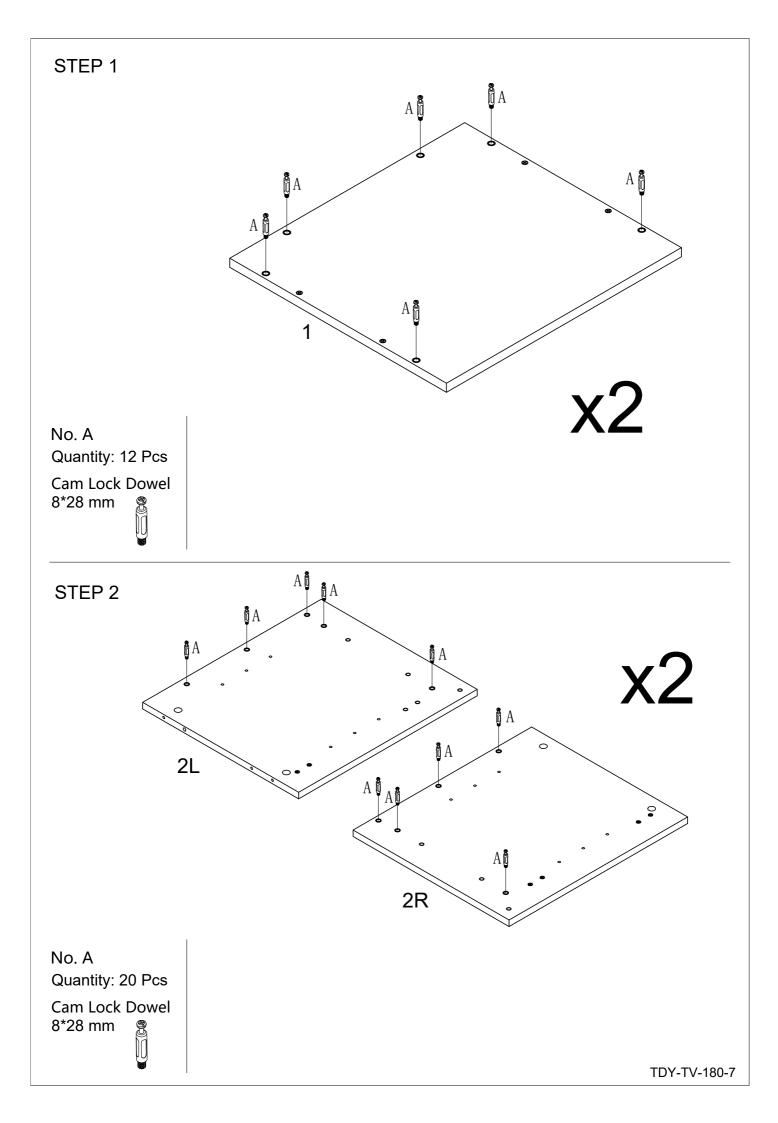


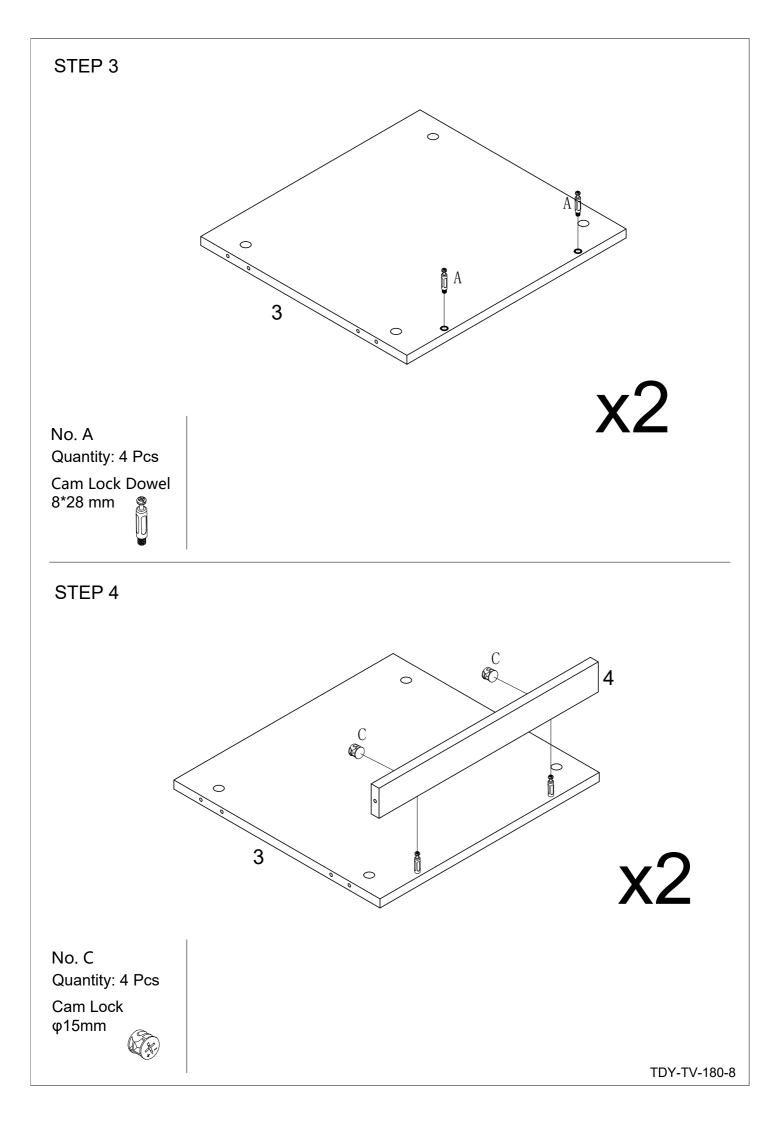


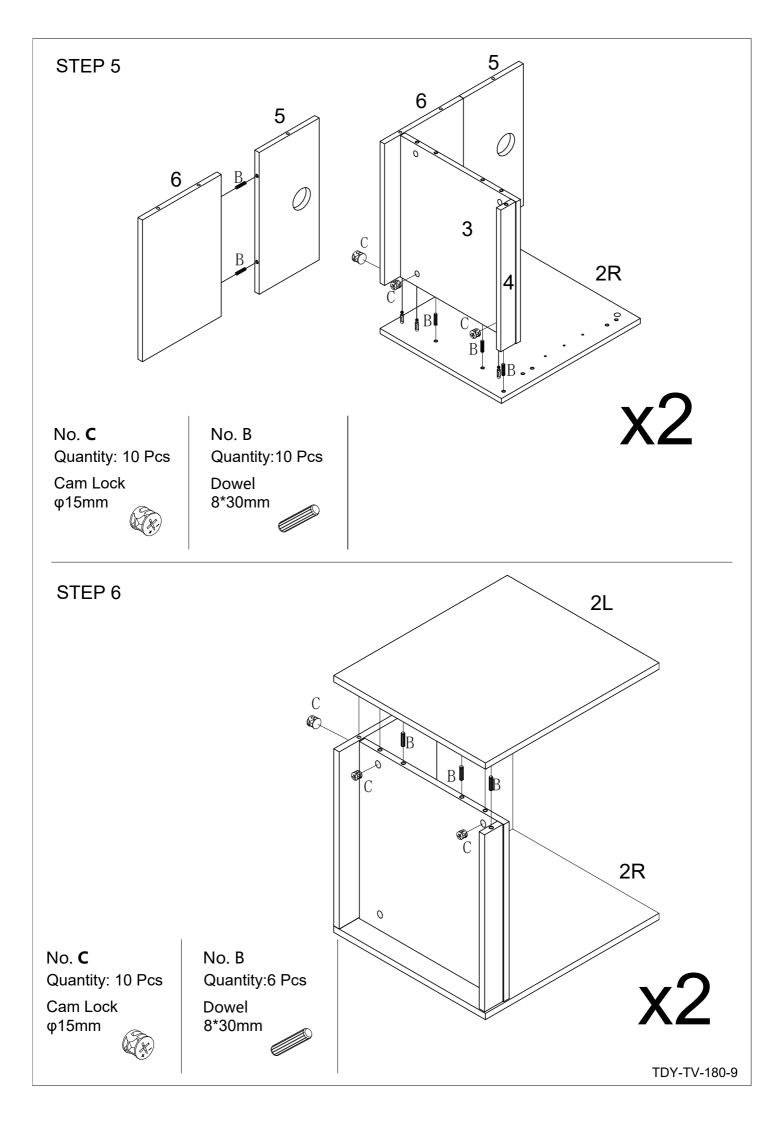

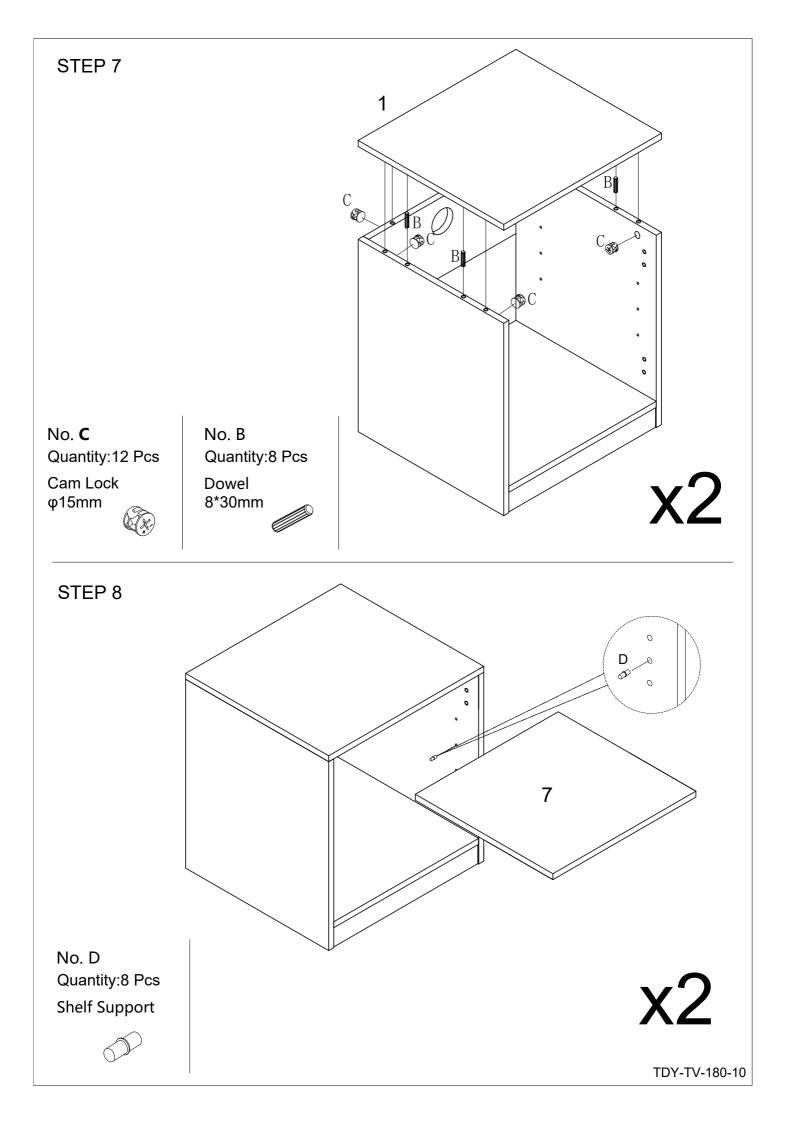

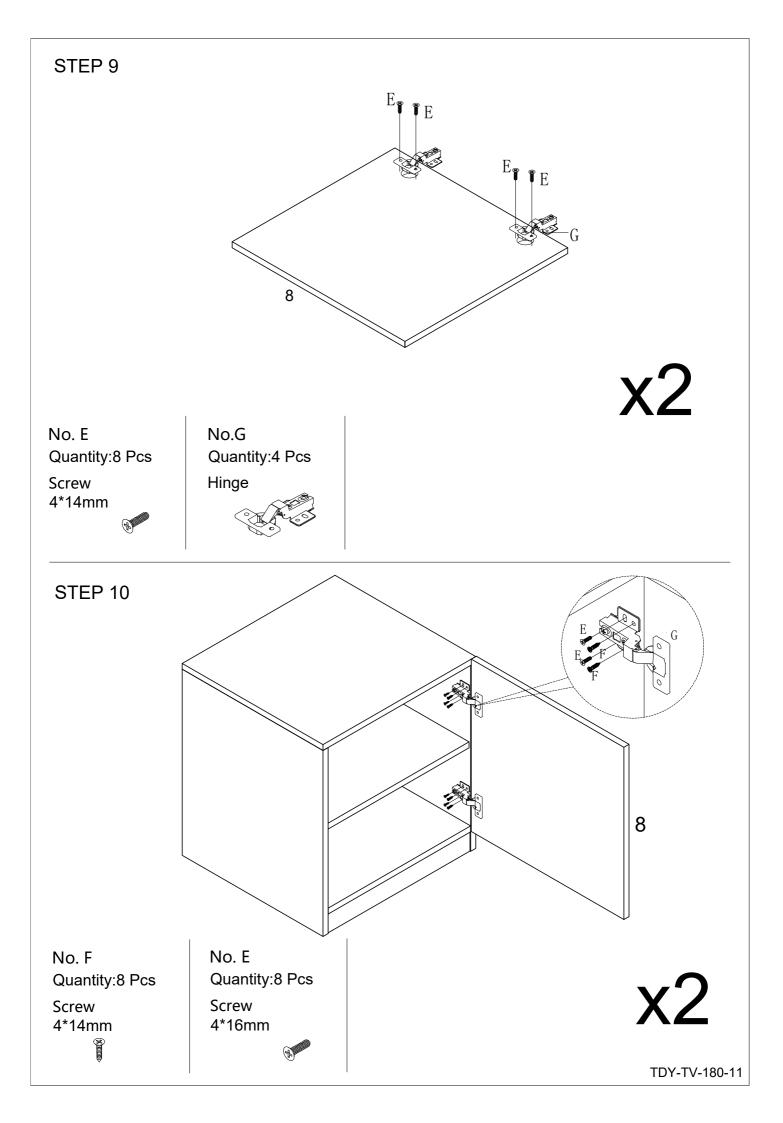

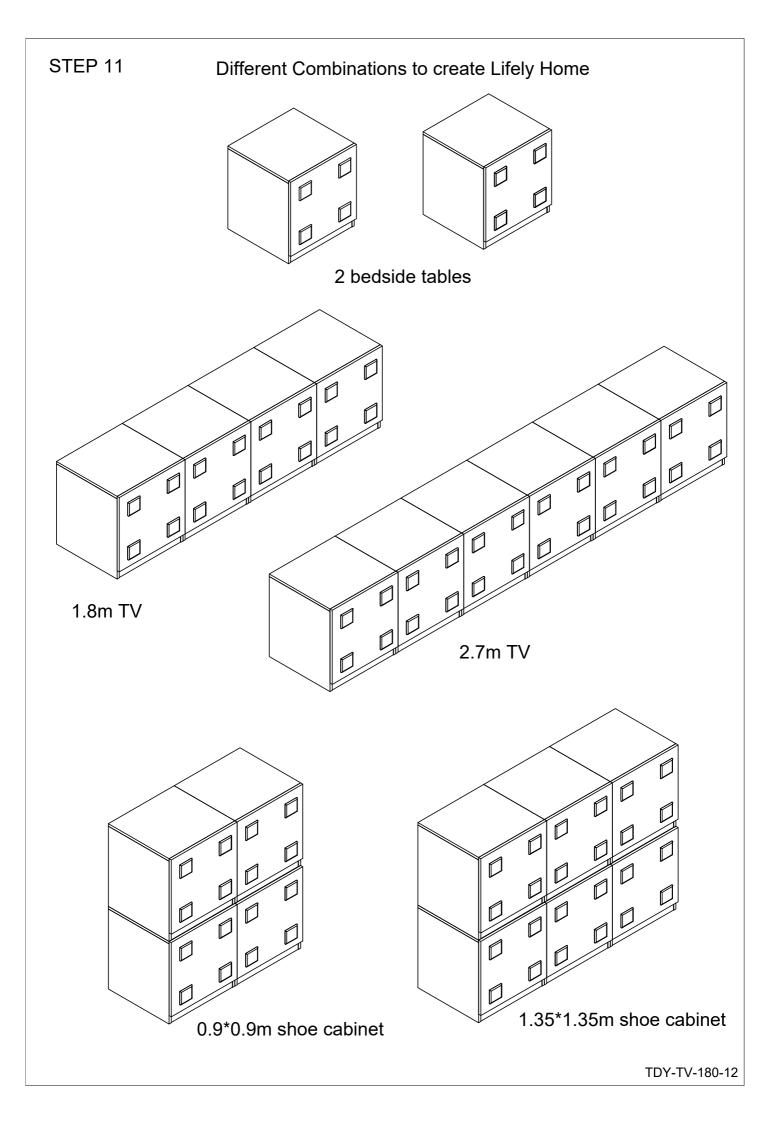

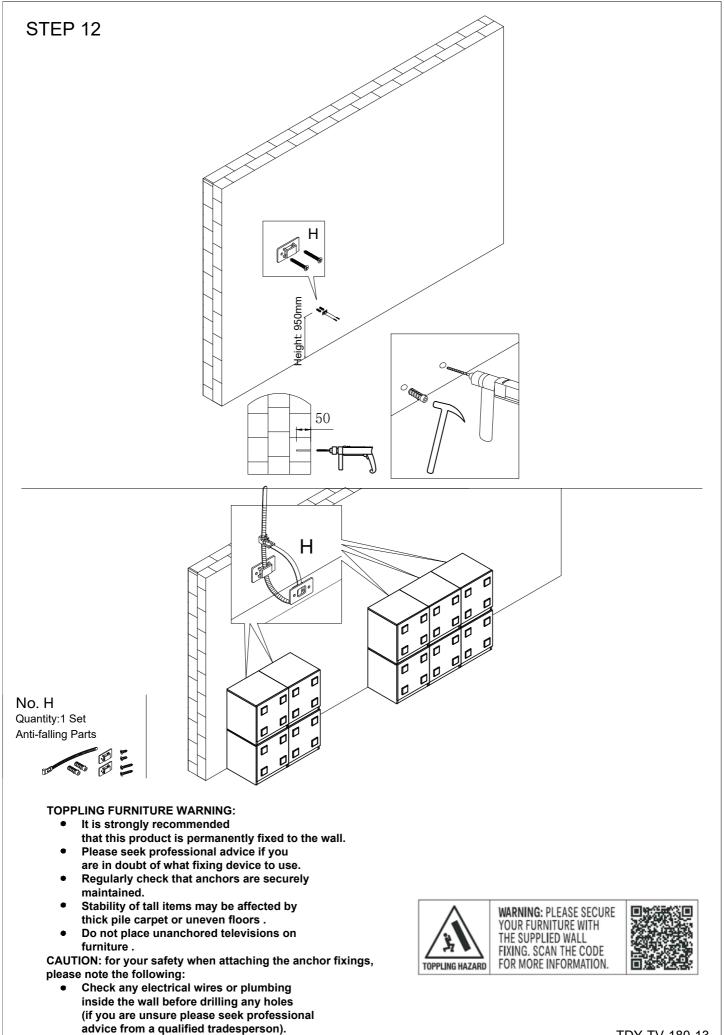

Great job. You're done!

Don't forget to share how it looks in your space and tag us on Instagram. @lifelyhome#homewithlifely!