


Assembly Instructions

Tate Series

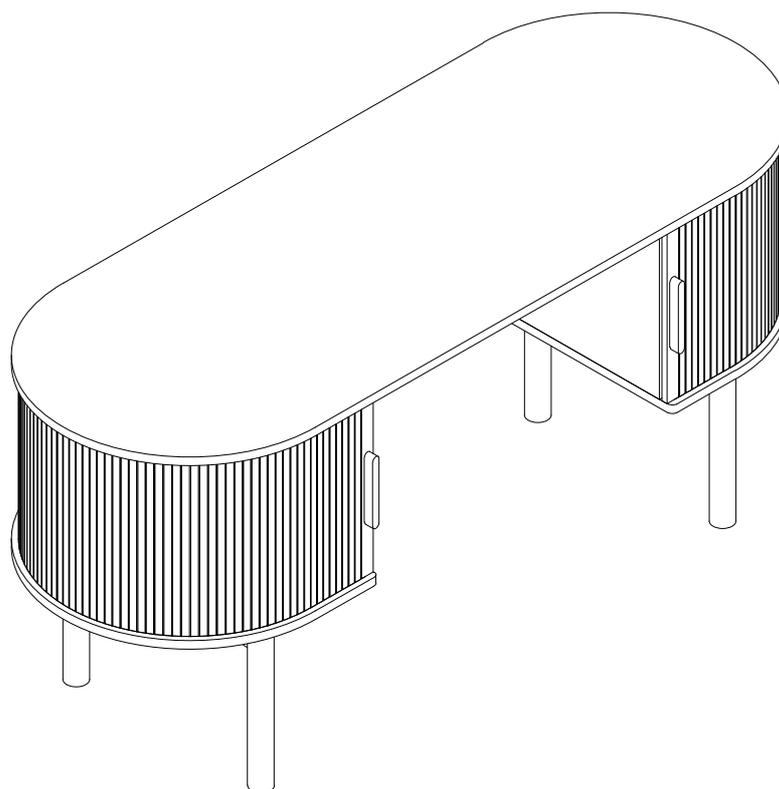

Lifely*

Product Code

TATE-CD160-OAK Tate Curved Desk

Dimensions(W x D x H)

1600x600x760mm

Important


Please read through instruction carefully
Before assembly and keep for future reference.

For our full catalogue of assembly instructions,
Visit: lifely.com.au/assembly.

Important Tips and Maintenance




1. Keep children and animals away from working area as smaller parts may cause choking if swallowed.

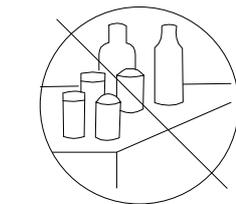


2. Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.




3. Never use ammonia based cleaning products as it will damage the finish.

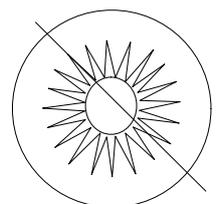


4. To avoid fading, keep furniture out of direct sunlight.

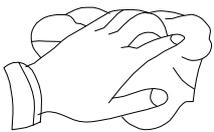

5. Use a soft or damp cloth (dry cloth) when wiping or cleaning surfaces.

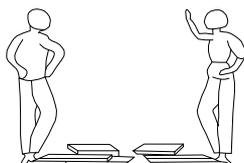

6. Two person are required.

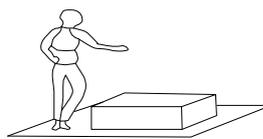

7. Lay a soft matt down to protect the furniture piece before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead. E.g. "You're so good looking".

This 14-step assembly should take around 1.5 hours with an Allen Key - or 60 minutes with an electric drill. Godspeed.


Designed for everyday

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

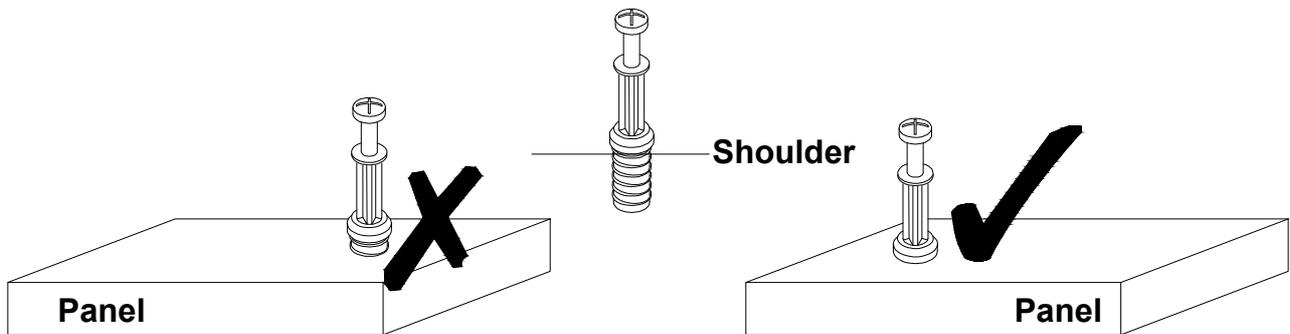

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

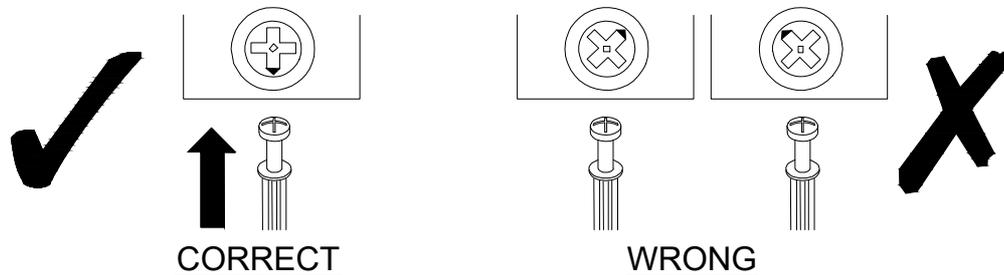

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

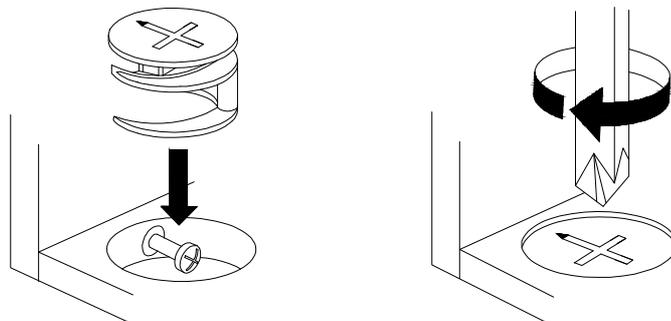

Turn cam lock clockwise to tighten.

Component Hardware

Please check you have all the fittings
part or tools are listed in below.

No. A
Quantity:38Pcs
Cam Lock Dowel
8*28mm



No. B
Quantity:15Pcs
Dowel
8*30mm



No. C
Quantity:38Pcs
Cam
φ15



No. D
Quantity:38 Pcs
Sticker
φ20



No. E
Quantity:25Pcs
Screw
M6*50mm



No. F
Quantity: 2 Pc
Allen Key
4#



No. G
Quantity:2Pcs
Metal Plate
60x38



No. H
Quantity: 8 Pcs
Screw
4*16mm



No. I
Quantity:12Pcs
Screw
M6*40mm



No. J
Quantity:2Pcs
Handle
200*20mm



No. K
Quantity:4Pcs
Screw
4*14



No. L
Quantity:4Pcs
Foot Pad
φ20




No. M
Quantity:1Set
Anti-falling Parts




Component Panels & part List

Please check you have all the panels are listed below.

- | | | | | | | | | | |
|-----|----------------------|-------|----|---------|------|-------------------|-------|----|---------|
| 1. | Top Panel | ————— | x1 | CTN 2/2 | 6L. | Left Shelf | ————— | x1 | CTN 2/2 |
| 2L. | Left Bottom Panel | ————— | x1 | CTN 2/2 | 6R. | Right Shelf | ————— | x1 | CTN 2/2 |
| 2R. | Right Bottom Panel | ————— | x1 | CTN 2/2 | 7. | Front Supporter | ————— | x1 | CTN 2/2 |
| 3L. | Left Division Panel | ————— | x1 | CTN 2/2 | 8. | Back Panel | ————— | x1 | CTN 1/2 |
| 3R. | Right Division Panel | ————— | x1 | CTN 2/2 | 9. | Back Bottom Panel | ————— | x1 | CTN 2/2 |
| 4. | Front Back Panel | ————— | x2 | CTN 2/2 | 10. | Legs | ————— | x2 | CTN 1/2 |
| 5L. | Left Panel | ————— | x1 | CTN 2/2 | 11L. | Tambor Door_left | ————— | x1 | CTN 1/2 |
| 5R. | Right Panel | ————— | x1 | CTN 2/2 | 11R. | Tambor Door_right | ————— | x1 | CTN 1/2 |

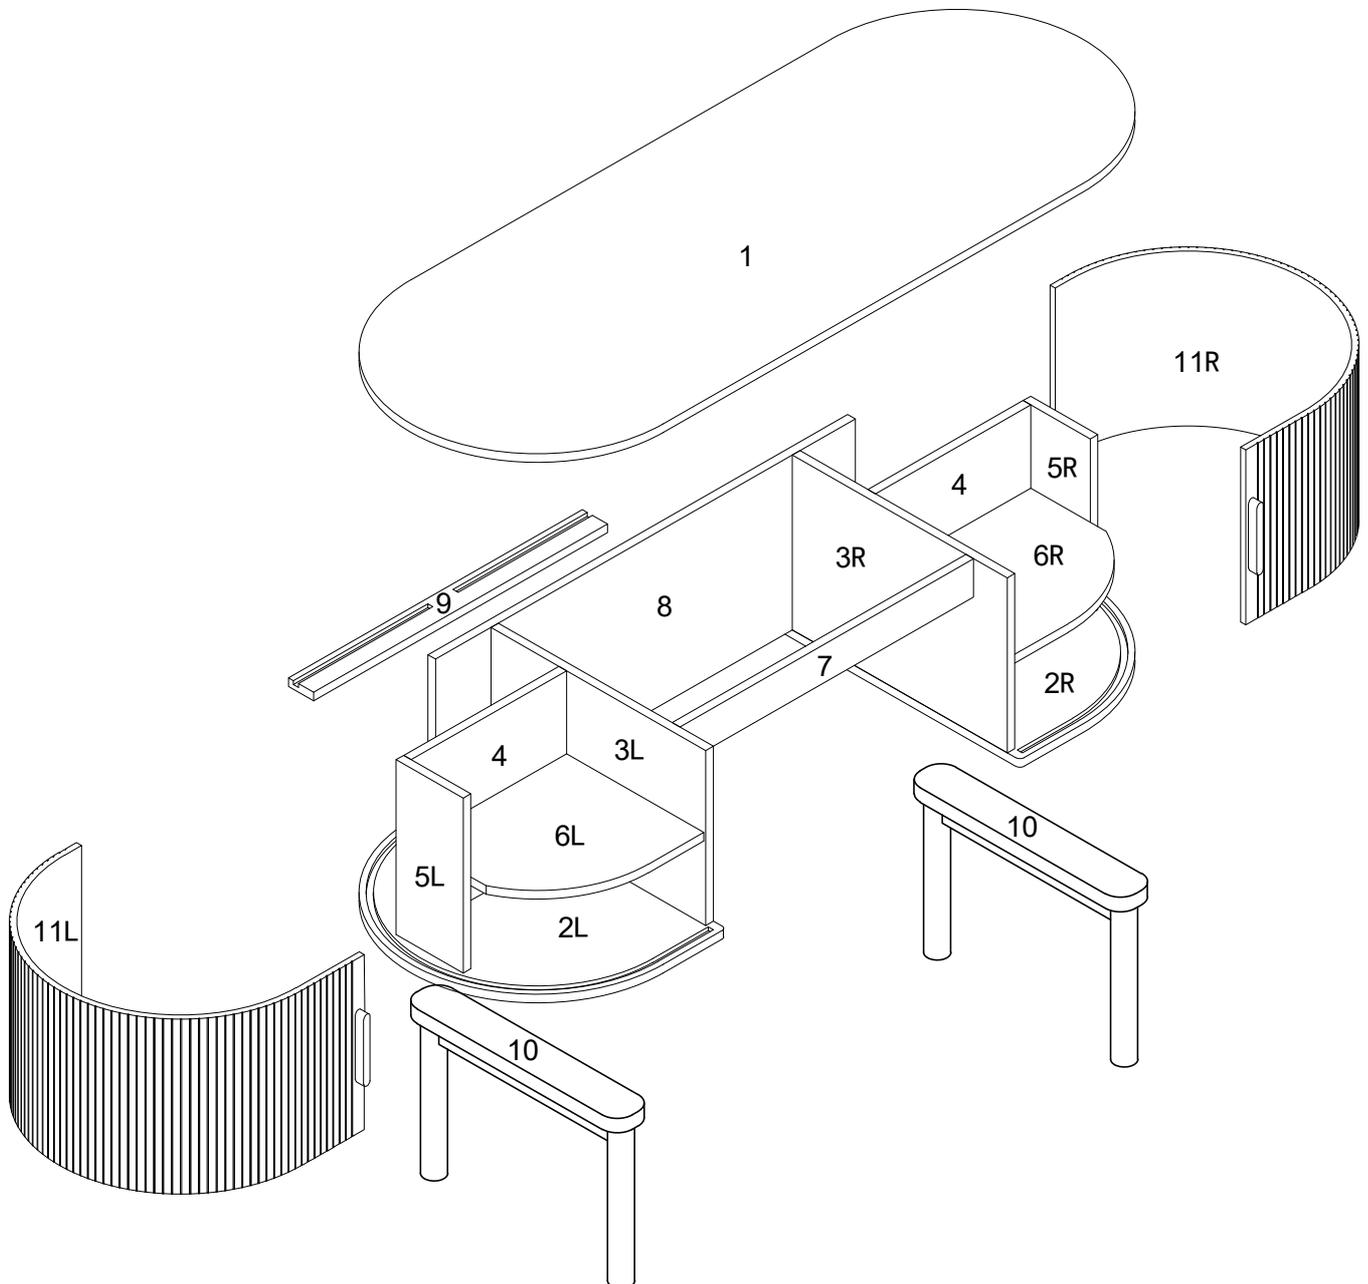

STEP 1

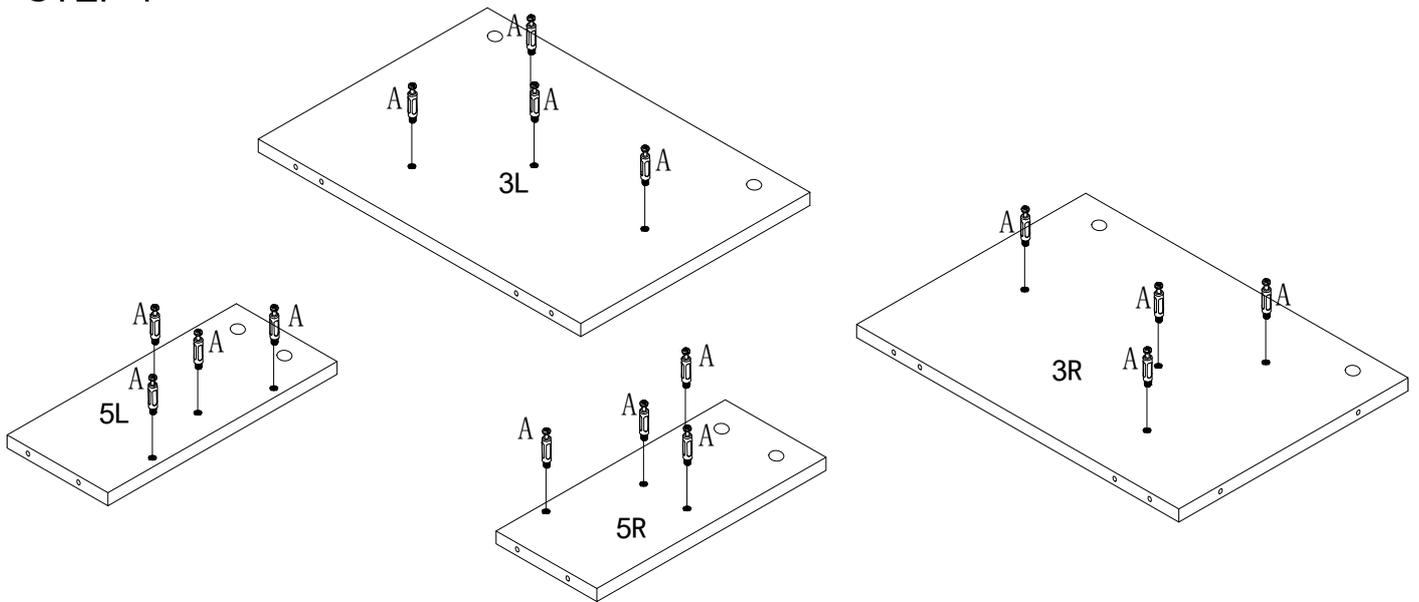


No. A

Quantity: 16 Pcs

Cam Lock Dowel
8*28 mm



STEP 2

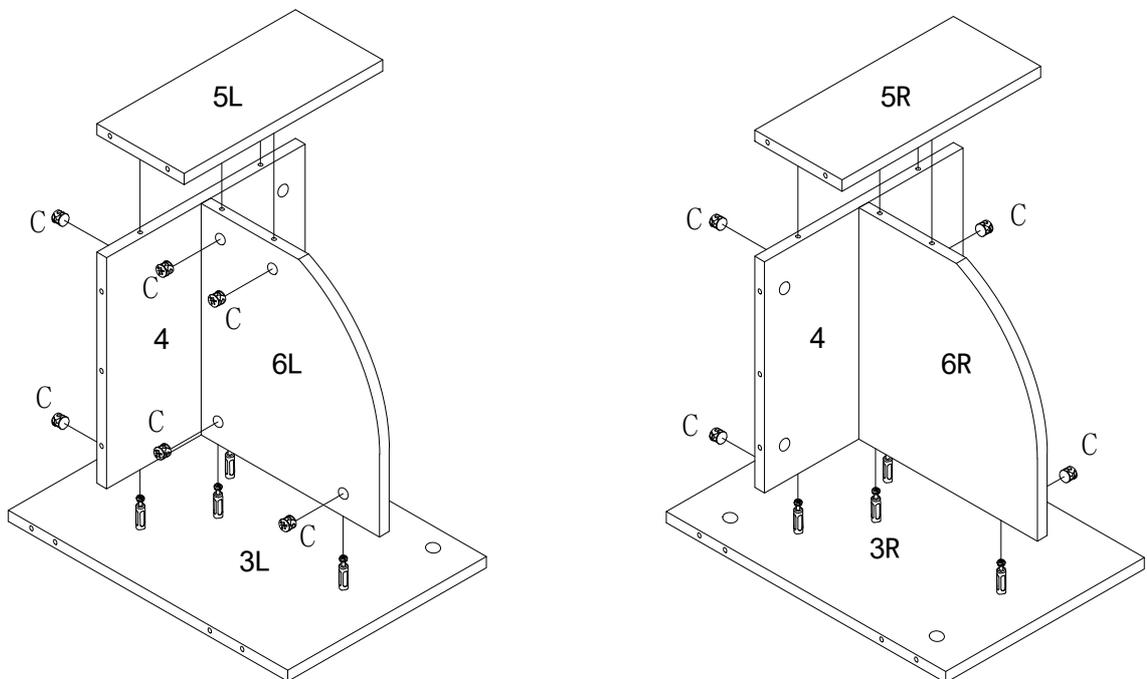


No. C

Quantity: 16 Pcs

Cam



STEP 3

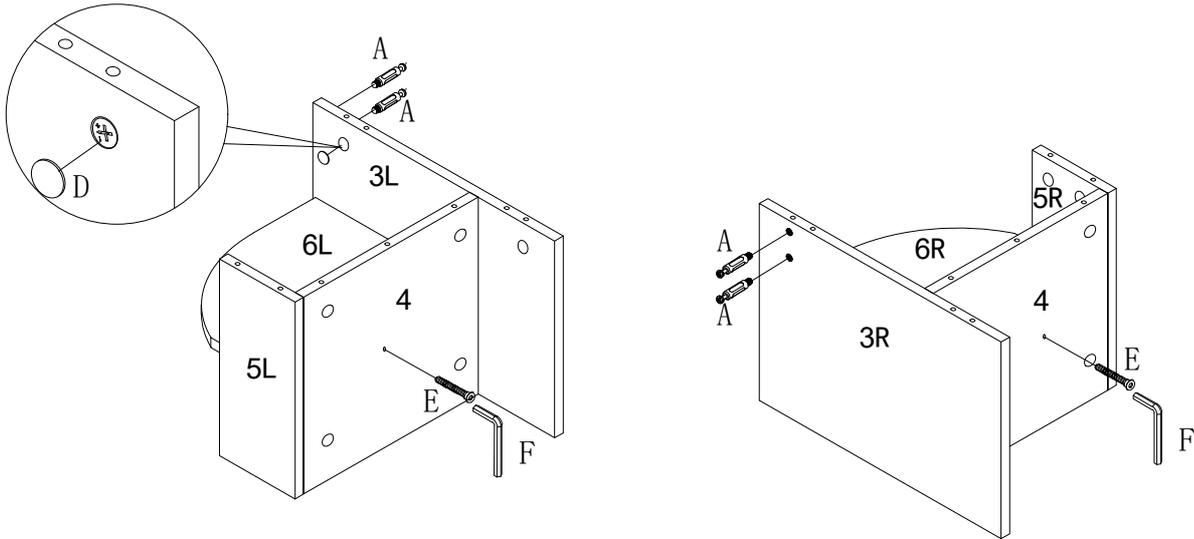

No. A

Quantity: 4 Pcs

Cam Lock Dowel
8*28 mm



No. E

Quantity: 2 Pcs

Screw
M6*50mm



No. F

Quantity: 1 Pc

Allen Key
4#




No. D

Quantity: 20 Pcs

Sticker
φ20



STEP 4

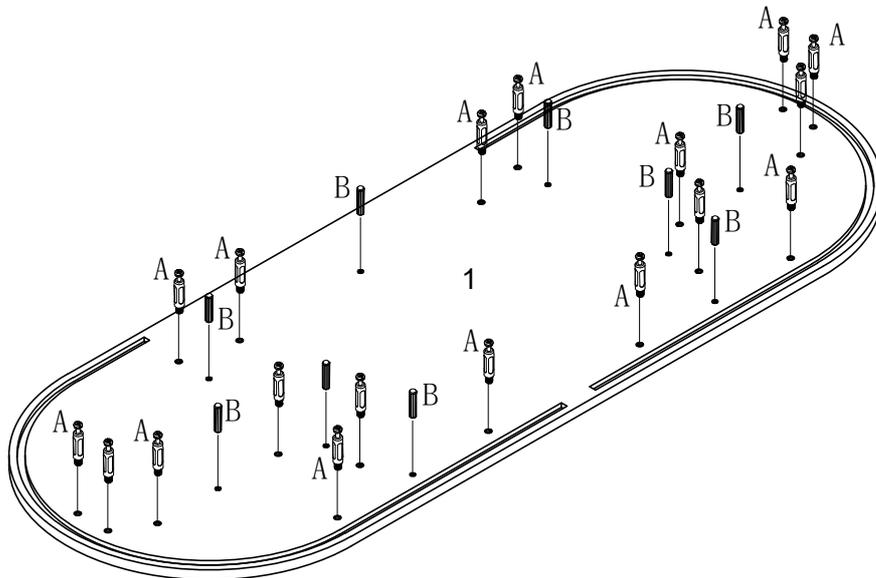

No. A

Quantity: 18 Pcs

Cam Lock Dowel
8*28 mm




No. B

Quantity: 9 Pcs

Dowel
8*30mm



STEP 5

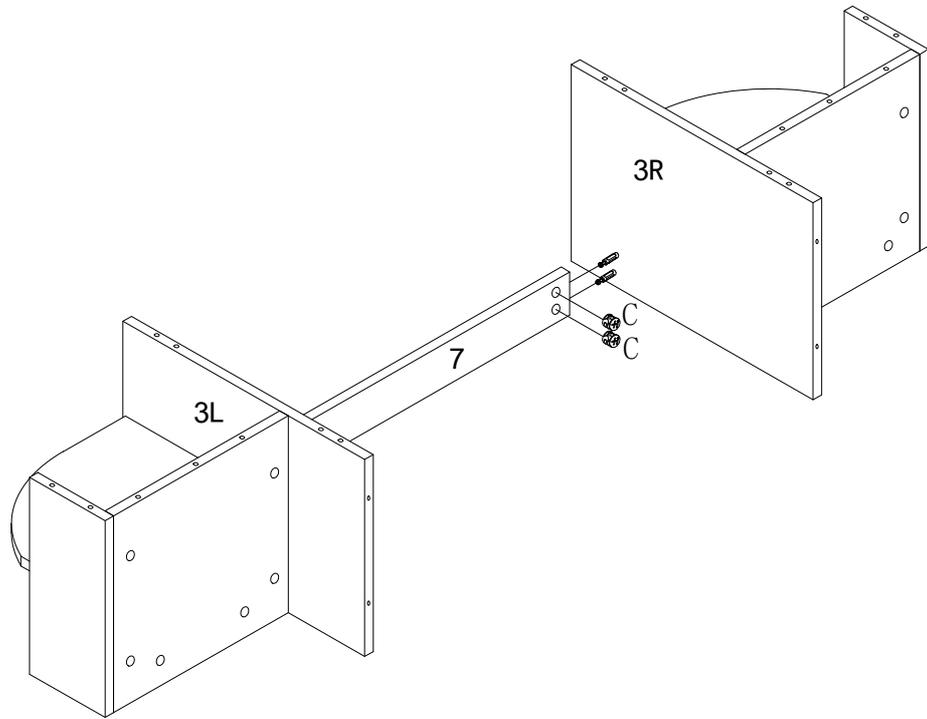


No. C

Quantity: 4 Pcs

Cam



STEP 6

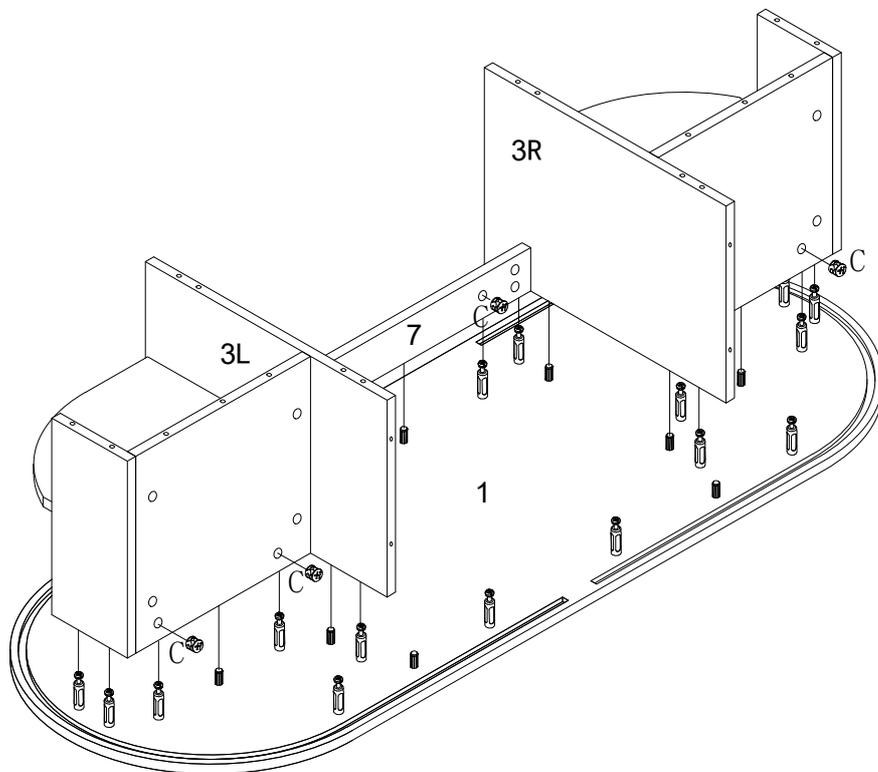


No. C

Quantity: 14 Pcs

Cam




STEP 7

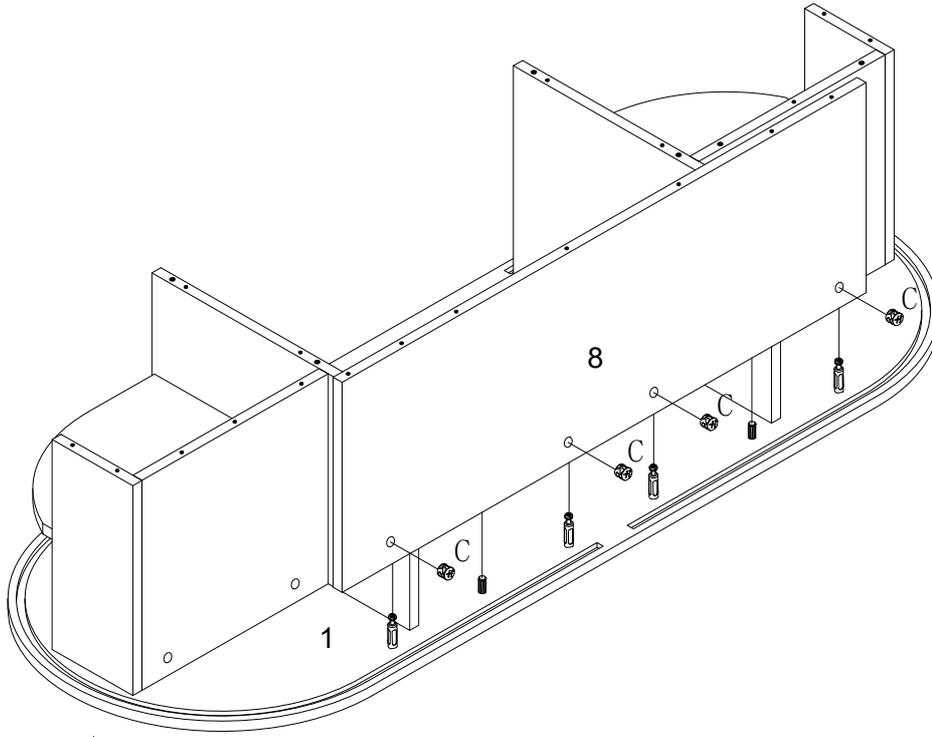

No. C
Quantity: 4 Pcs
Cam



STEP 8

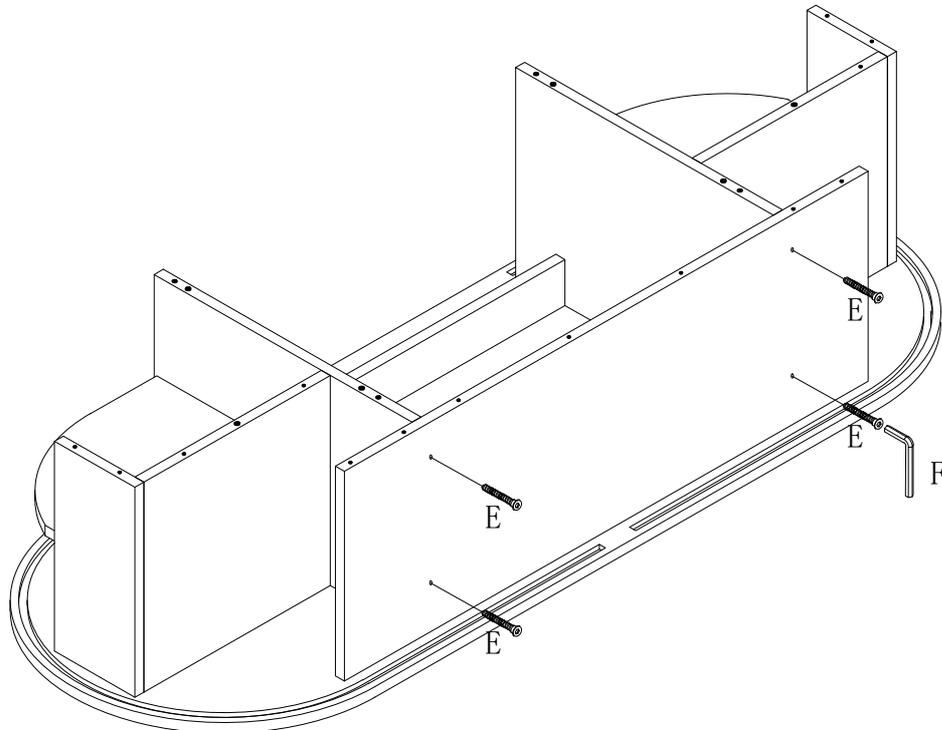


No. E
Quantity: 4 Pcs
Screw
M6*50mm




No. F
Quantity: 1 Pc
Allen Key
4#



STEP 9

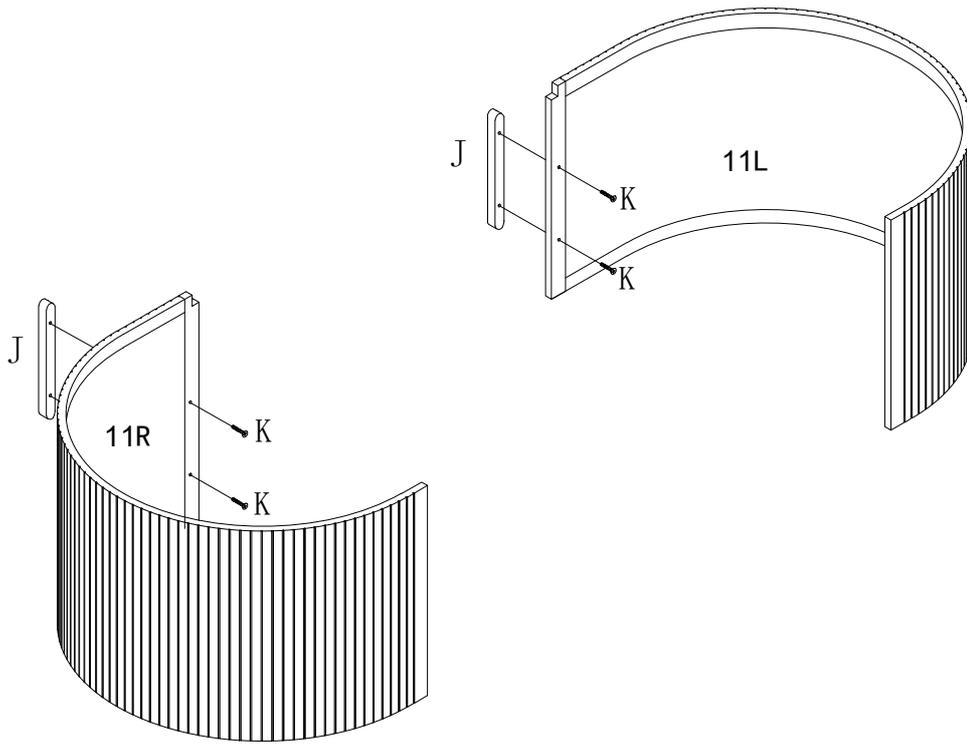

Please ensure the notch of the sliding door towards up.

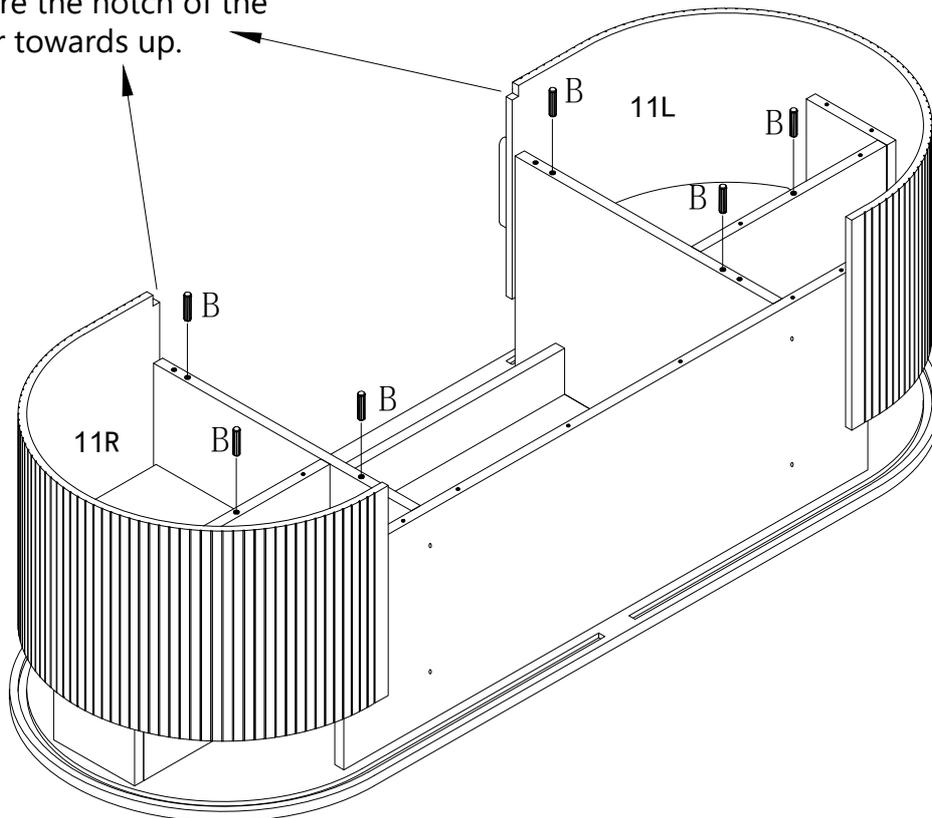

No. J

Quantity:2 Pcs

Handle
200*20 mm



No. K

Quantity:4 Pcs

Screw
4*14 mm




No. B

Quantity:6 Pcs

Dowel
8*30mm



STEP 10

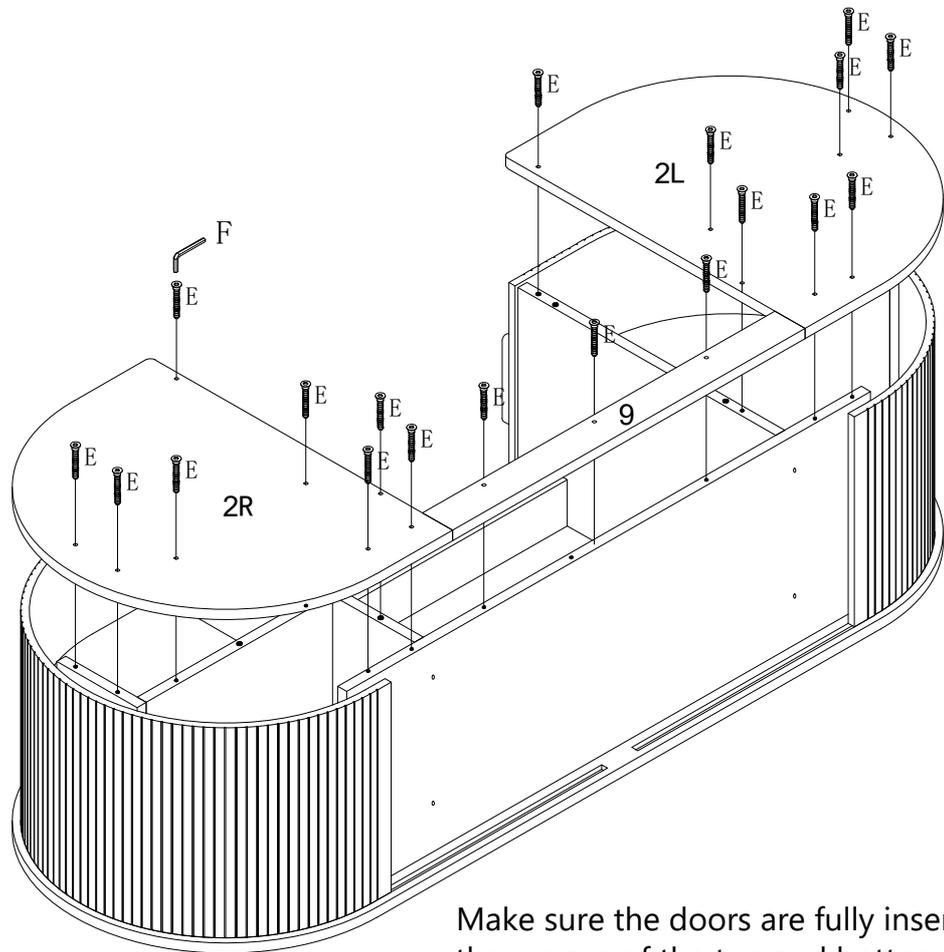


No. E

Quantity: 19 Pcs

Screw
M6*50mm




Make sure the doors are fully inserted in the groove of the top and bottom panels, then tight the screw E.

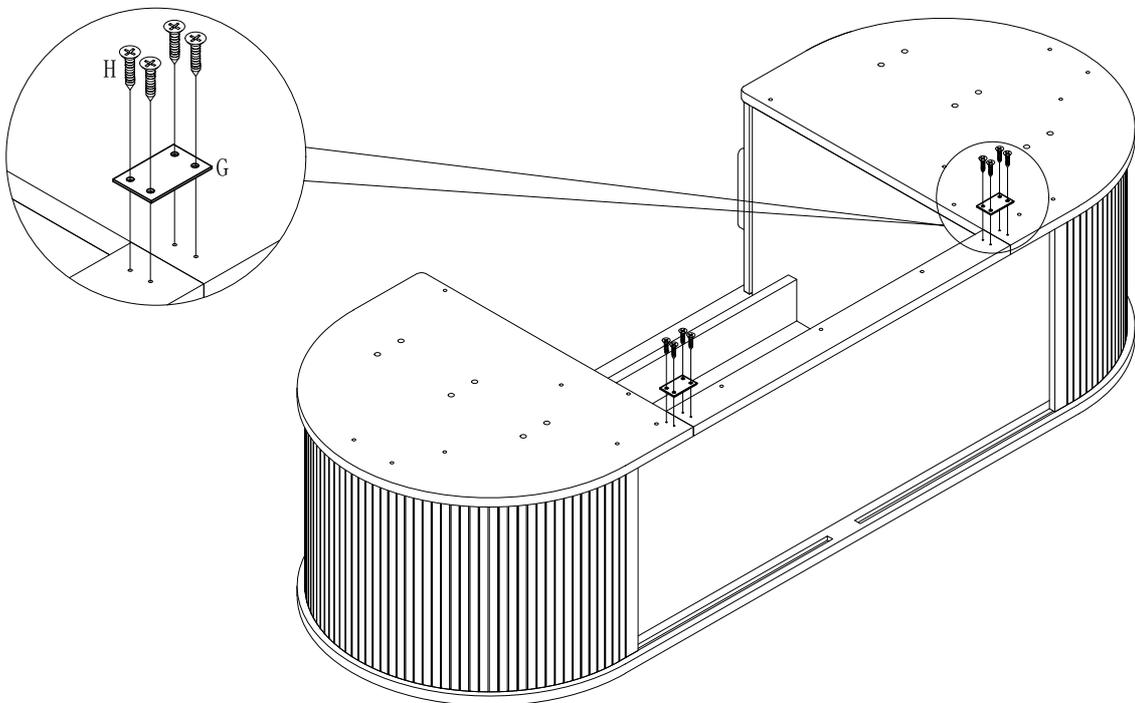

No. G

Quantity: 2 Pcs

Metal Plate




No.H

Quantity: 8 Pcs

Screw
4*16 mm



STEP 12

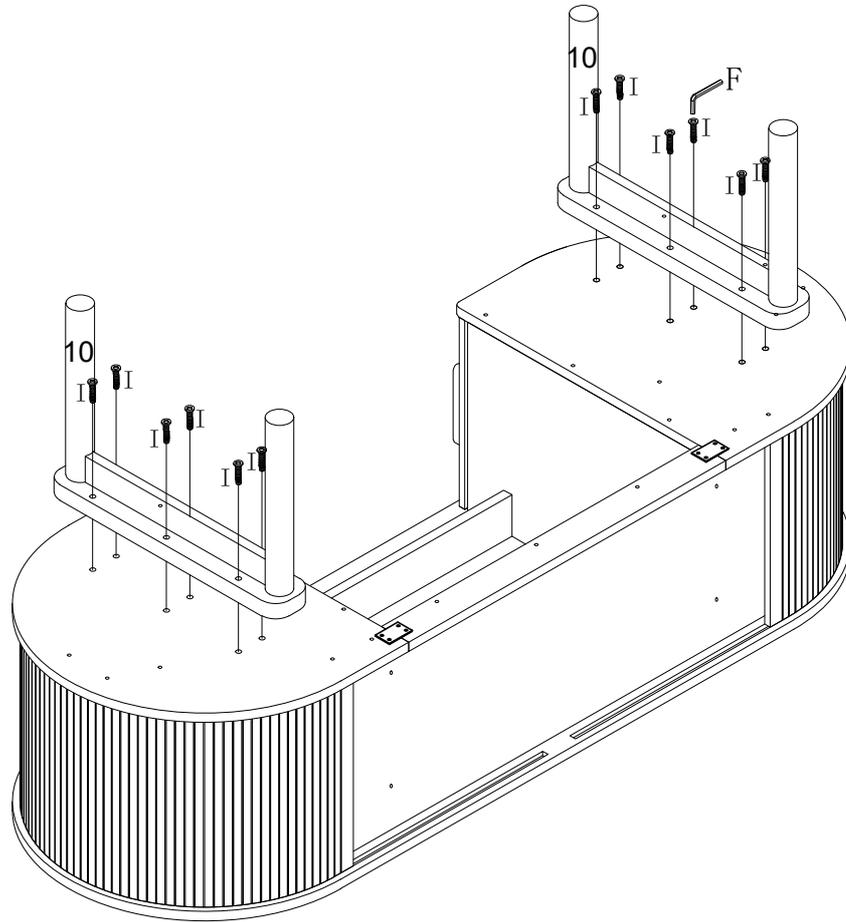


No. I

Quantity: 12 Pcs

Screw
M6*40mm



STEP 13

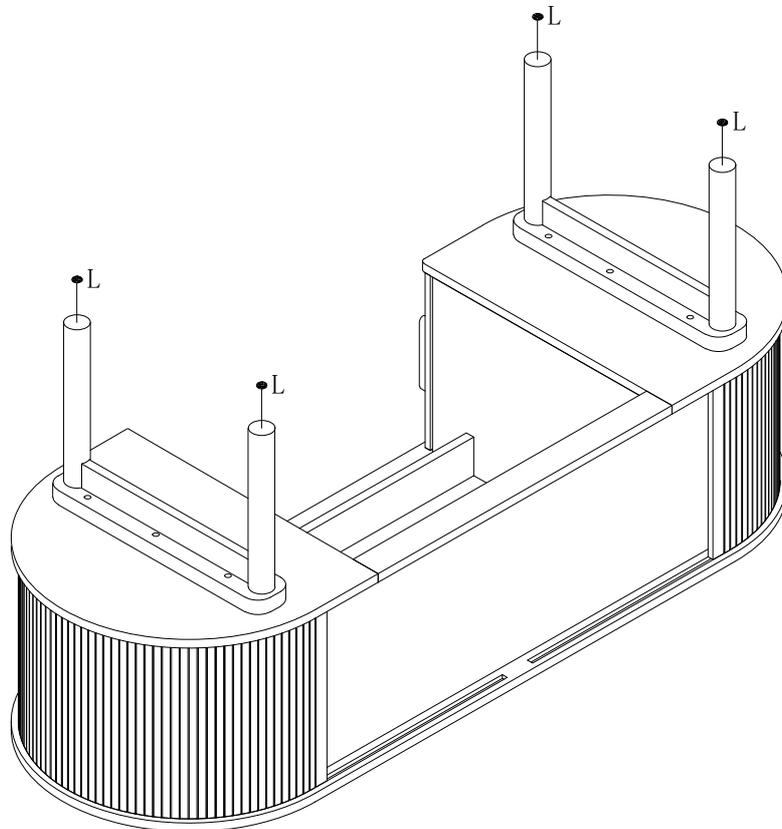




No. L

Quantity: 4 Pcs

Sticker
 $\phi 20$



STEP 14

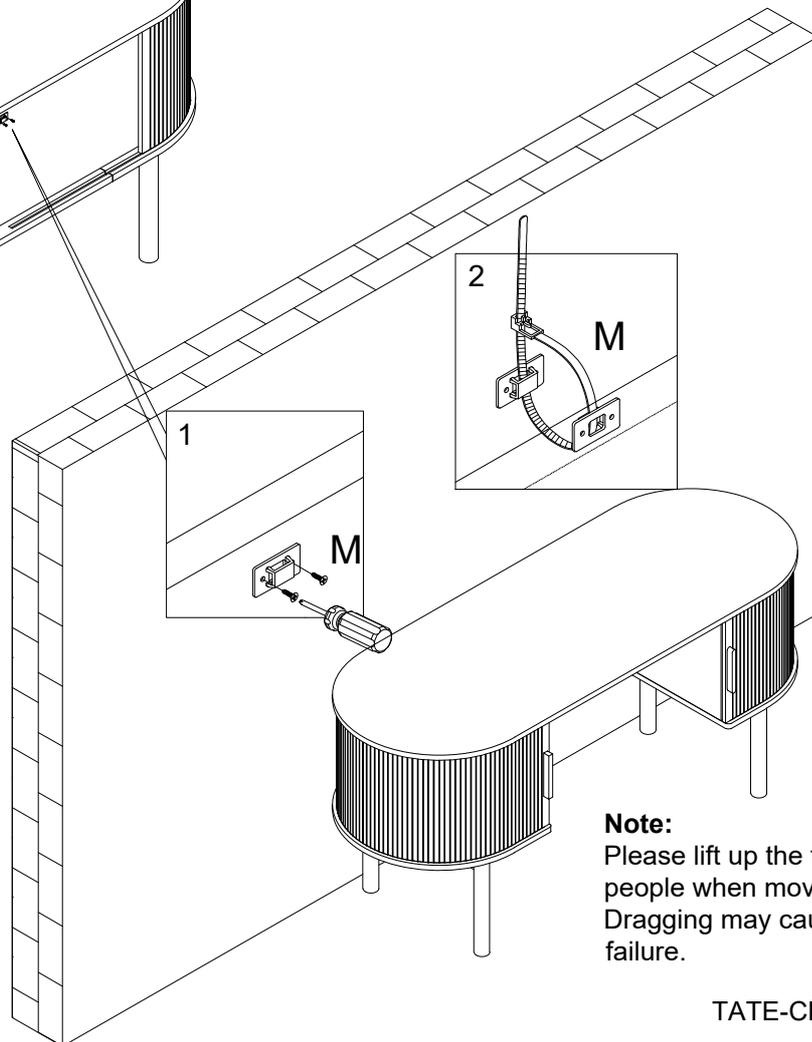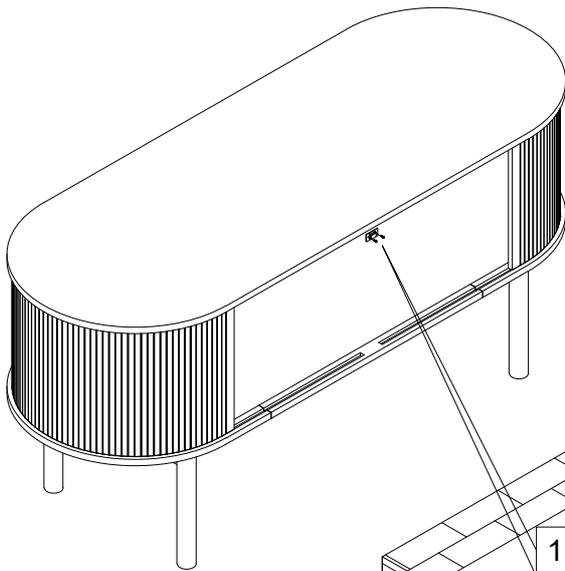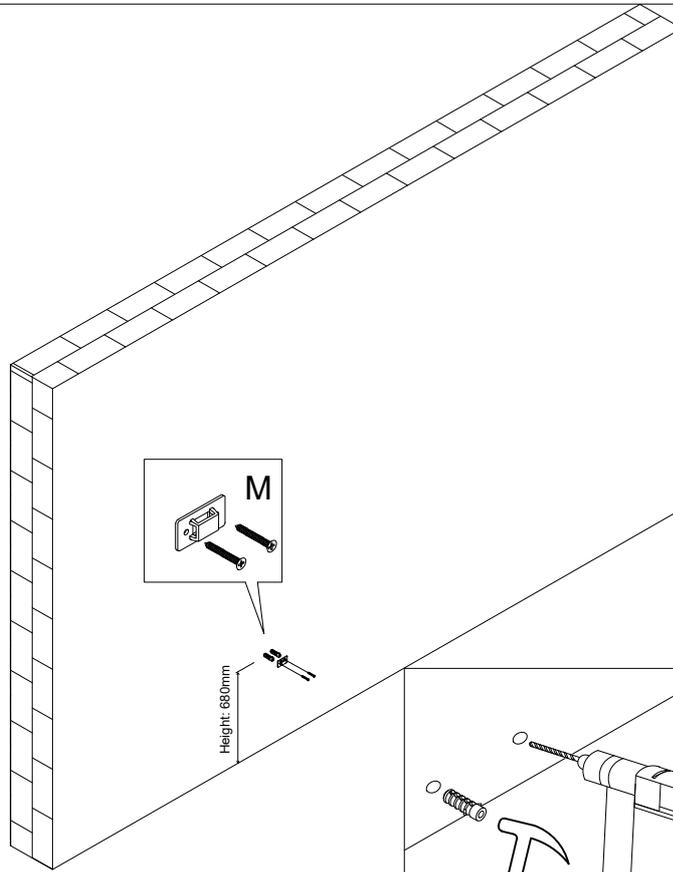

No. M
Quantity: 1 Set
Anti-falling Parts



Note:
Please lift up the furniture by two people when moving is needed.
Dragging may cause the legs failure.

lifely.com.au

Great job. You're done!

Don't forget to share how it looks in
your space and tag us on Instagram.
[@lifelyhome](#)[#homewithlifely!](#)