


Assembly Instructions

Josephine Series

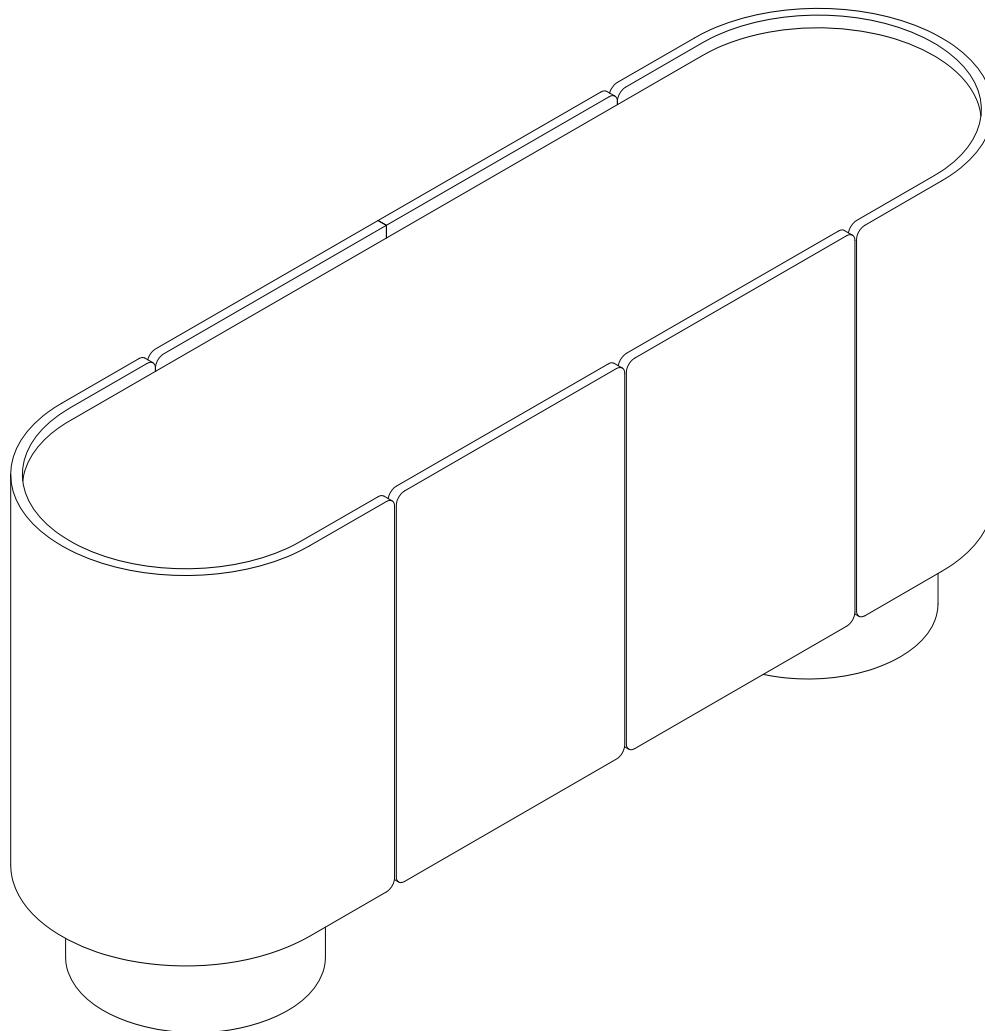

Lifely*

Product Code

JOSIE-SB160-OAK Josephine Sideboard

Dimensions(W x D x H)

1600*390*760mm


Important

Please read through instruction carefully
Before assembly and keep for future reference.
For our full catalogue of assembly instructions,
Visit: lifely.com.au/assembly.


Important Tips and Maintenance




1. Keep children and animals away from working area as smaller parts may cause choking if swallowed.

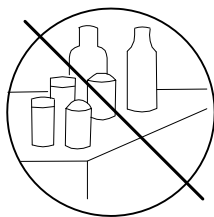


2. Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.

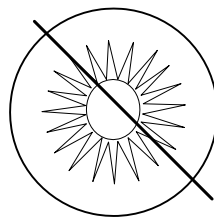


3. To avoid fading, keep furniture out of direct sunlight.

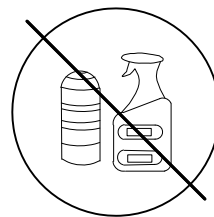


4. Never use ammonia based cleaning products as it will damage the finish.

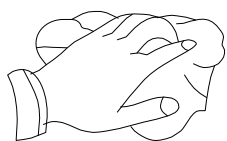

5. Use a soft or dry cloth when wiping or cleaning surfaces.

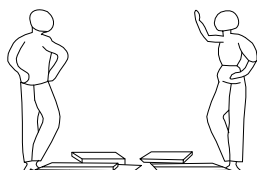

6. Two person are required.

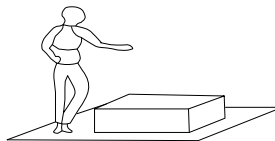

7. Lay a soft matt down to protect the furniture piece before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead. E.g. "You're so good looking."

This 11-step assembly should take around 55 minutes with an Allen key-or 30 minutes with an electric drill.

Designed for everyday

Component Hardware are in box 1
Please check you have all the fittings
part or tools are listed in below.


No. A
Quantity:31 Pcs
Cam
φ15*12mm



No. B
Quantity:25 Pcs
Cam Lock Dowel
φ7*25



No. C
Quantity:3 Pcs
φ7*60




No. D
Quantity:4 Pcs
φ35




No. E
Quantity:28 Pcs
Screw
φ3.5*14mm



No. F
Quantity:19Pcs
Wooden Dowel
Ø8*30mm



No. G
Quantity:2 Pcs
Screw
M6*180

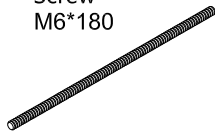

No. H
Quantity:2 Pcs
Nut
M6



No. I
Quantity:8 Pcs



No. J
Quantity:1 Pc
Key
5mm



No. K
Quantity:1 Pc
Key
4mm




No. L
Quantity:8 Pcs
EVA Pad
φ25



No. M
Quantity:27Pcs
Cover
φ20mm



No. N
Quantity: 2 Sets
L=200mm
x2



Ø4
x4

Ø4*25mm
x2




x2


Component Panels & part List

Please check you have all the panels
are listed below.

- | | | |
|--------------------------|----|---------|
| 1. Top Panel----- | x1 | CTN 3/3 |
| 2. Bottom Panel----- | x1 | CTN 3/3 |
| 3. Side Panel-Left----- | x1 | CTN 1/3 |
| 4. Side Panel-Right----- | x1 | CTN 1/3 |
| 5. Side Panel-Middle---- | x1 | CTN 3/3 |
| 6. Shelf----- | x2 | CTN 3/3 |
| 7. Back Panel-Left----- | x1 | CTN 2/3 |
| 8. Door----- | x2 | CTN 2/3 |
| 9. Leg----- | x2 | CTN 2/3 |
| 10. Back Panel-Right---- | x1 | CTN 2/3 |

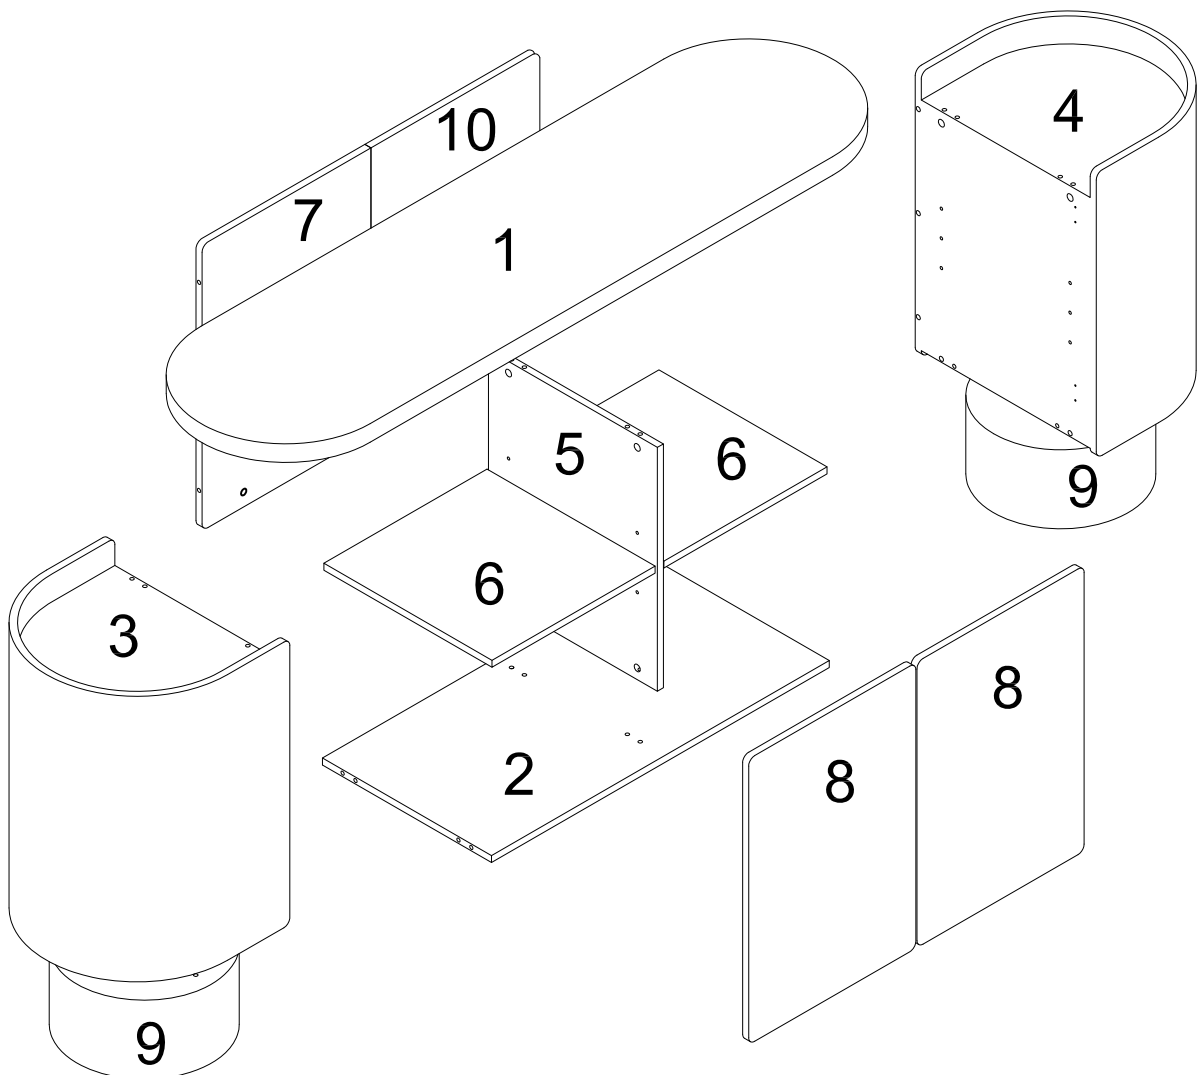

STEP 1

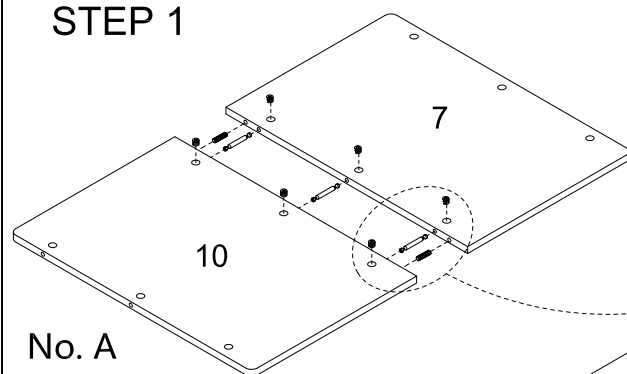


No. A
Quantity:6 Pcs






No. C
Quantity:3 Pcs




No. B
Quantity:18 Pcs





No. J
Quantity:1 Pc

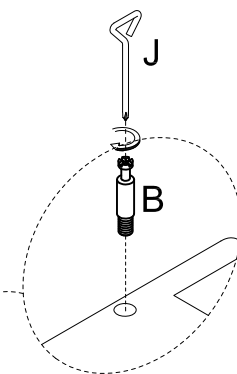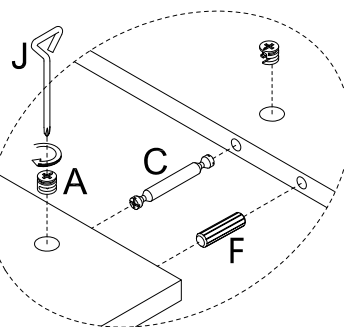

No. F
Quantity:2 Pcs





STEP 2

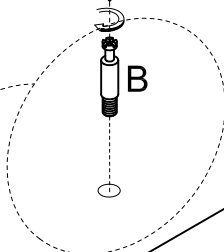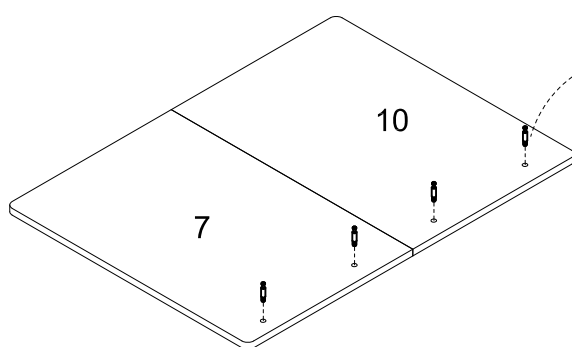


No. A
Quantity:4 Pcs




No. B
Quantity:4 Pcs

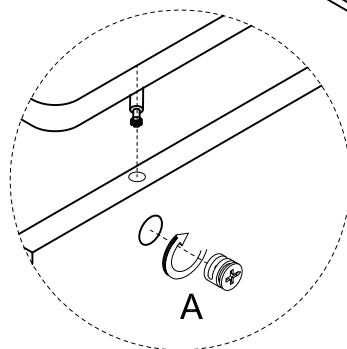


A

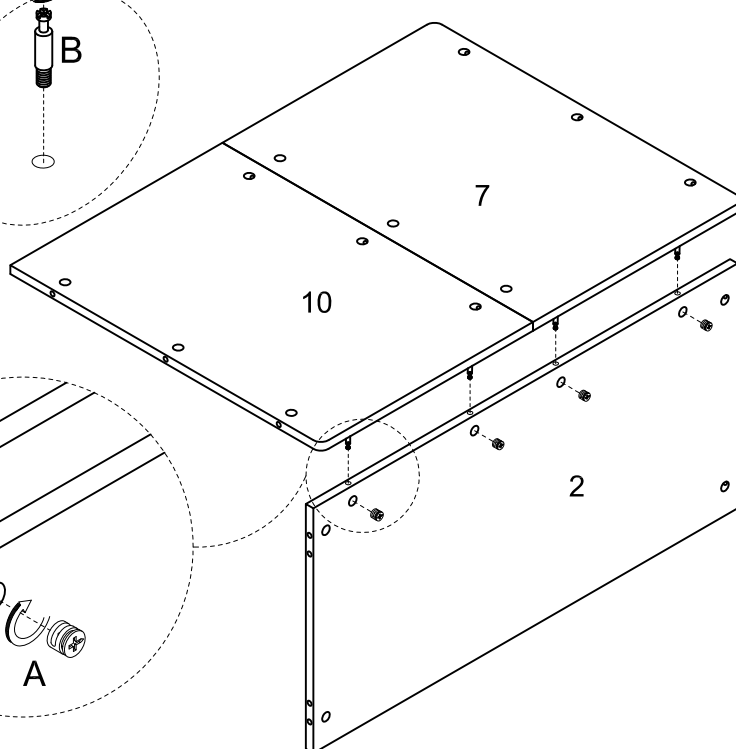

STEP 3

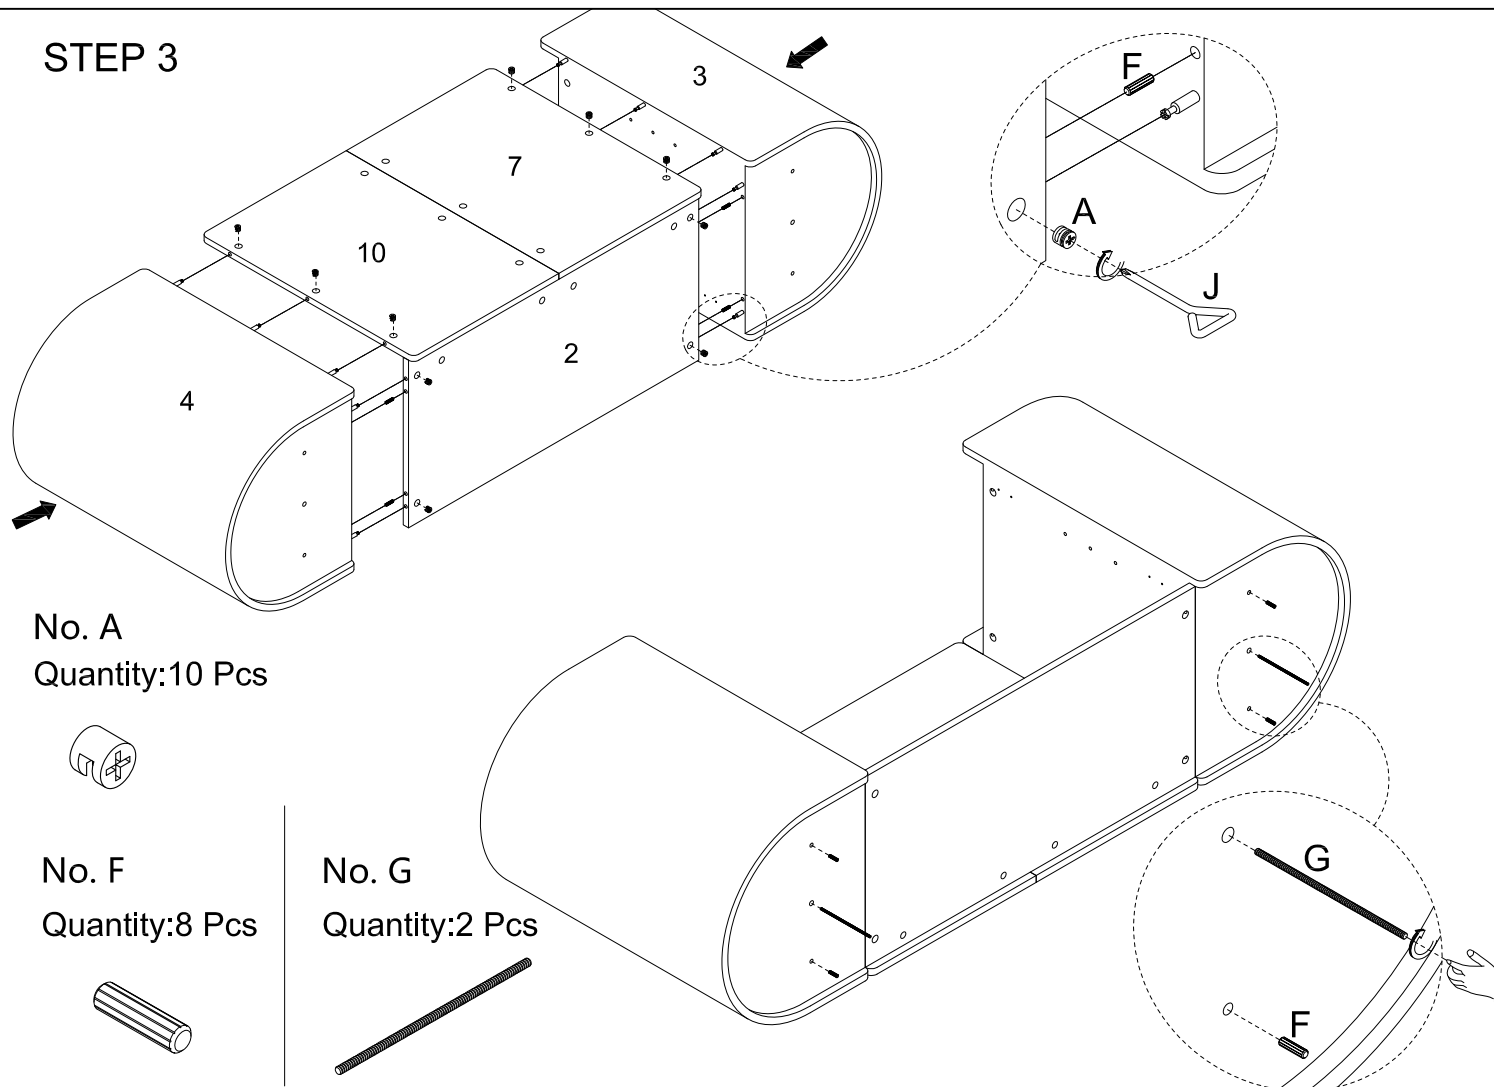

STEP 4

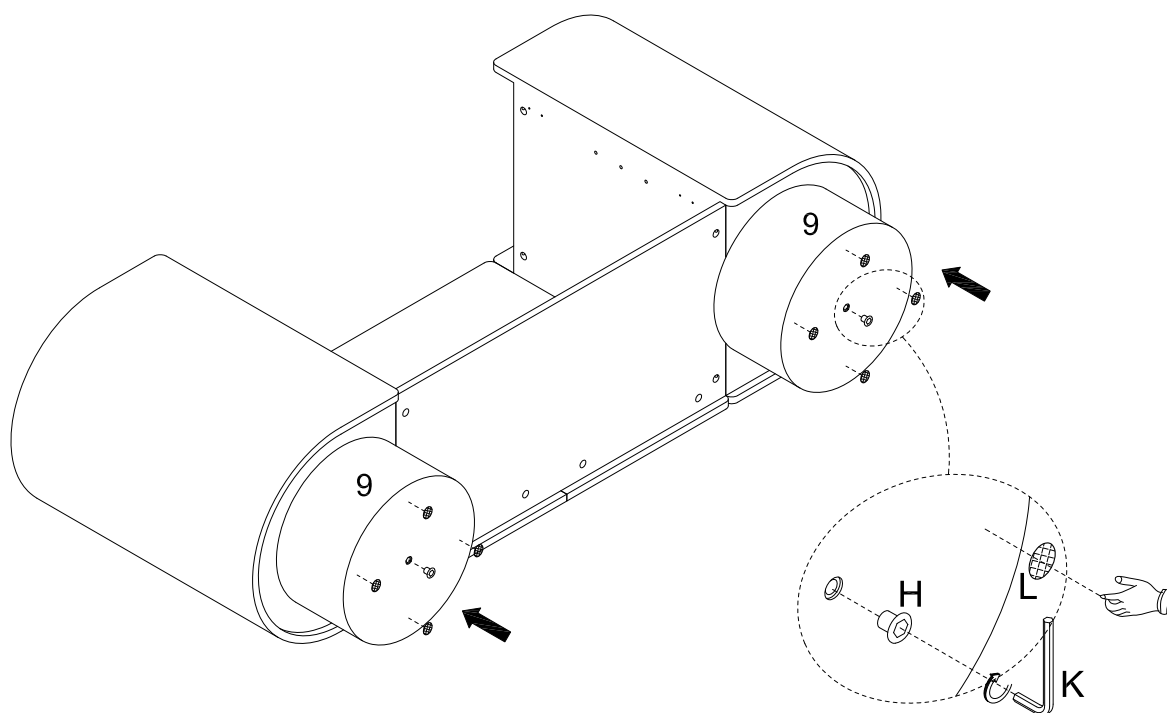

No. H
Quantity:2 Pcs




No. K
Quantity:1 Pc



No. L
Quantity:8 PcS




STEP 5

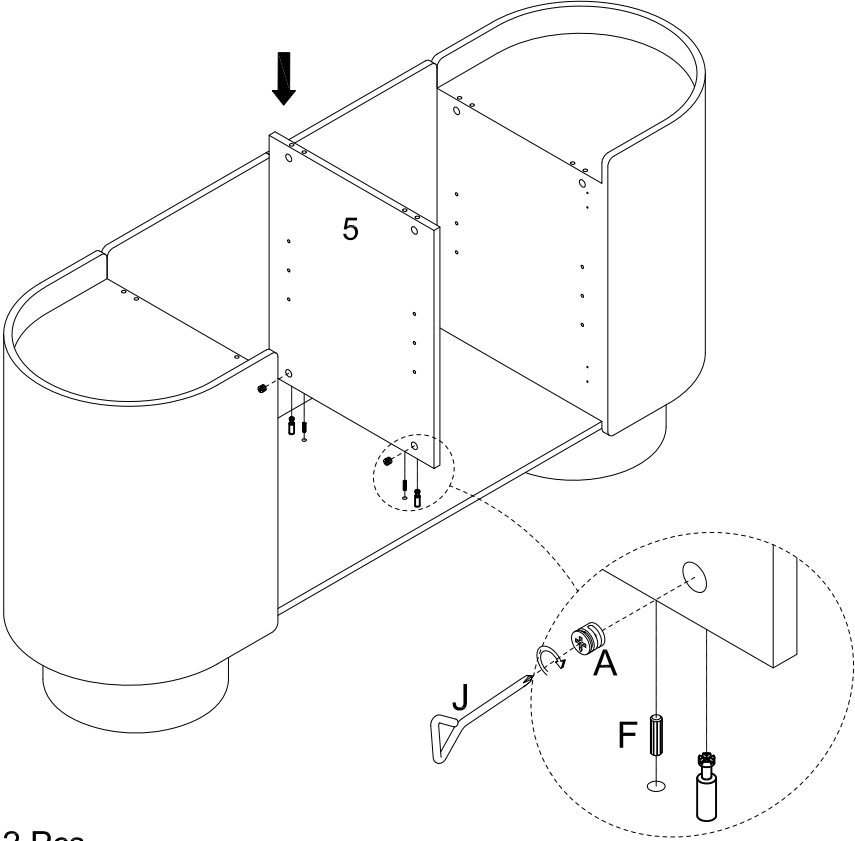


No. A
Quantity:2 Pcs



No. F
Quantity:2 Pcs




STEP 6

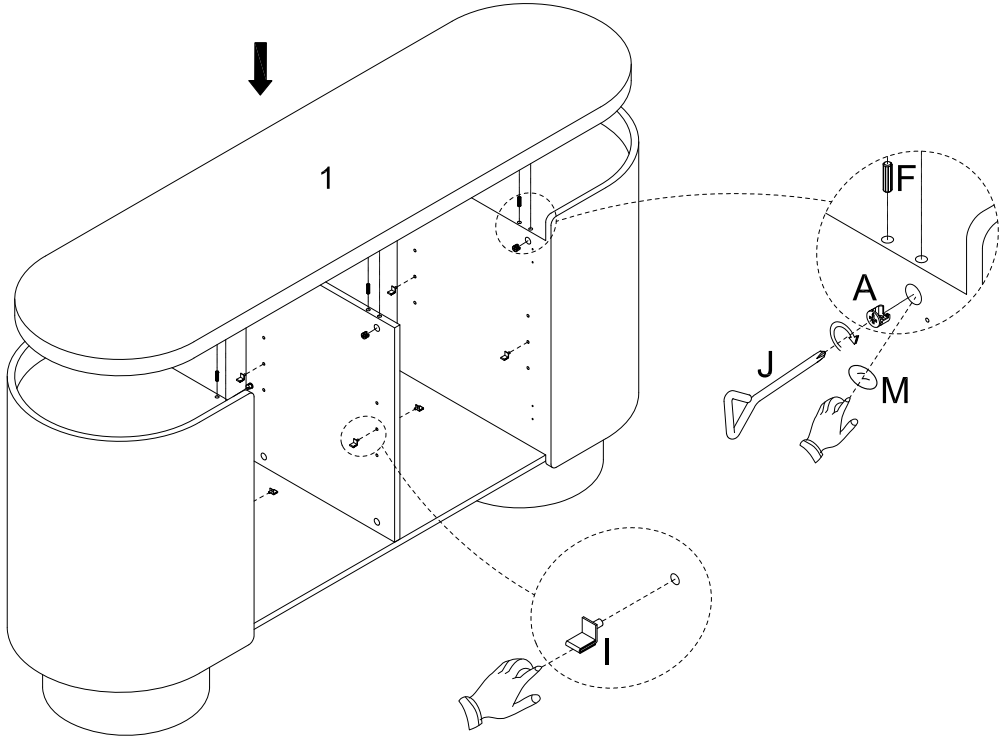

No. A
Quantity:6 Pcs



No. F
Quantity:6 Pcs




No. I
Quantity:8 Pcs




No. M
Quantity:24 Pcs




STEP 7

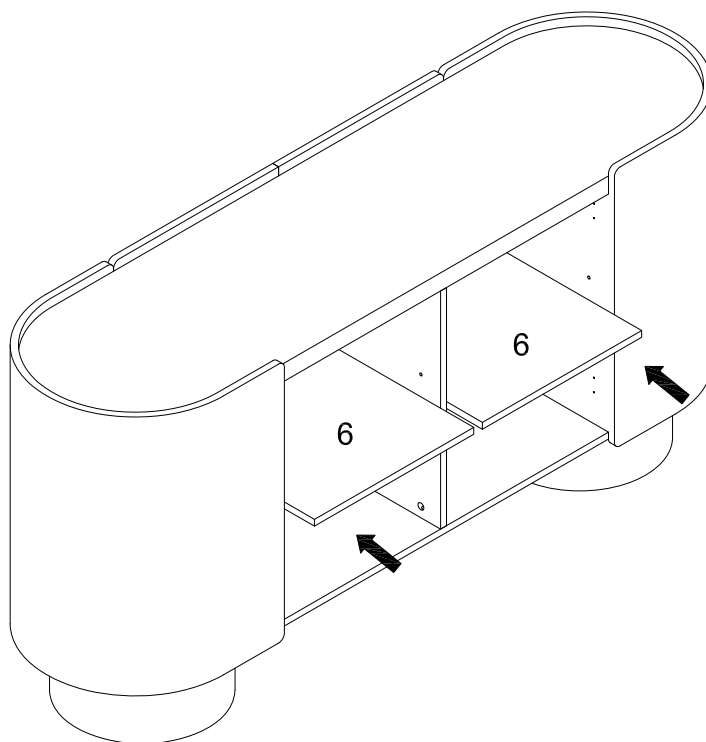

STEP 8

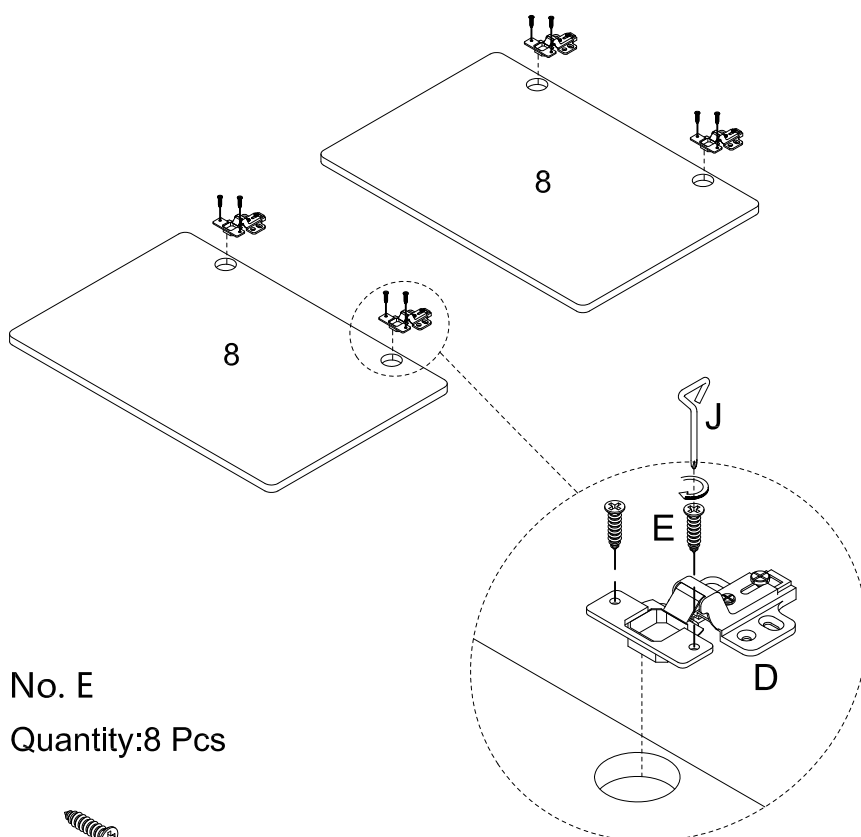

No. D
Quantity:4 Pcs




No. E
Quantity:8 Pcs




STEP 9

No. E
Quantity:16 Pcs

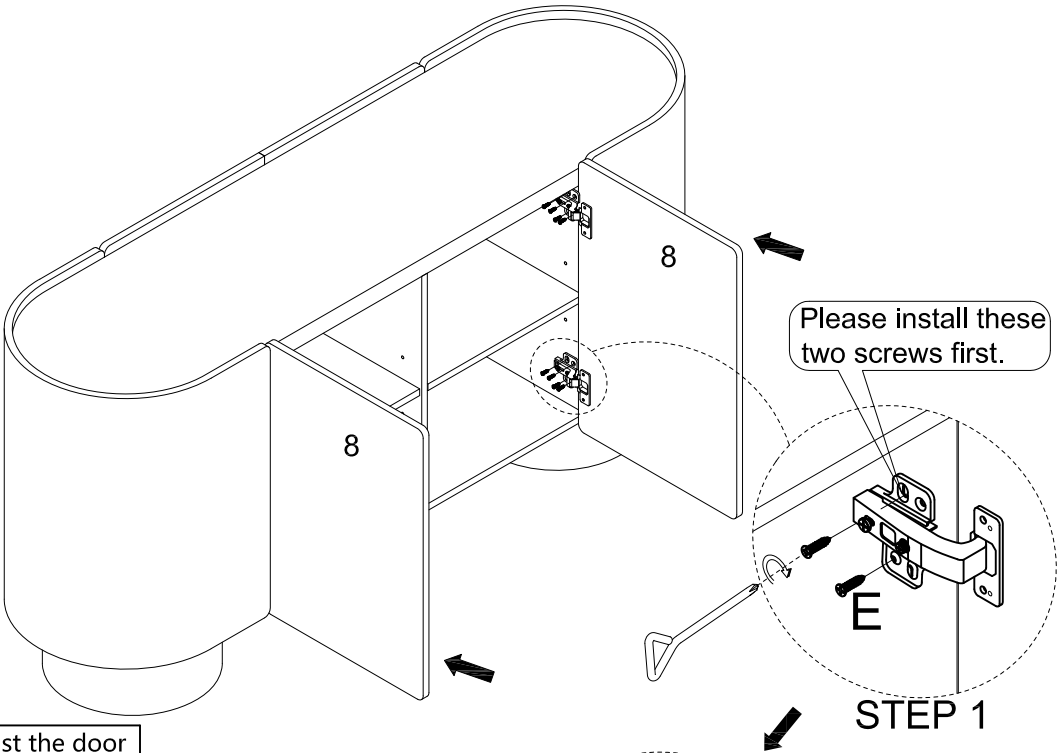


How to adjust the door gap at side with screw adjustment?

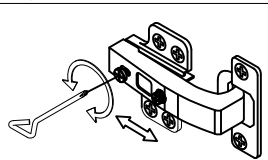


Turn left or right the adjuster properly until door is balanced.

How to adjust the door gap at at front with screw adjustment?

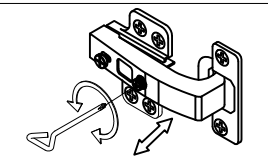

Turn left or right middle bolt adjuster properly until door is balanced.

When you adjust the doors properly, then install the last two screws.

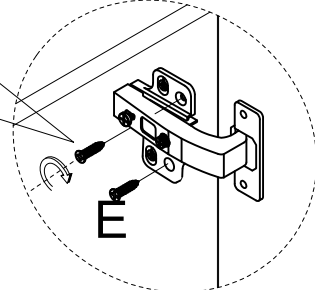



STEP 2

STEP 10



No. N
Quantity:2 Pcs



L=200mm

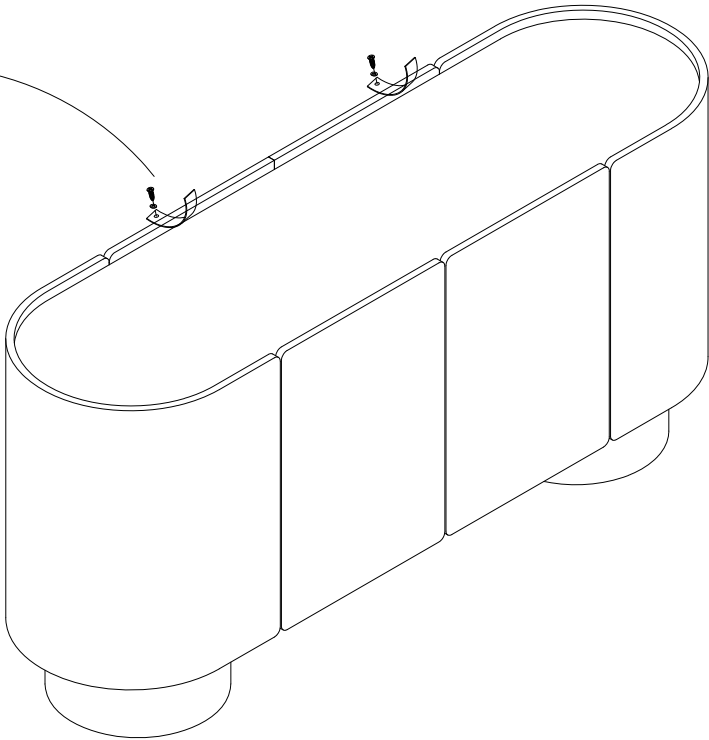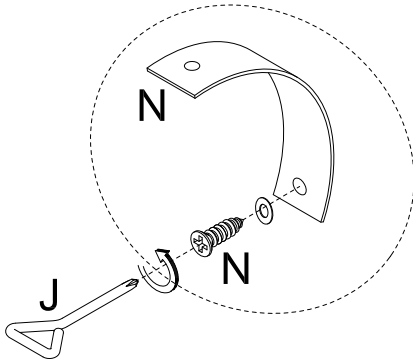


STEP 11

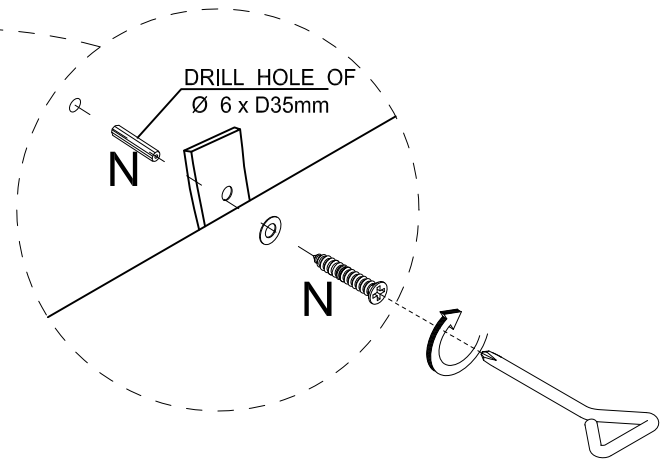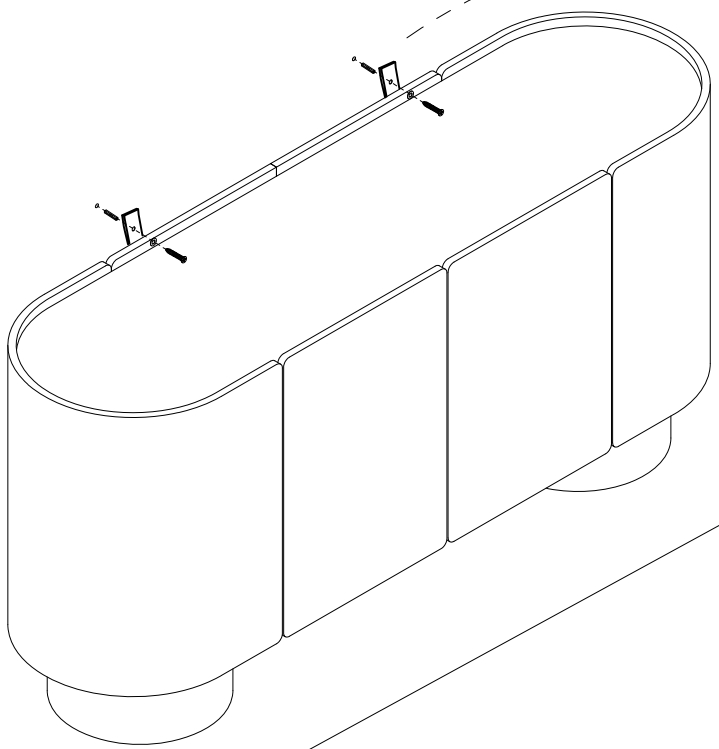

No. N

Quantity: 2 Pcs

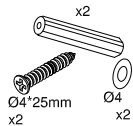

TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



Great job. You're done!

Don't forget to share how it looks in
your space and tag us on Instagram.

@lifelyhome #homewithlifely!