# **Assembly Instructions**

# **CASA SERIES**



Product Name Casa Wooden Bed Frame

Dimensions(W x D x H)

King Size:1912x2121x1000mm Queen Size:1594x2121x1000mm Double Size:1454x1971x1000mm

### **Important**

Please read through instruction carefully Before assembly and keep for future reference.

For our full catalogue of assembly instructions, Visit: lifely.com.au/assembly.

# Important Tips and Maintenance





1.

Keep children and animals away from working area as smaller parts may cause choking if swallowed.




2

Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.



2

Never use ammonia based cleaning products as it will damage the finish.



To avoid fading, keep furniture out of direct sunlight.



5.

Use a soft or damp cloth(dry cloth)when wiping or cleaning surfaces.



6

Two person are required.



7

Lay a soft matt down to protect the furniture piece before and during assembly.

### **NOTICE:**

DRAGGING MAY CAUSE THE CENTRAL LEGS FAILURE AFTER FINISH THE INSTALLATION, SUGGEST LIFTING THE BEDFRAME BY TWO PERSONS WHEN YOU WANT TO MOVE THE BEDFRAME.

IMPORTANT
PLEASE READ THESE INSTRUCTION CAREFULLY BEFORE STARTING ASSEMBLY

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourelf a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead .E.g. "You're so good looking".

This 8-Step assembly should take around 35 minutes with an Allen Key-or 20 minutes with an electric drill. Godspeed.

Designed for everyday

# **Component Hardware**

Please check you have all the fittings part or tools are listed in below.

No. A Quantity: 6Pcs Cam Bolt



No. F Quantity:12Pcs Screw 2\*24mm



No. B Quantity:6Pcs Cam Nut



No. G Quantity:4Pcs Screw ø6\*95mm



No. C Quantity:10Pcs Dowel



No. H Quantity:4Pcs Screw



No. D Quantity:19Pcs Screw ø6\*70mm



No. I Quantity:2Pcs Screw ø6\*30mm




No. E Quantity:1Pc Allen Key





# **Component Panels & part List**

Please check you have all the panels are listed below.

1.	SIDE PANEL-L x1	Carton 1/3
2.	SIDE PANEL-R x1	Carton 1/3
3.	BED END-2x1	Carton 1/3
4.	BED END-1x1	Carton 1/3
5.	MIDDLE SUPPORT BARx1	Carton 1/3
6.	MIDDLE SUPPORT LEGx3	Carton 1/3
7.	BED LEG x4	Carton 1/3
8.	BED SLATSx1	Carton 2/3
9.	BED HEADx1	Carton 3/3
10.	CONNECTING BAR x2	Carton 1/3

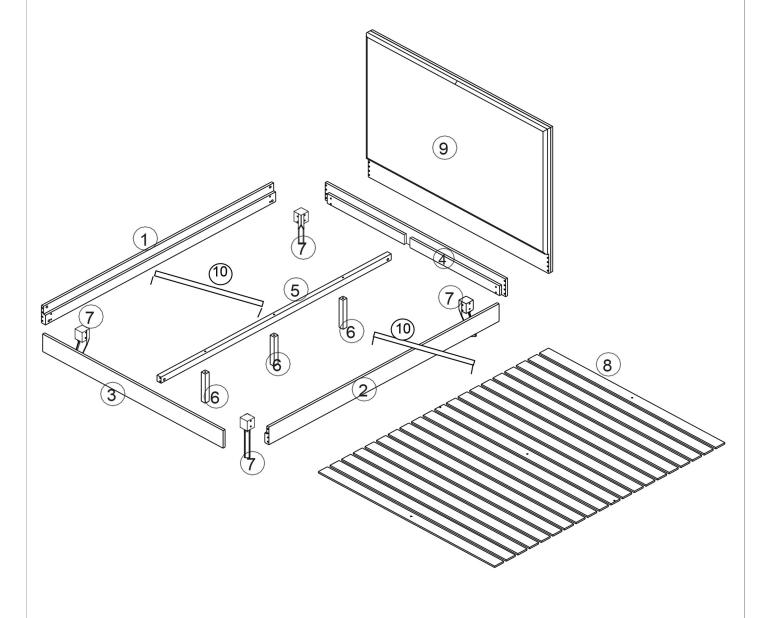

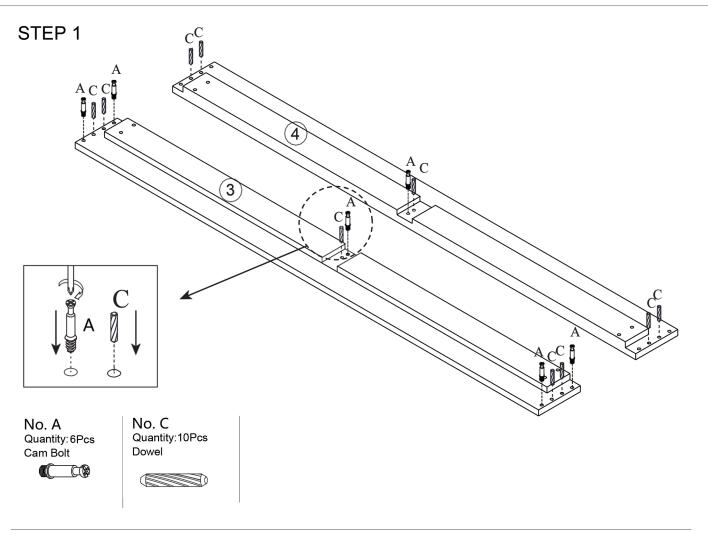


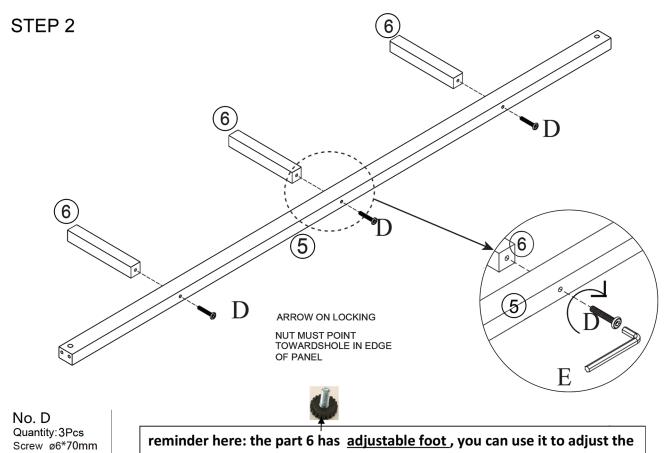



height.


# STEP 3 No. B Quantity: 5Pcs Cam Nut

## STEP 4

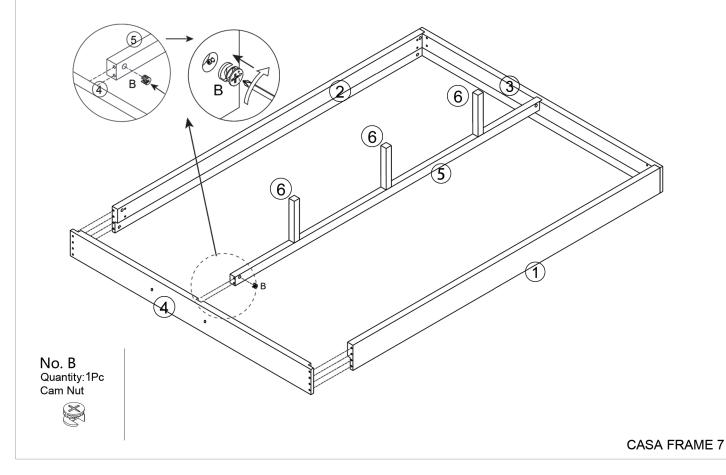

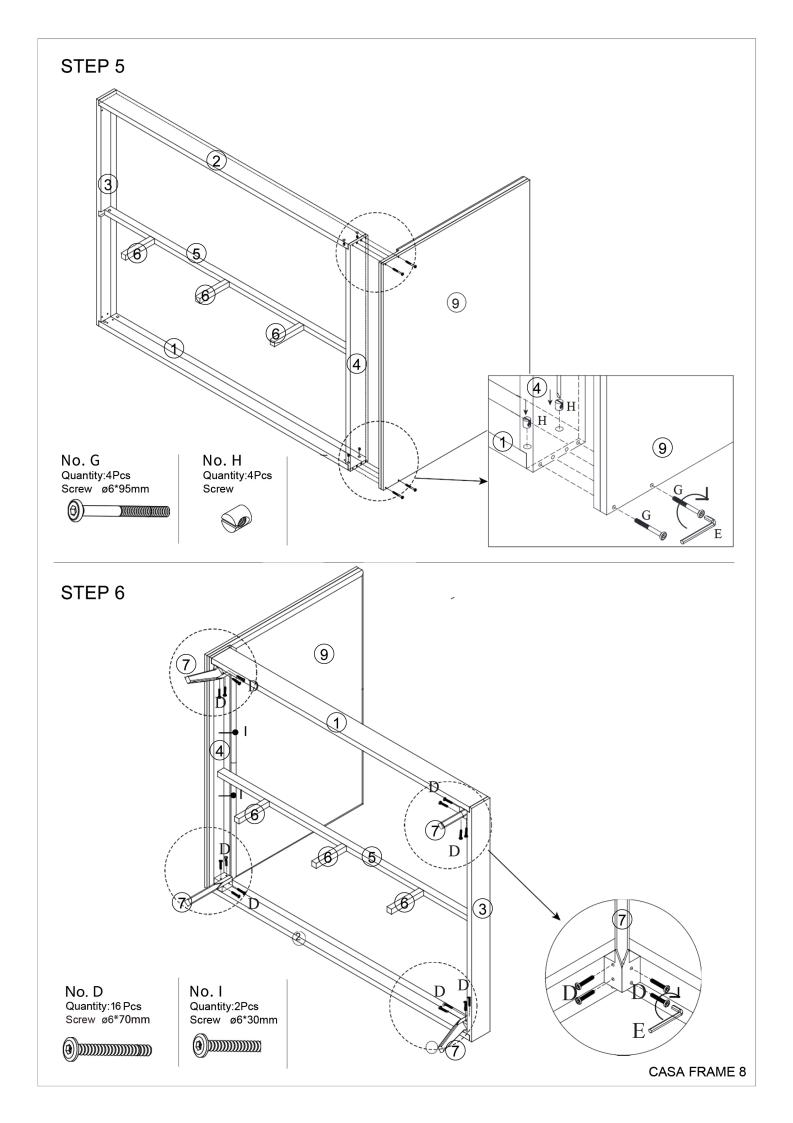

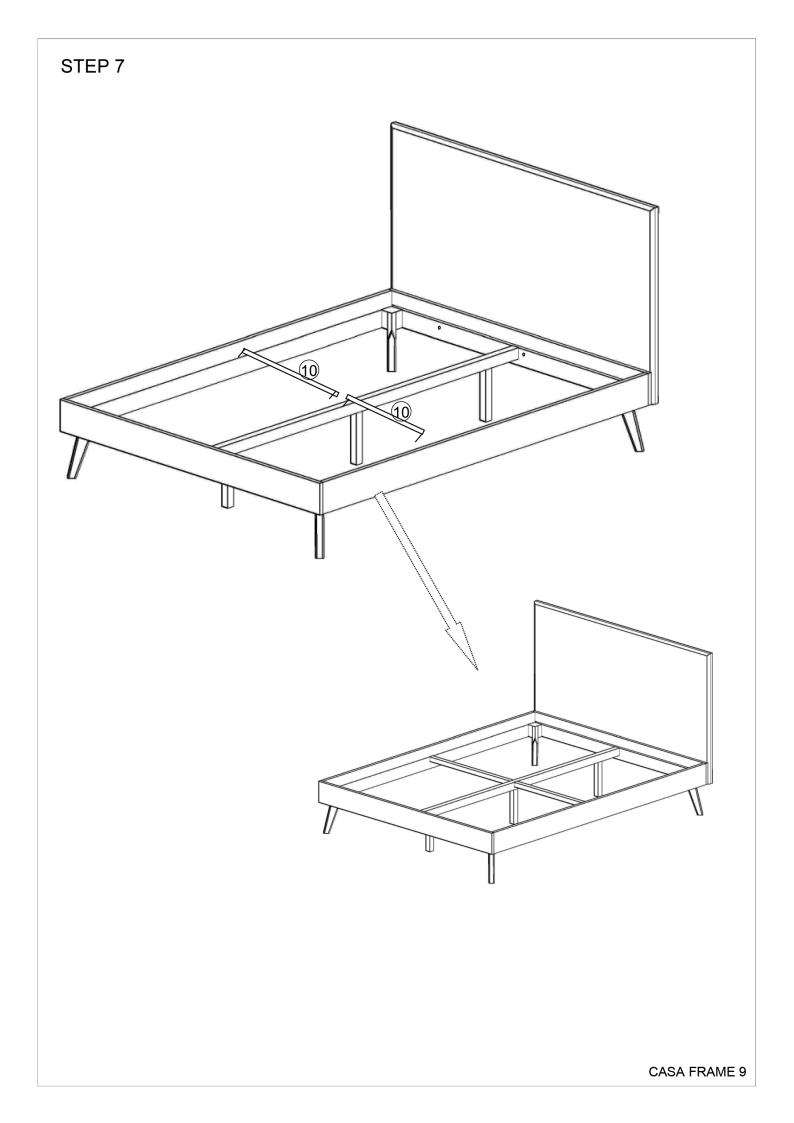

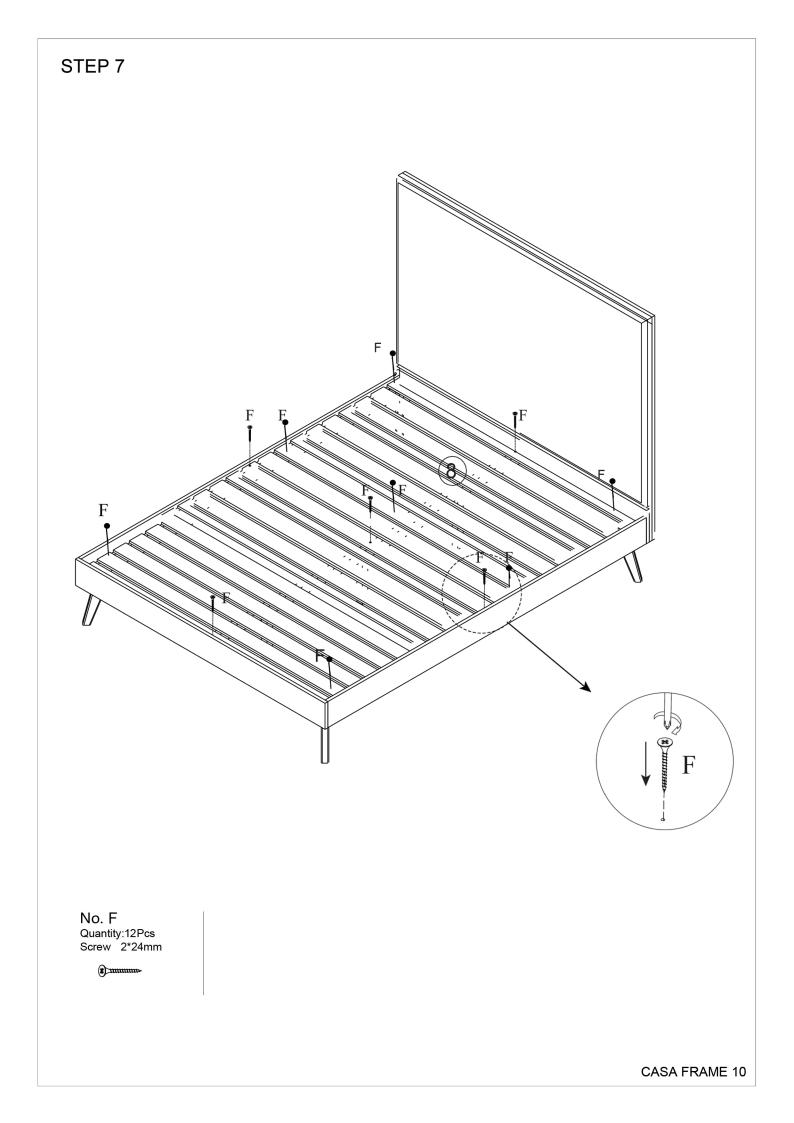

lifely.com.au	
Great job. You're done!	
Great job. Tou re done.	
Don't forget to share how it looks in	
your space and tagus on Instagram. @lifelyhome#homewithlifely!	
windignome with intery:	