
# CUPPA SERIES ASSEMBLY INSTRUCTION

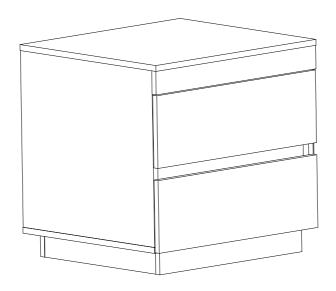

<u>Dimensions</u>
Width:550mm
Depth:500mm
Height:540mm

#### **CUPPA BEDSIDE TABLE**

#### IMPORTANT TIPS AND MAINTENANCE












i)Keep children and animal away to avoid choking hazard.


ii)Never put the liquid on the furniture.

iii)To avoid dulling,do not place directly to the sunlight.


iv)Never use ammonia cleaning product,because it will damage the finish.







vi)Two person required.




vii)Put a soft mat on the floor to protect the furniture before assembly.

COMPONENTS:-HARDWARE


Please check you have all the fittings part or tools are listed in below.

NO.	FITTINGS/TOOLS	QTY	NO.	FITTINGS/TOOLS	QTY
A.	DOWEL 8x40MM	20 Pcs	E.	DRAWER RUNNER-A&B	4 Pcs
В.	CAMBOLT+CAMNUT	26 Sets	G.	$\lambda$	8 Pcs
C.	SCREW M3.5x14MM	20 Pcs	Н.		4 Pcs
D.	SCREW M3.5x35MM	8 Pcs			

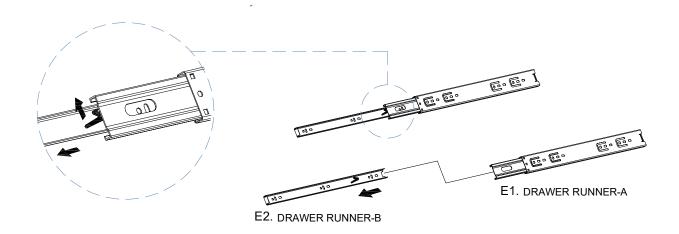


COMPONENTS:-PANELS


Please check you have all the panels are listed below.

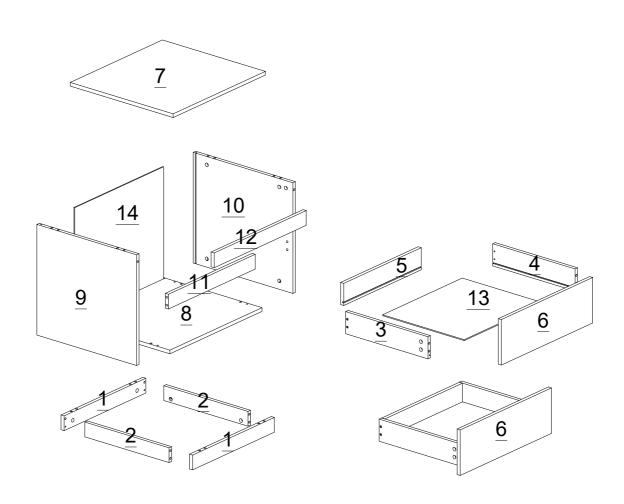



#### **PARTLIST**


1	BASE	2pcs	8	BOTTOM PANEL	1pc
2	BASE SIDE	2pcs	9	SIDE PANEL_L	1pc
3	DRAWER SIDE_L	2pcs	10	SIDE PANEL_R	1pc
4	DRAWER SIDE R	2pcs	11	FRONT PANEL	1рс
5	DRAWER BACK	2pcs	12	SKIRT PANEL	1pc
6	DRAWER FRONT	2pcs	13	DRAWER BASE	2pcs
7	TOP PANEL	1рс	14	BACK PANEL	1pc

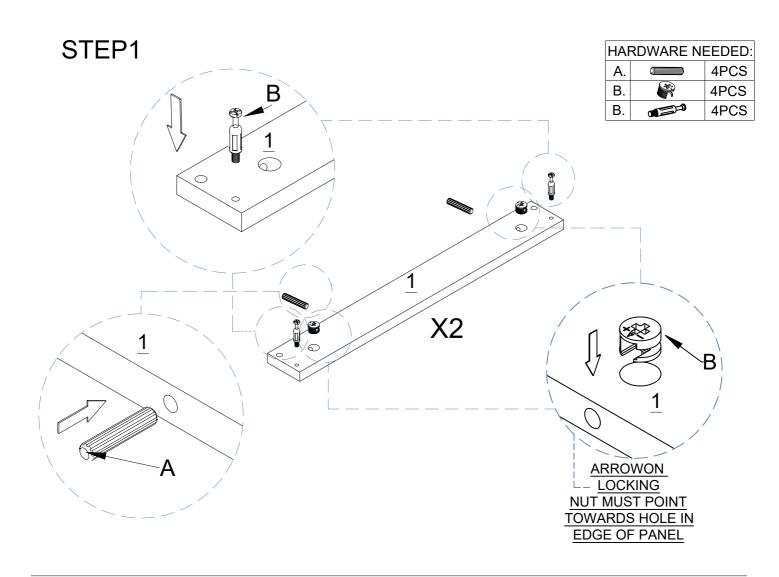


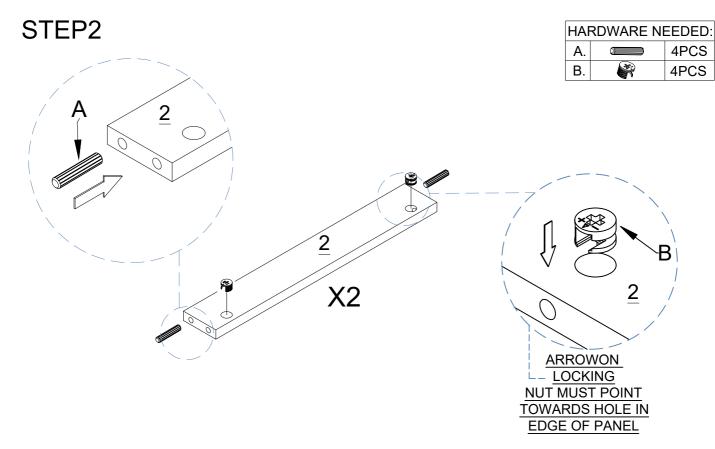


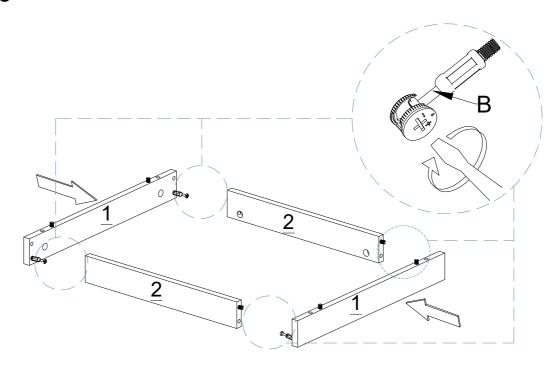

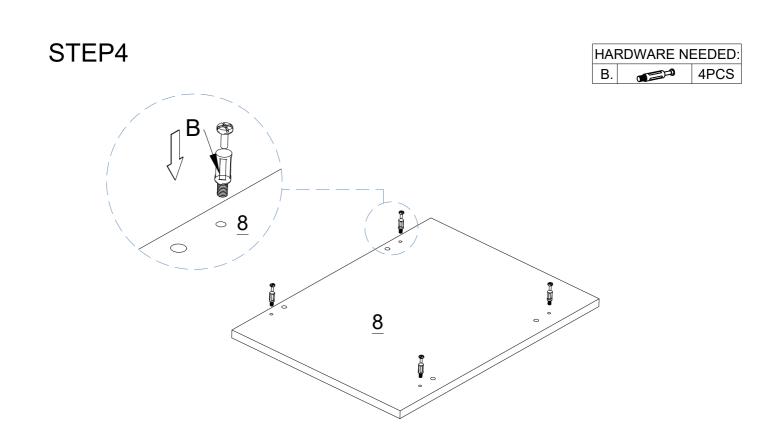

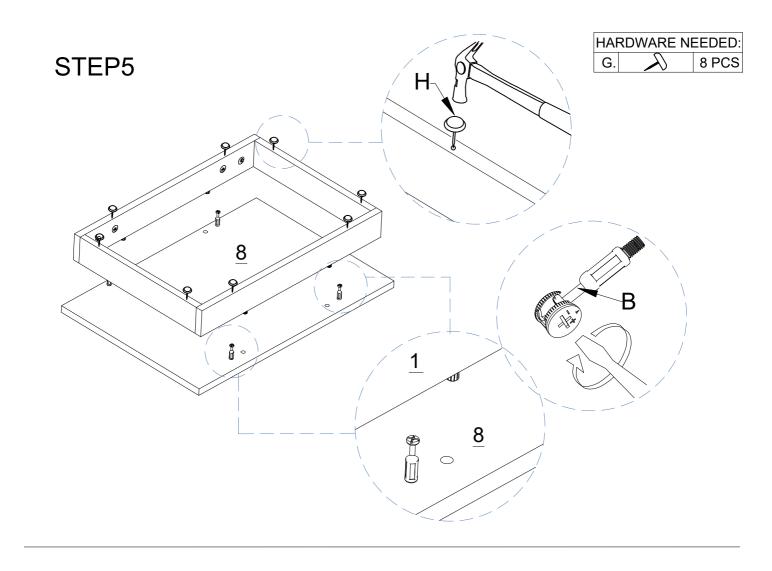


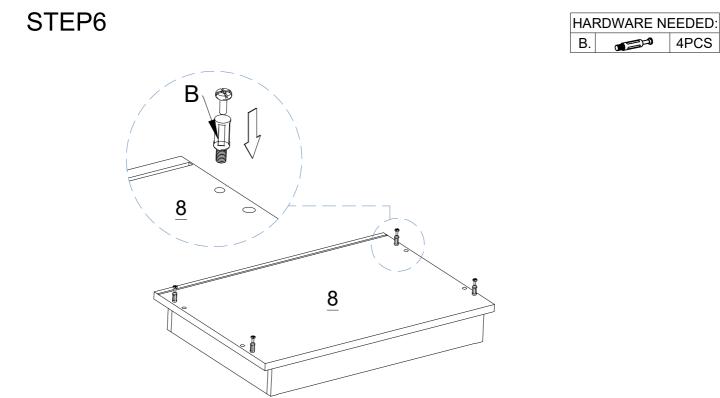


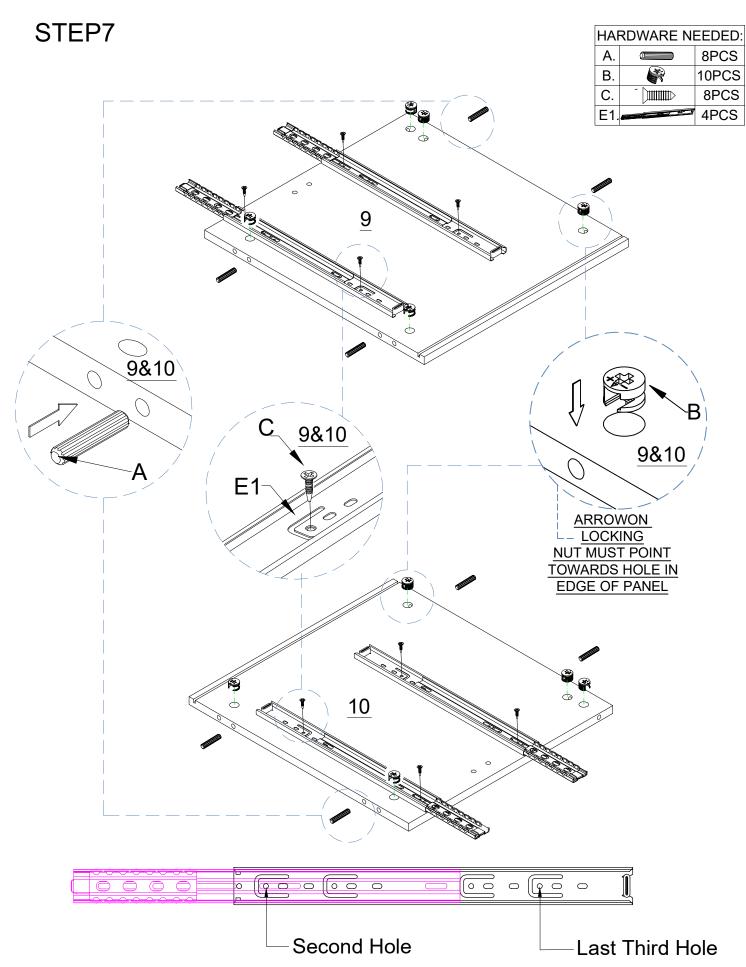



SCREW MUST BE INSERTED
IN THE SECOND HOLE ON THE
DRAWER RUNNER




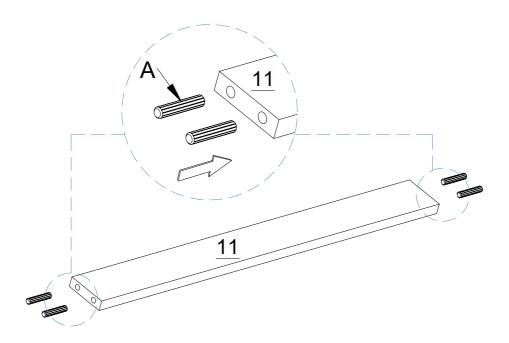





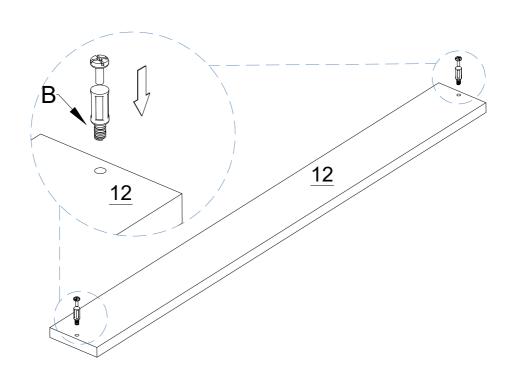


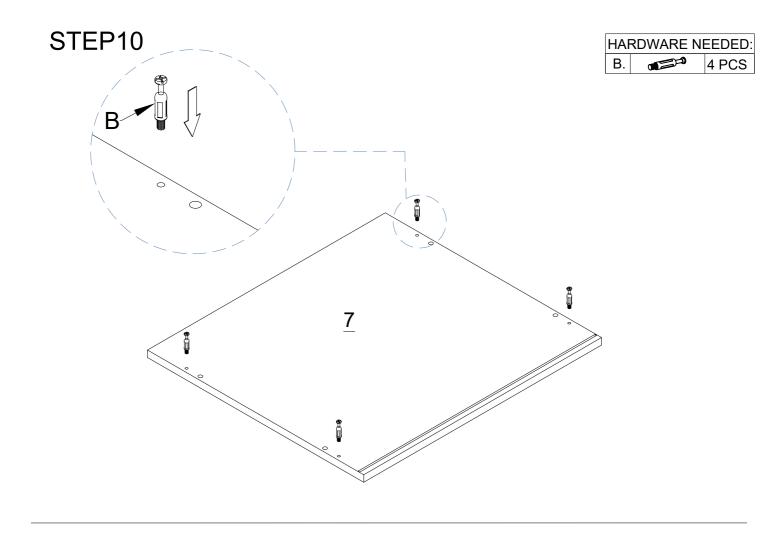


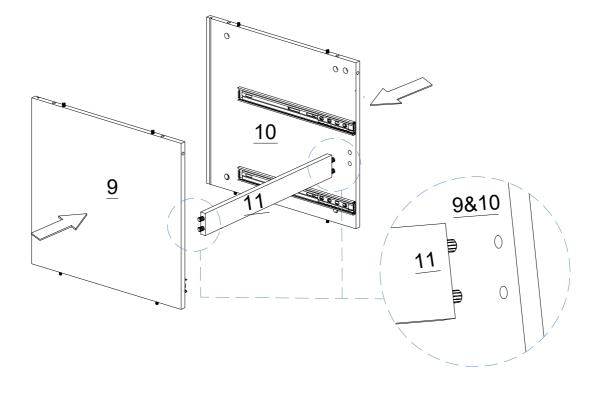

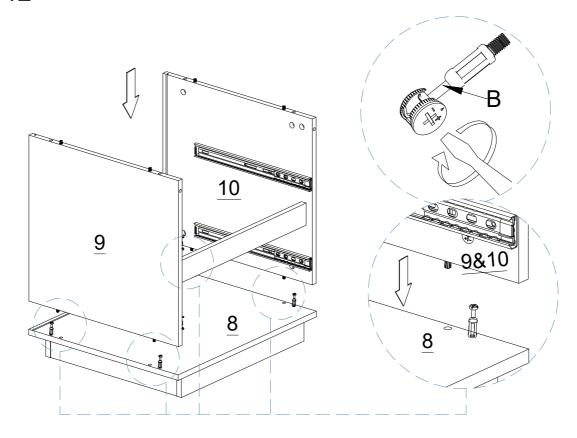


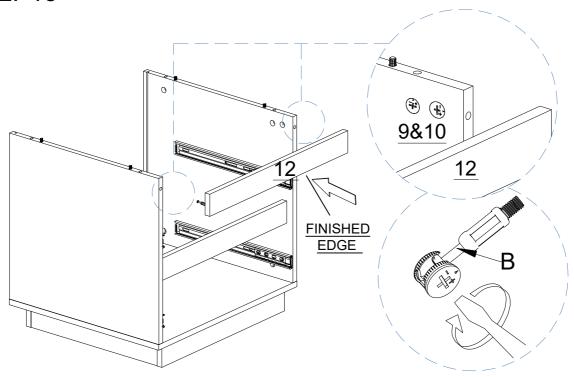


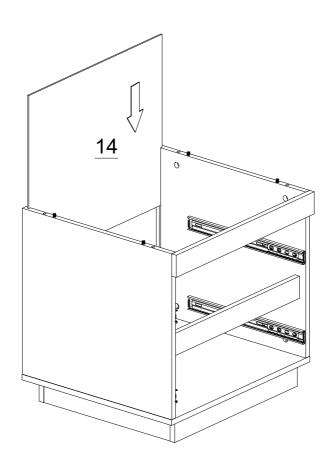


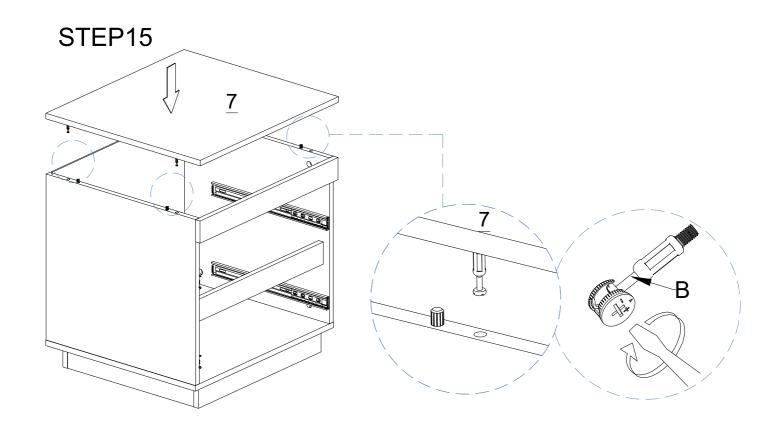





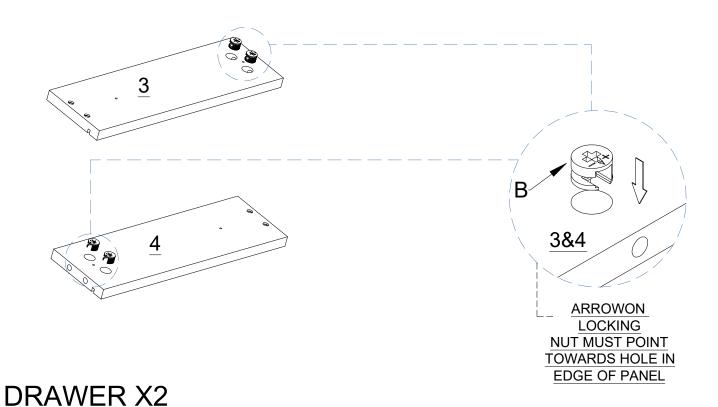

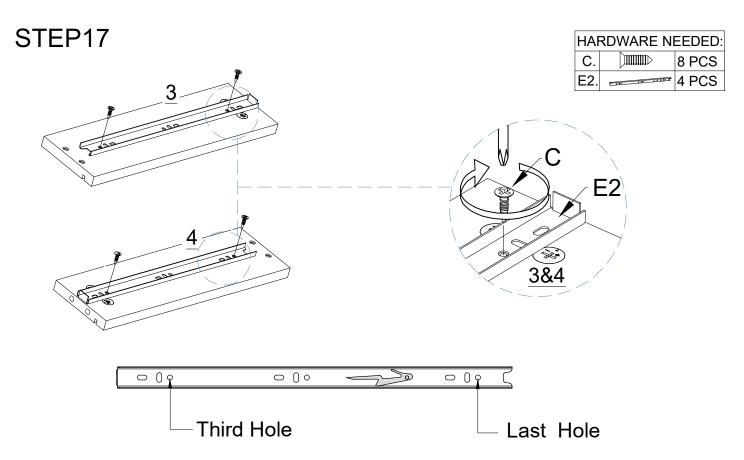


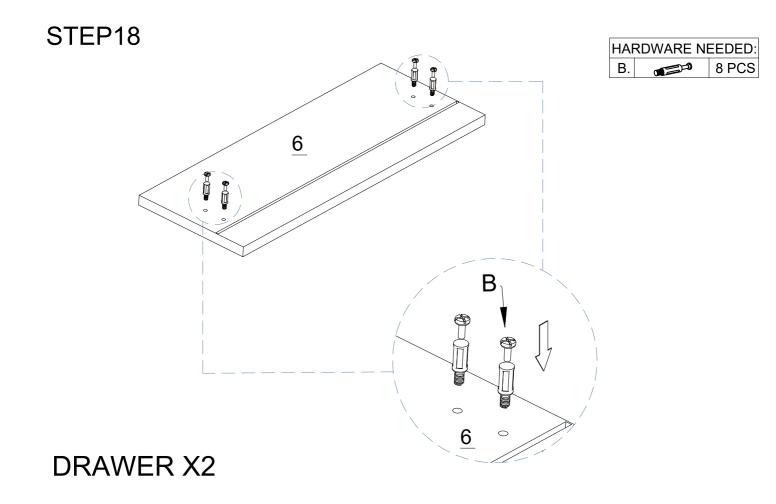


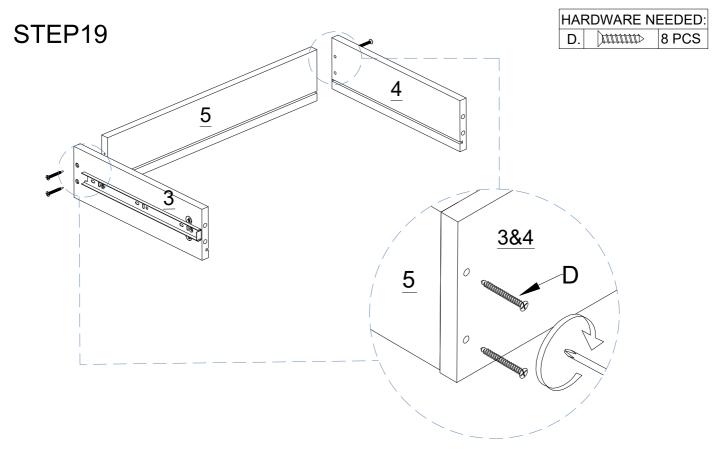

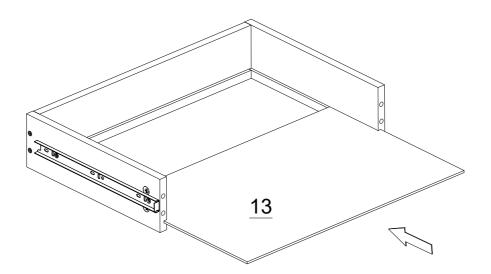

# **DRAWER X2**

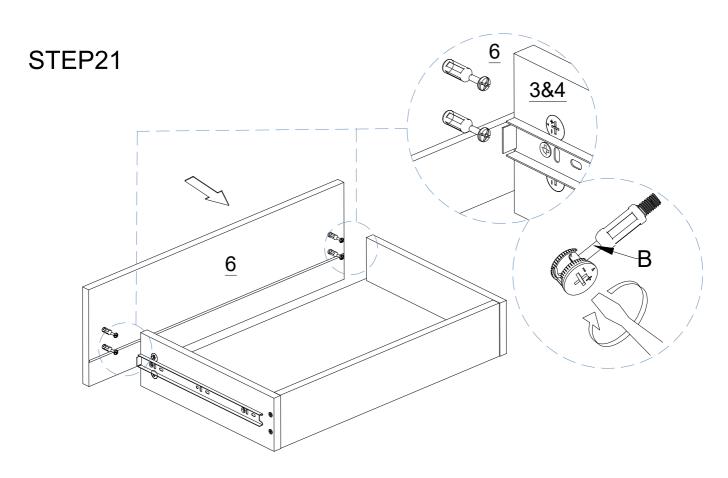

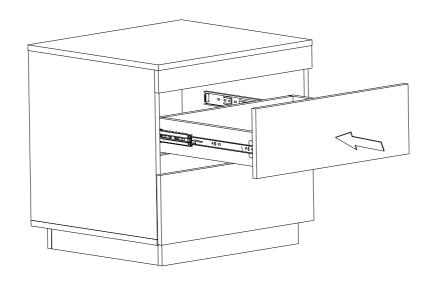

# **DRAWER X2**



HAF	HARDWARE NEEDED:					
H.		4 PCS				
C.		4 PCS				

