
Assemble Instructions

Coco Series

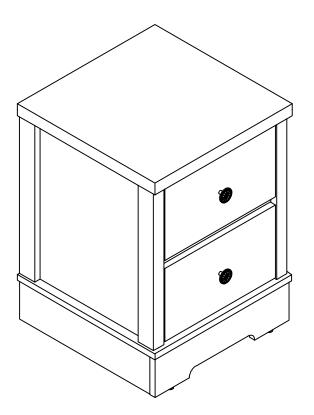

Lifely*

Product Code CCO-BT45-WOK Bedsidet Table

Dimensions(W x D x H)

400*400*545mm

Important

Please read through instructions carefully Before assembly and keep for future reference.

For our full catalogue of assembly instructions, Visit:lifely.com.au/assembly.

Important Tips and Maintenance





 Keep children and animals away from working area as smaller parts may cause choking if swallowed



2. Newer place liquids or anything damp upon furniture as it will mark,Ensure a coaster or running is beneath.




 New use ammonia based cleaning products as it will damage the finish.



4. To avoid fading,keep furniture out of direct sunlight.



5.
Use a soft or damp cloth(dry cloth)when wiping or cleaning



6. Two person are required



Lay a soft matt down to protect the furniture pieces before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead .E.g. "You're so good looking".

This 26-Step assembly should take around 45 minutes with an Allen Key-or 30 minutes with an electric drill. Godspeed.

Designed for everyday

Components Hardware

Please check you have all the fittings part or tools are listed in below.









No.E

Quantity:2Pcs Handle



No.B Quantity:21Pcs Dowel 8*40mm



No.F Quantity:12Pcs Screw M3.5*35mm





No.G Quantity:4Pcs Ground Nail



No.D Quantity:2Pcs Drawer Runner A-L/R



No.H Quantity:4Pcs Back Plate Clamp





Components Panels & Part List

Please check you have all the panels are listed below.

1.Back legx1
2.Side leg_rightx1
3. Side leg_leftx1
4.Front legx1
5.Sidepanel_leftx1
6.Front crossbarx1
7.Side panel_rightx1
8.Top panelx1


Back panelx'
10.Bottom panelx
11. Drawer backx2
12. Drawer side_Ix2
13. Drawer side_rx2
14. Drawer frontx2
15. Drawer basex2

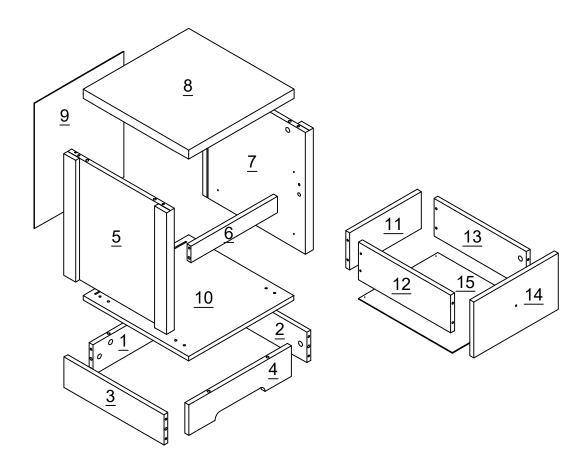

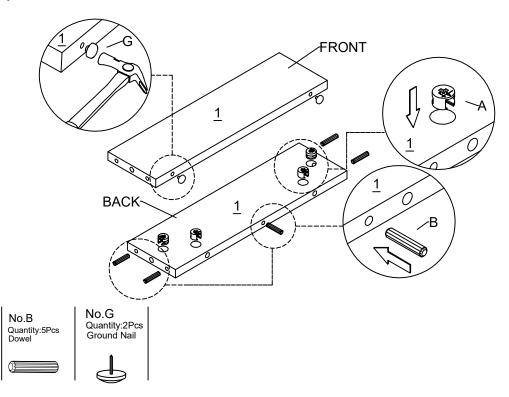



STEP2


No.A Quantity:4Pcs Cam Bolt

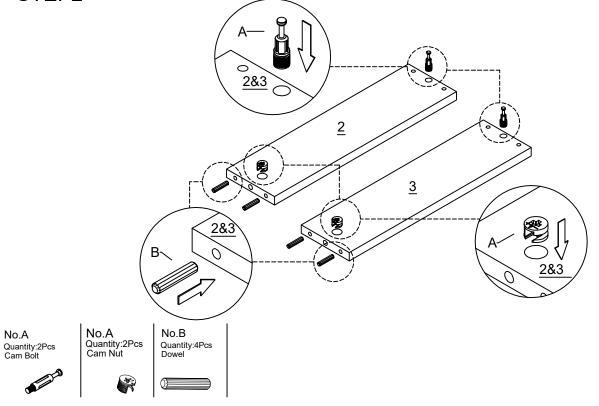

CCO-BT45-WHT / 6

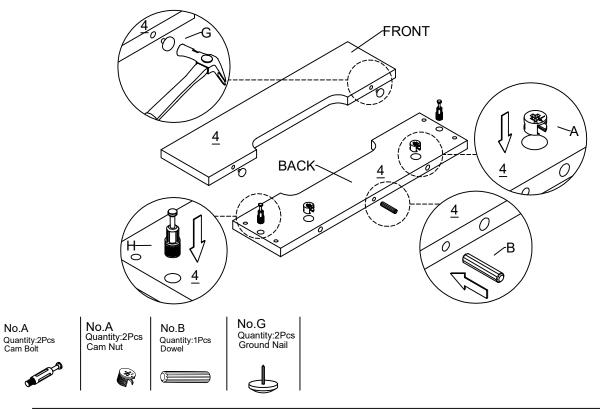


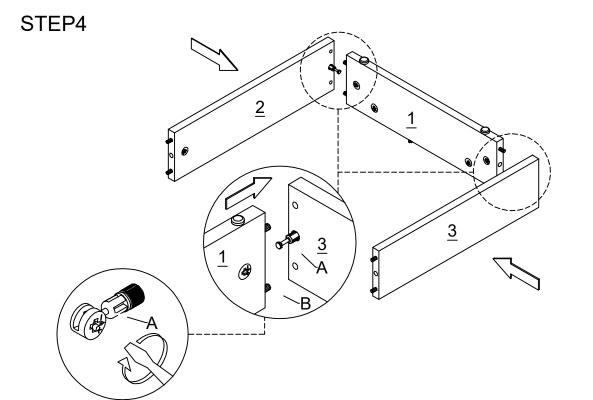


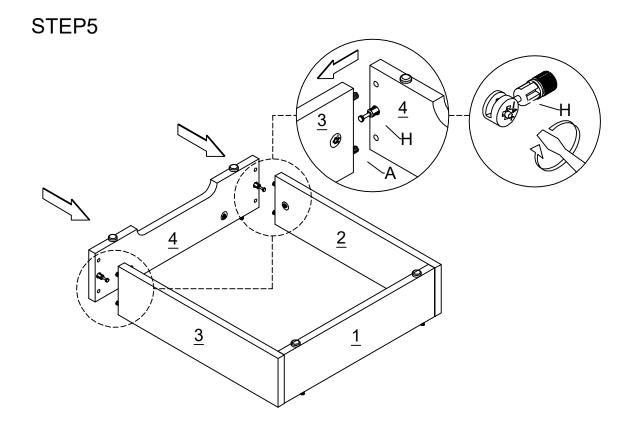

No.A


Quantity:1Pcs Cam Bolt

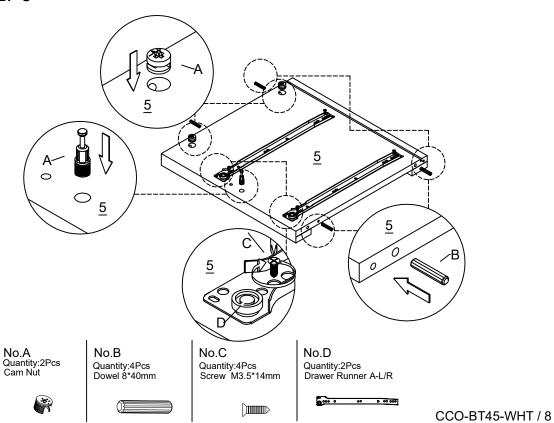


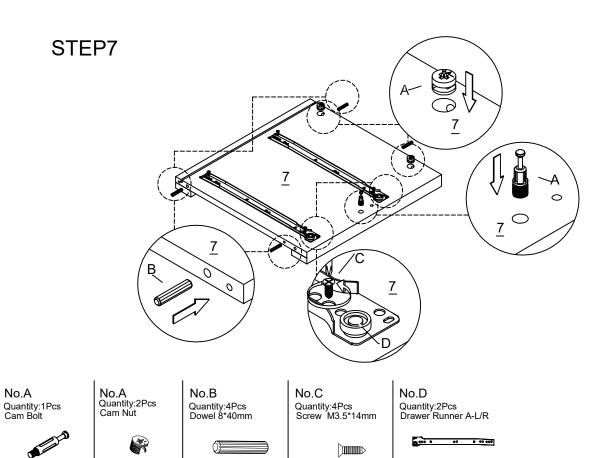

No.A Quantity:2Pcs Cam Nut


No.B

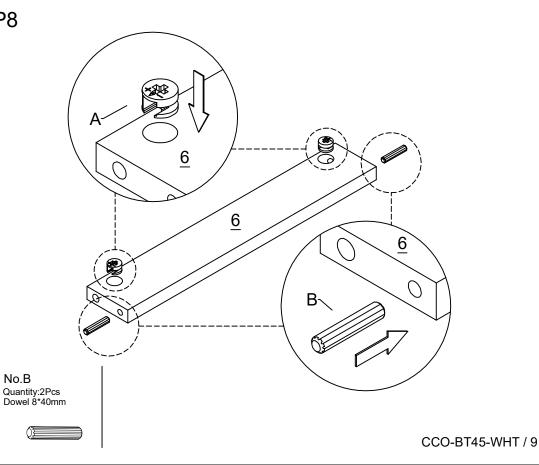


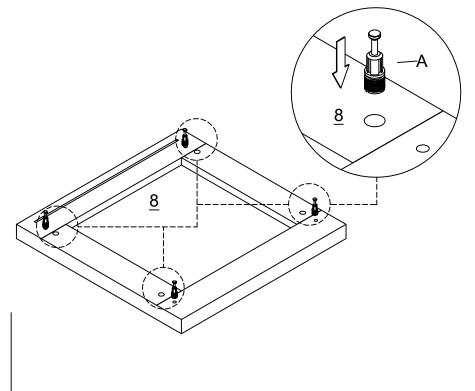



STEP10


No.A Quantity:4Pcs Cam Bolt

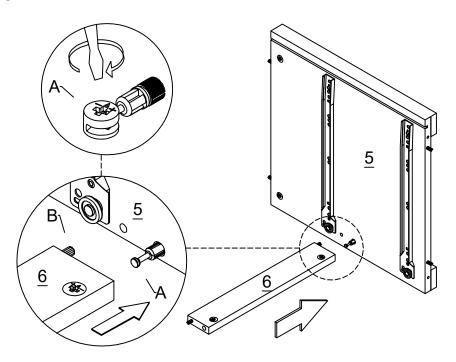


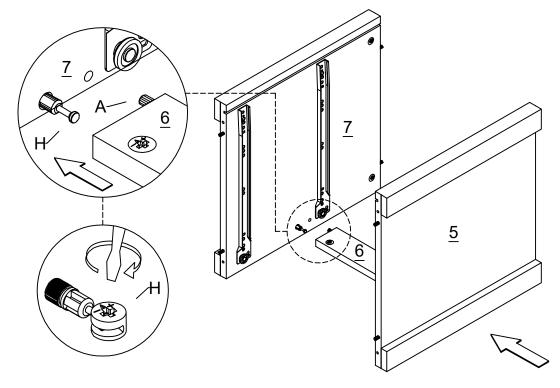

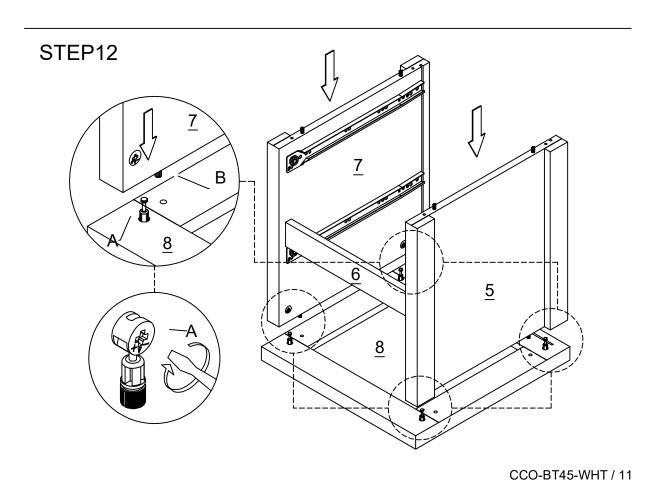

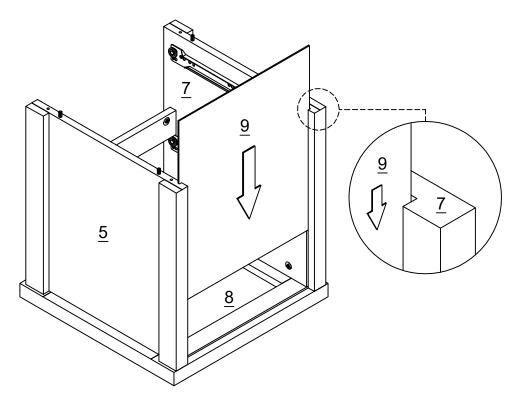


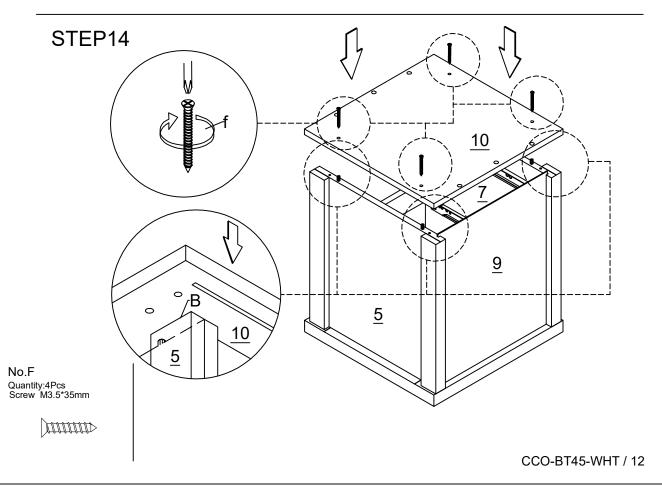


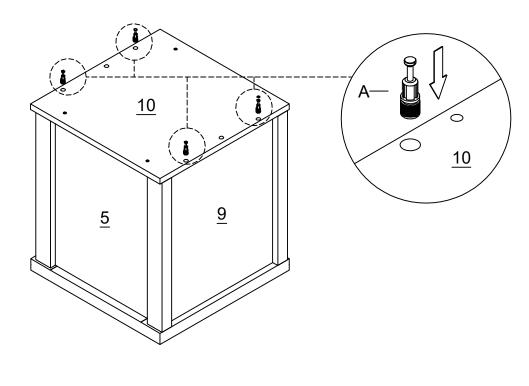






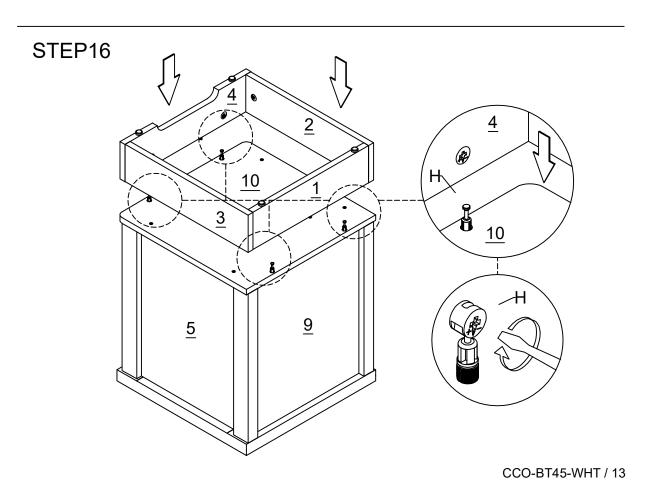

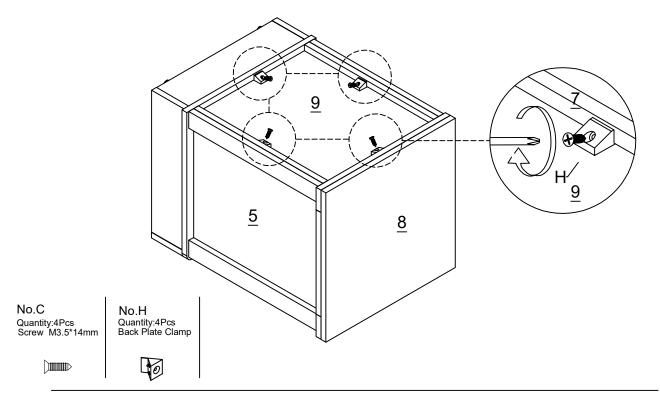


STEP18

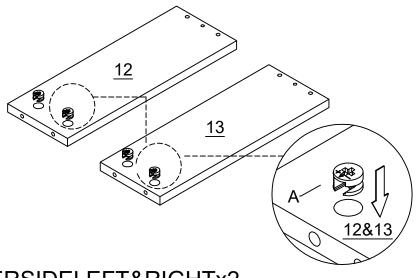


DRAWERSIDELEFT&RIGHTx2



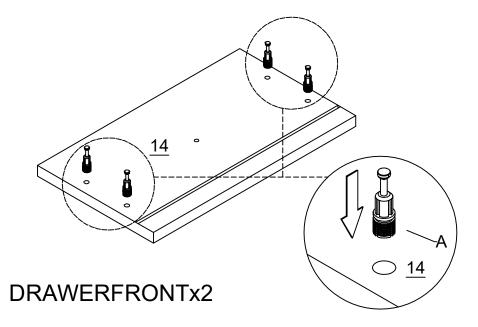




STEP21

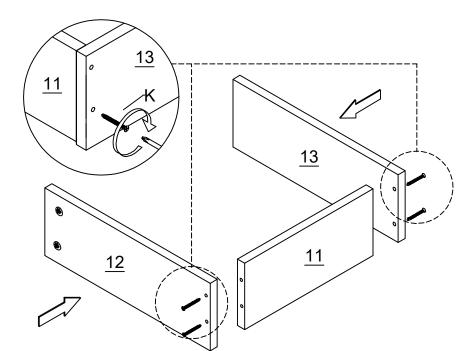



DRAWERx2

No.F Quantity:8Pcs Screw M3.5*35mm

CCO-BT45-WHT / 15

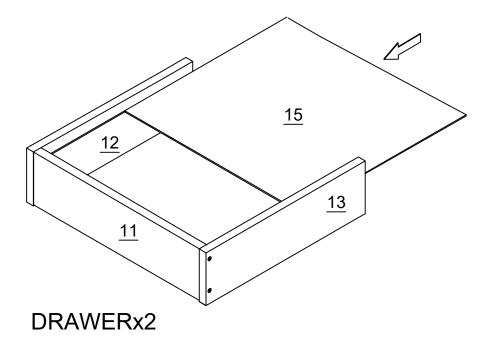

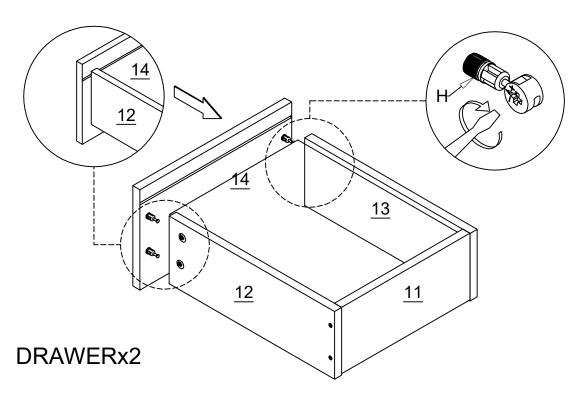


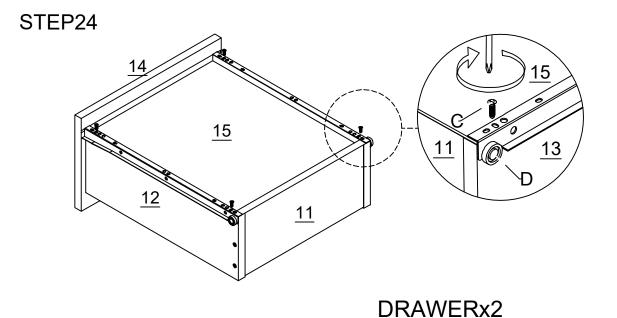









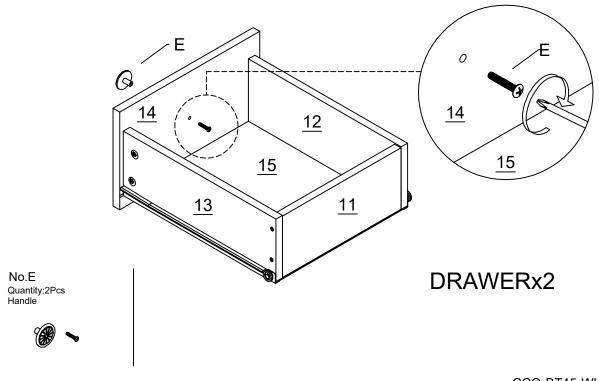

CCO-BT45-WHT / 17

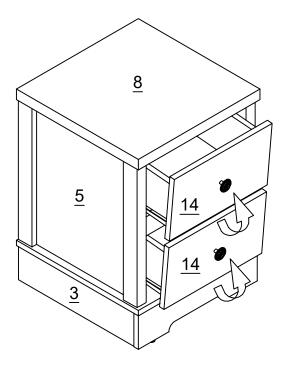

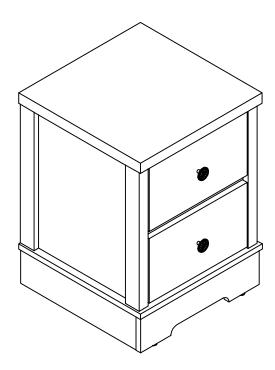

lifely.com.au

Great Job, You're done!

Don't forget to share how it looks in your space and tag us on Instagram.

@lifelyhome#homewithlifely!