
Assemble Instructions

Coco Series

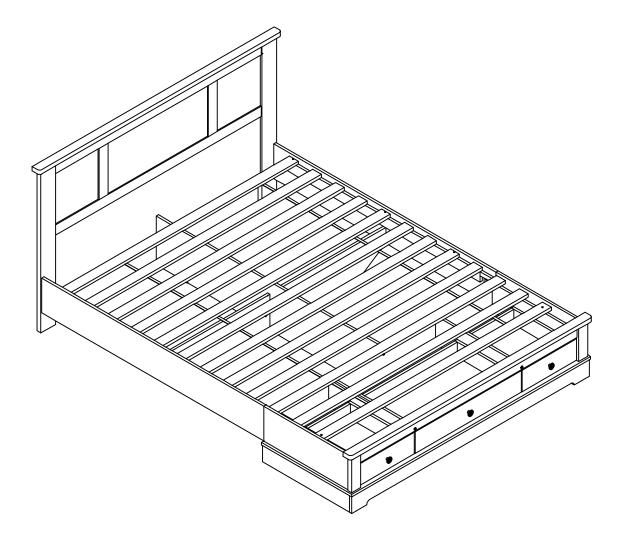

Lifely*

Product Code CCO-DEBED137-WHT King Bed Frame Dimensions(W x D x H)

1995*460*950mm

Important

Please read through instructions carefully Before assembly and keep for future reference.

For our full catalogue of assembly instructions, Visit:lifely.com.au/assembly.

Important Tips and Maintenance





 Keep children and animals away from working area as smaller parts may cause choking if swallowed



2. Newer place liquids or anything damp upon furniture as it will mark, Ensure a coaster or running is beneath.



3. New use ammonia based cleaning products as it will damage the finish.



 To avoid fading,keep furniture out of direct sunlight.



5. Use a soft or damp cloth(dry cloth)when wiping or cleaning surface.



6. Two person are required



7.
Lay a soft matt down to protect the furniture pieces before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead .E.g. "You're so good looking".

This 49-Step assembly should take around 75 minutes with an Allen Key-or 55 minutes with an electric drill. Godspeed.

Designed for everyday

Components Hardware

Please check you have all the fittings part or tools are listed in below.

No.A Quantity:66Pcs Cam Bolt



No.A Quantity:66Pcs Cam Nut

Quantity:88Pcs Dowel

No.B

No.C Quantity:12Pcs Double Head Bolt No.C Quantity:24Pcs Cam Nut

_to

No.D Quantity:48Pcs Screw M3.5*35mm

crew M3.5*35mm Conr

Quantity:4Pcs Connect Metal Sheet

No.E

No.F Quantity:74Pcs Screw M3.5*14mm

Quantity:4Pcs Plastic Hammer Head Screw No.H Quantity:12Pcs Screw M3.5*25mm

]

€

No.I Quantity:4Pcs Angle Iron



No.J Quantity:2Pcs Dowel



No.K Quantity:3Pcs Handle



No.L Quantity:3Pcs Drawer Runner

No.G




No.M Quantity:1Pcs Screwdriver



Components Panels & Part List

Please check you have all the panels

Please check you have all the panels		
are listed below.		
1. Backleg footboardx1	CTN 1/3	20.Bottom panel footboard x1 CTN 1/3
2. Side leg footboard right x1	CTN 2/3	21.Centre rall bedx1 CTN 3/3
3. Side leg footboard left x1	CTN 2/3	22.Left support bed x2 CTN 2/3
4. Middleleg footboard x2	CTN 2/3	23.Side support bracex2 CTN 1/3
5. Frontleg footboard x1	CTN 1/3	24.Right side rail panel x1 CTN 3/3
6. Large pillar leg leftx1	CTN 1/3	25.Left side rail panelx1 CTN 3/3
7. Large pillar leg rightx1	CTN 1/3	26.Large drawer back x1 CTN 2/3
8. Headboard upperx1	CTN 1/3	27.Drawer side leftx3 CTN 1/3
9. Headboardlowerx1	CTN 2/3	28. Drawer side rightx3 CTN 1/3
10. Back panel footboardx1	CTN 3/3	29.Large drawerfront x1 CTN 2/3
11. Middle panel footboard x2		30.Large drawer base x1 CTN 1/3
		-
12.Inner right side footboardx1 13.Inner left side footboardx1		31.Drawer base support rail x1 CTN 2/3
		32.Small drawer backx2 CTN 2/3
14. Outer left side footboard x1		33. Small drawer front leftx1 CTN 2/3
15.Outer right side footboard x1	CIN 2/3	34.Small drawer front right x1 CTN 2/3
16.Small pillar leg leftx1	CTN 2/3	35.Small drawer basex2 CTN 1/3
17.Small pillar leg rightx1 18.Footboard top crossbar x1	CTN 2/3	36.Bed slatx9 CTN 3/3
19.Headboard top panelx1		37. Footboard top panel x1 CTN 1/3
19. Headboard top parier XT	○	38.Bed slat with screw holex3 CTN 3/3
6 9 :	32 7 21 22 24	35 30 29 29 35 31 34 12 15
22 25 25	14	CCO - DBED137 - WHT / 5

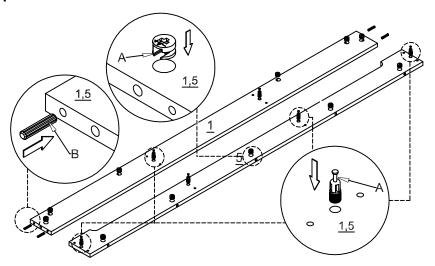

No.A Quantity:6Pcs Cam Bolt

No.A

Quantity:2Pcs Cam Bolt





No.A Quantity:11Pcs Cam Nut




No.B Quantity:4Pcs Dowel




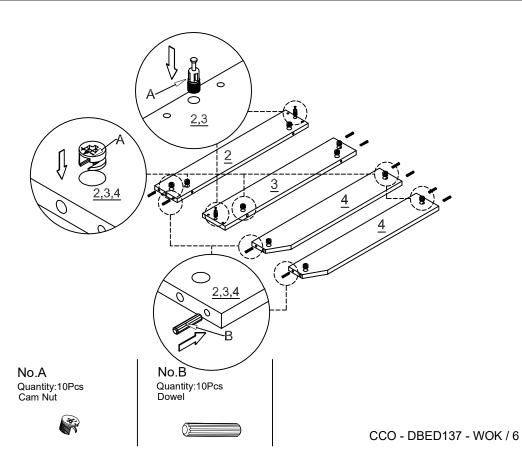


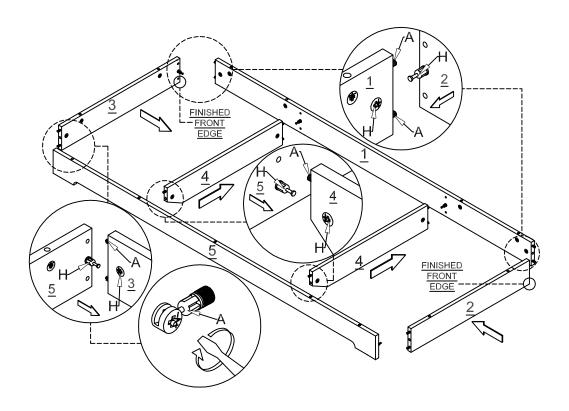


No.C Quantity:10Pcs Cam Nut No.B Quantity:2Pcs Dowel CCO - DBED137 - WHT / 6

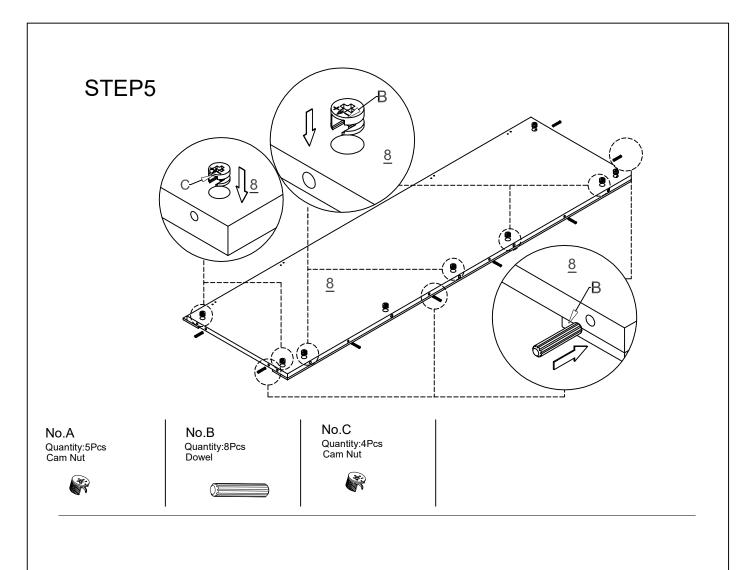

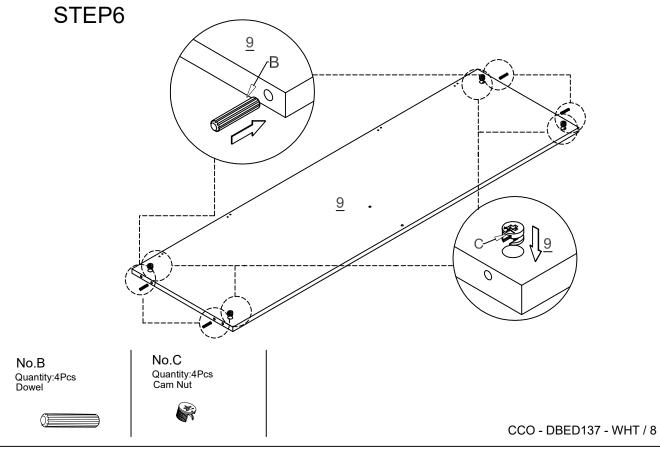

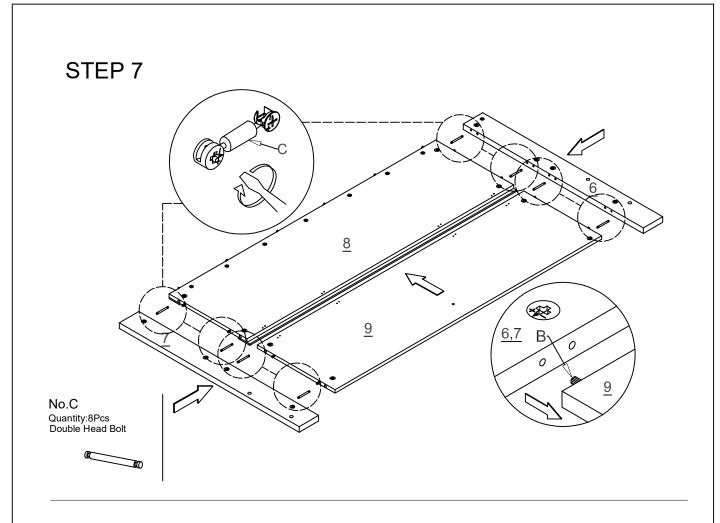

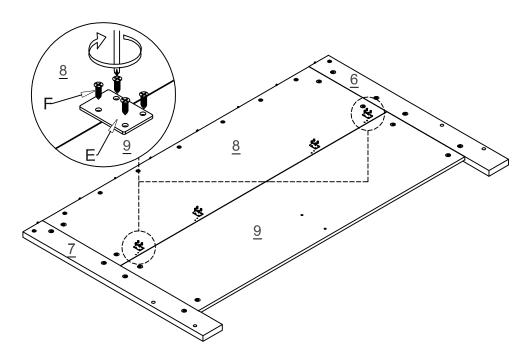


No.E Quantity:4Pcs Connect Metal Sheet





No.F Quantity:16Pcs Screw M3.5*14mm




CCO - DBED137 - WHT / 9

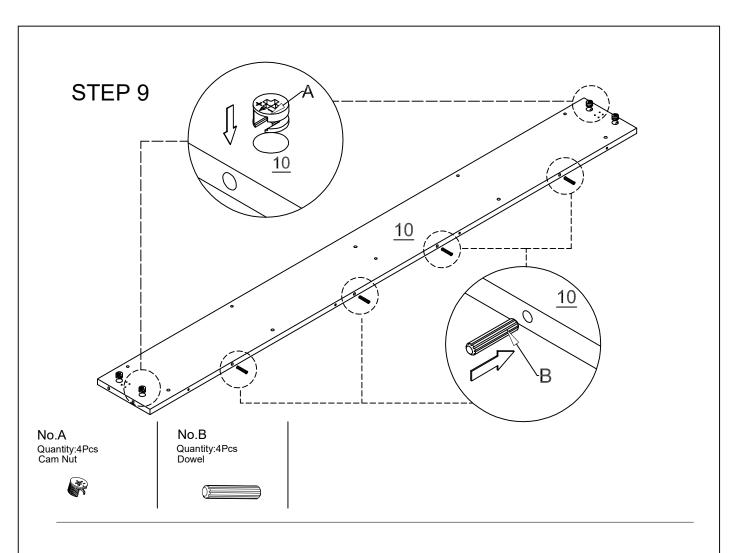

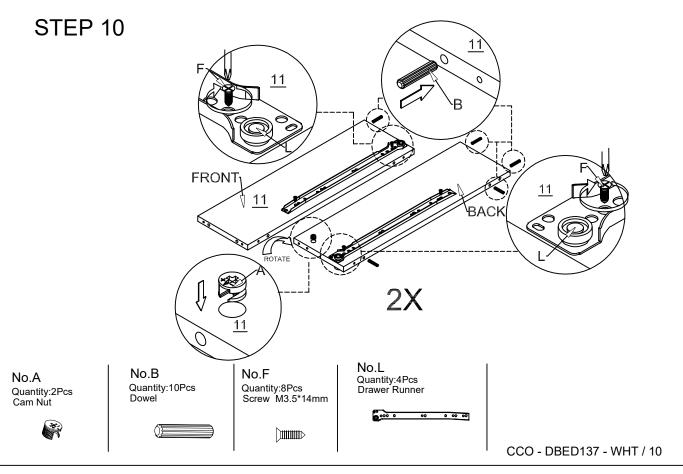

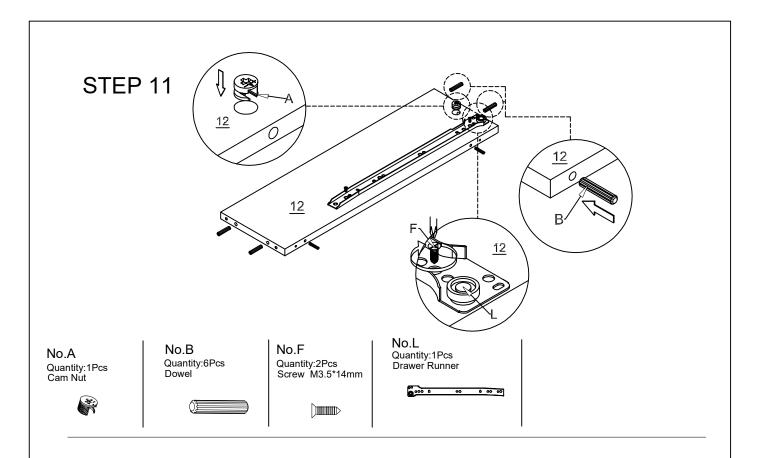

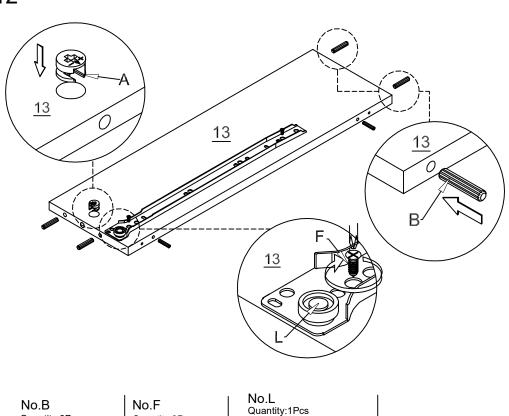

No.A Quantity:1Pcs Cam Nut



Quantity:6Pcs Dowel




Quantity:2Pcs Screw M3.5*14mm




No.L Quantity:1Pcs Drawer Runner



CCO - DBED137 - WHT / 11

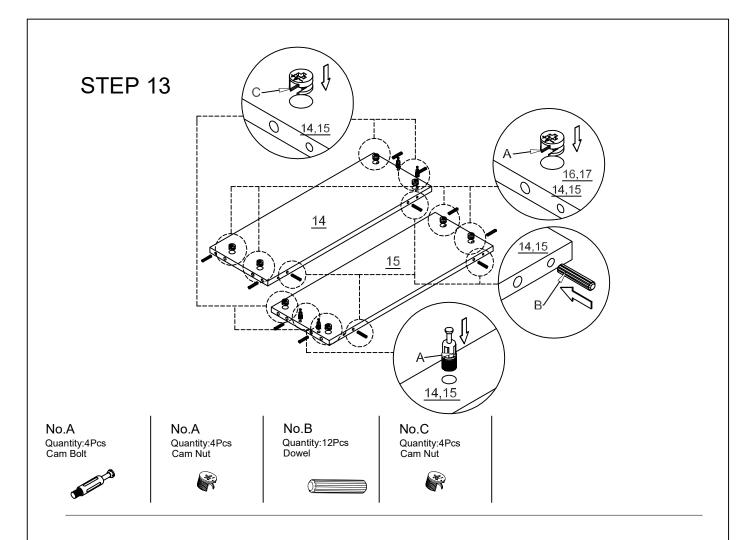


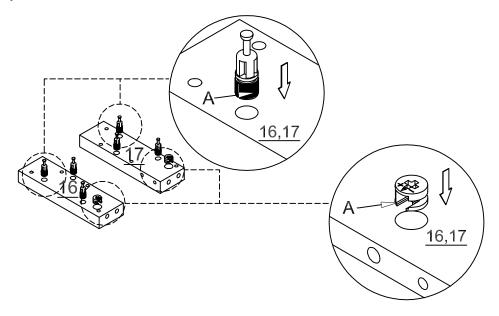



No.A Quantity:6Pcs Cam Bolt





No.A Quantity:2Pcs Cam Nut




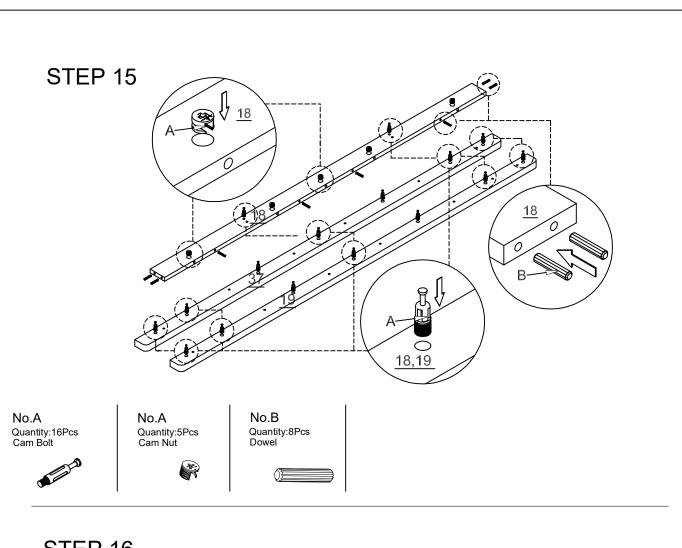


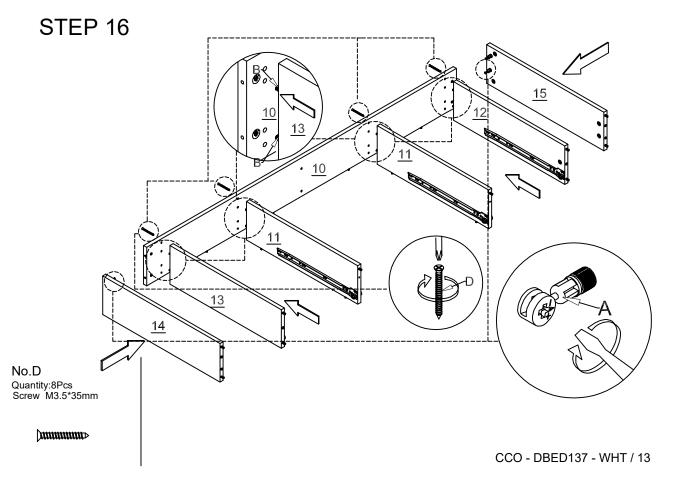


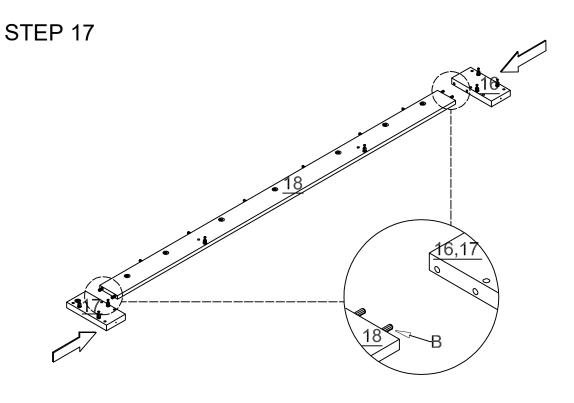


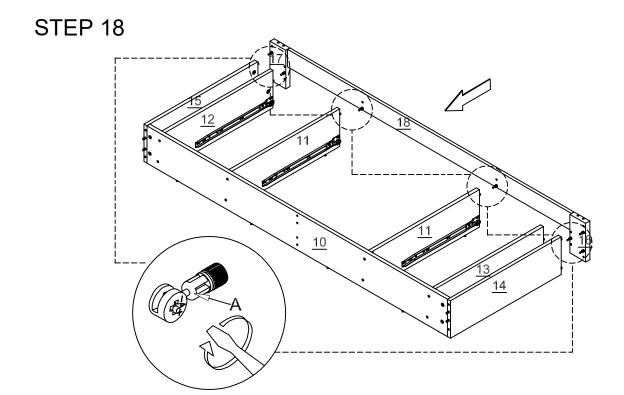


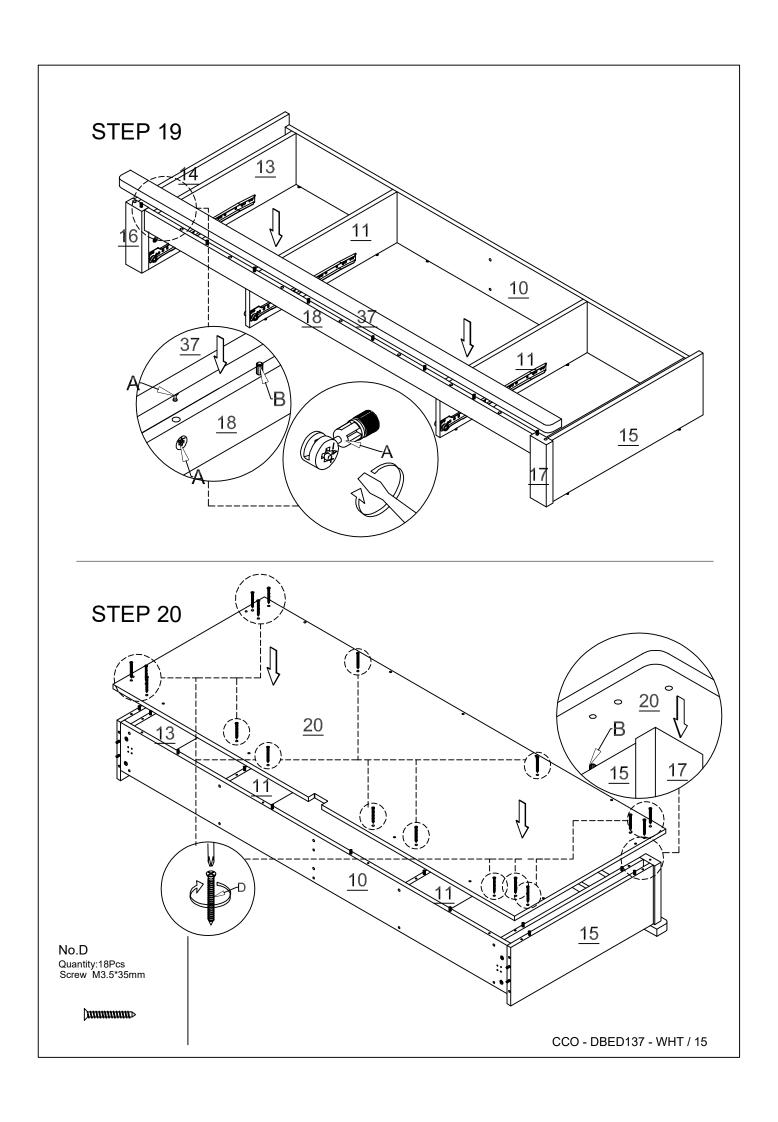


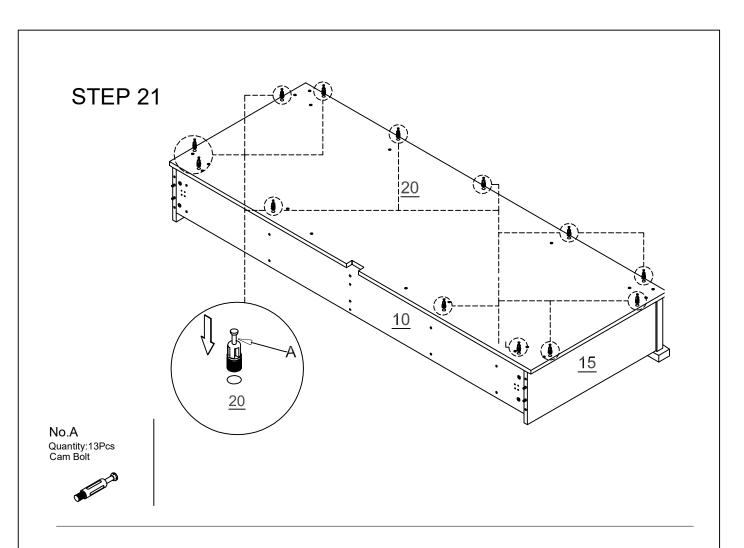


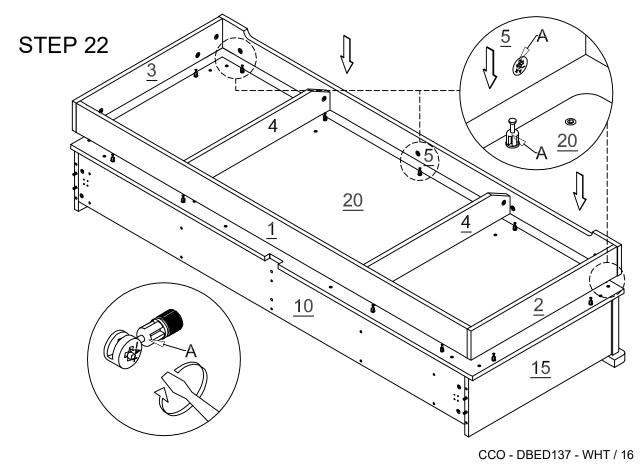


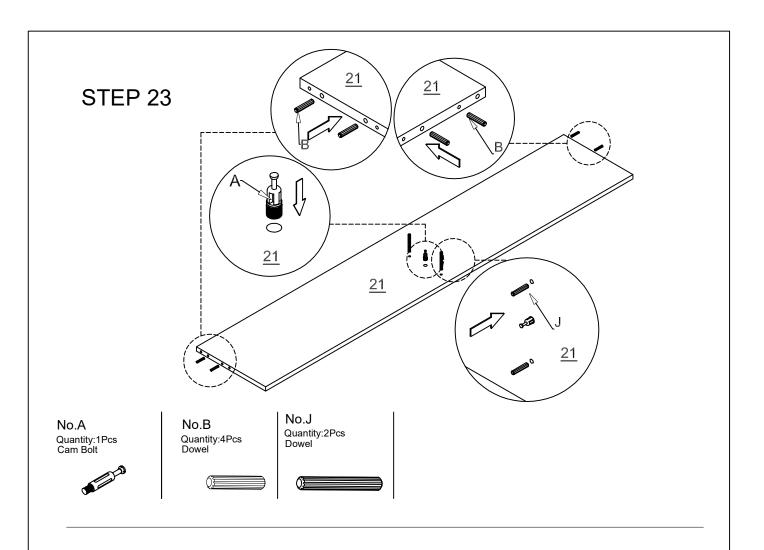


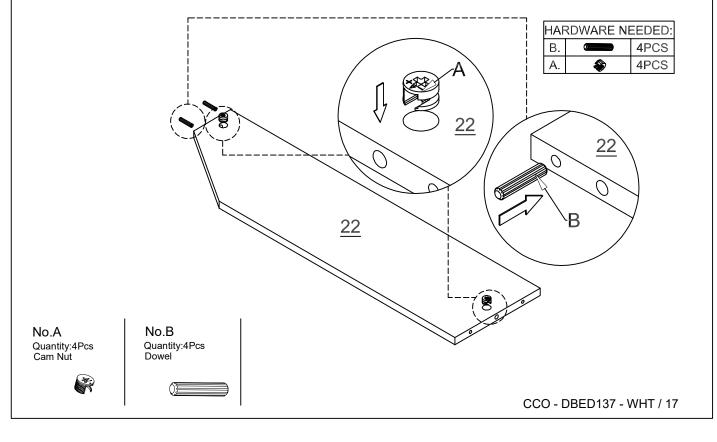


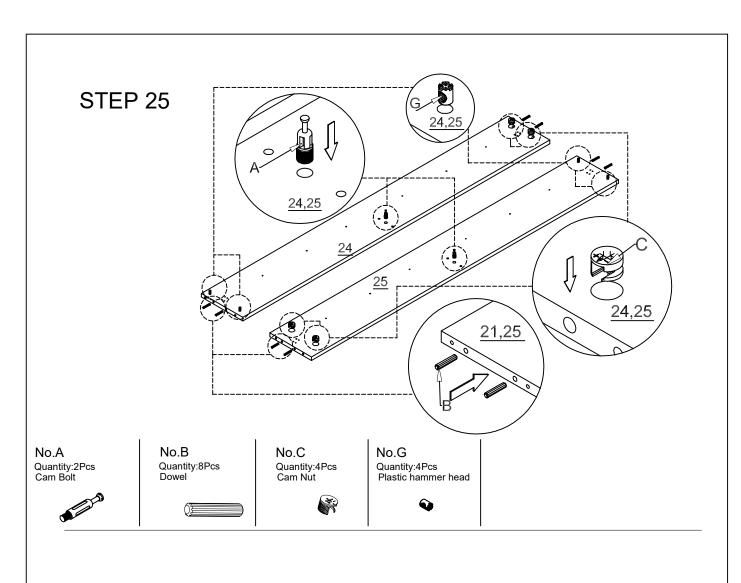


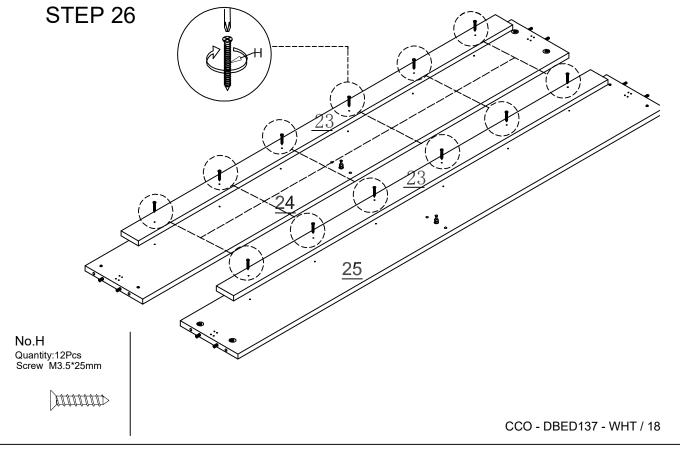


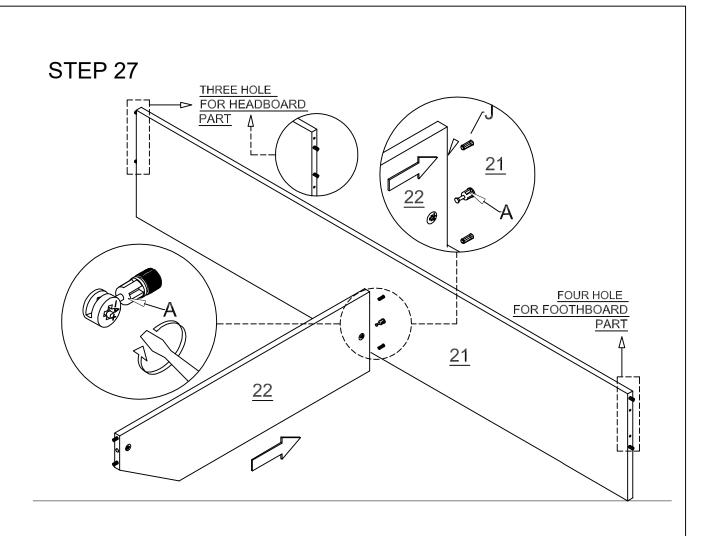


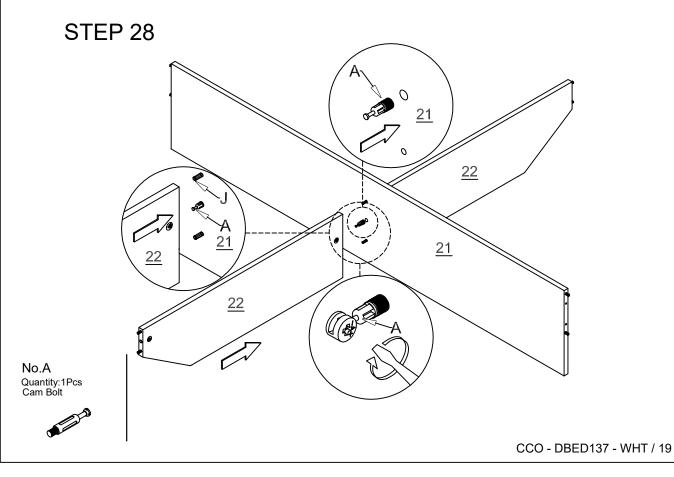


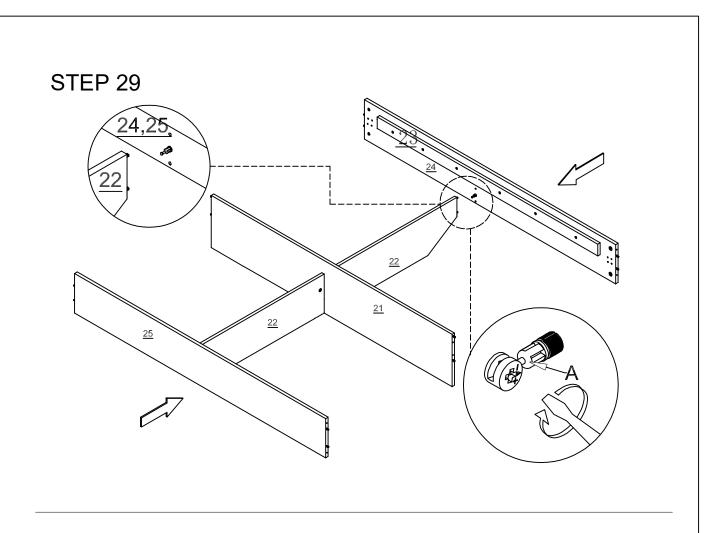


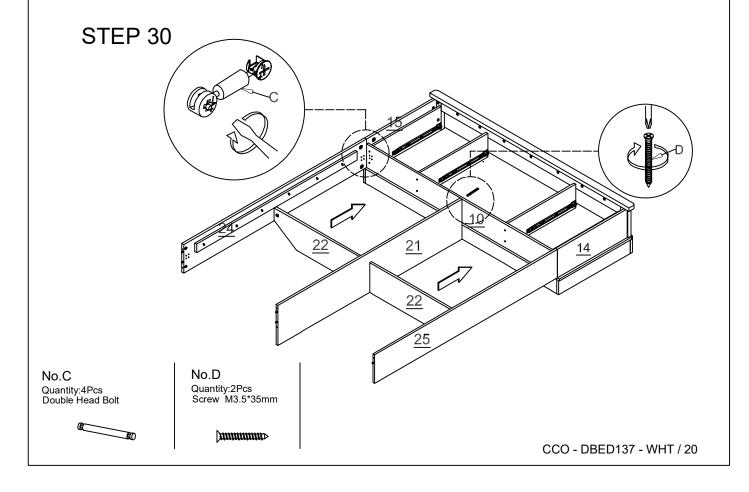

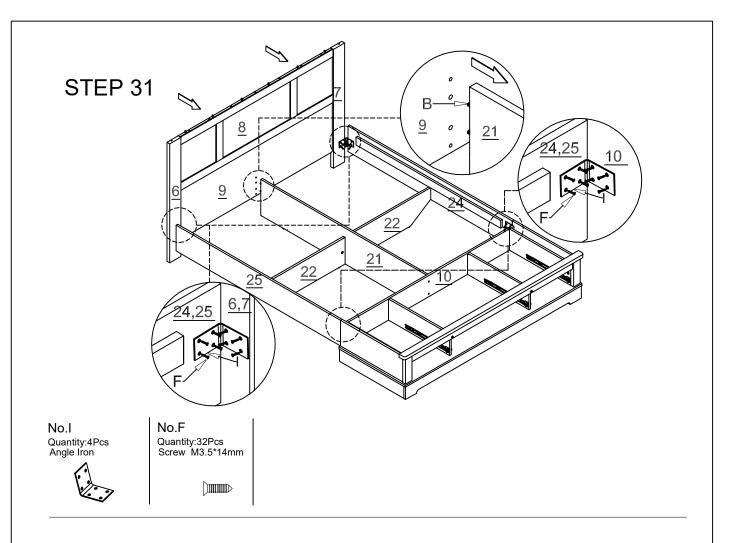

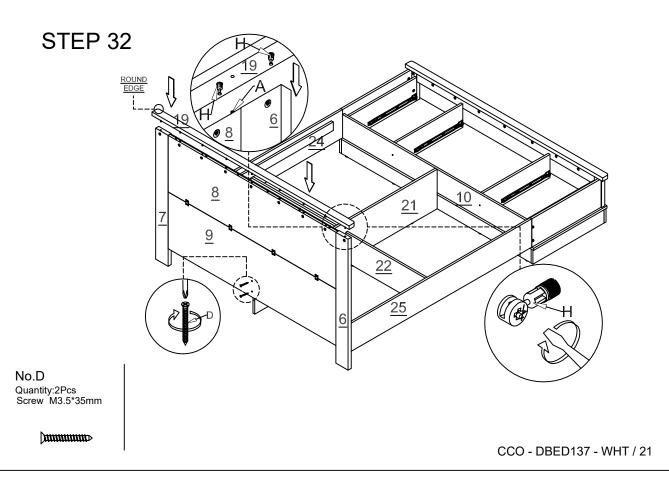


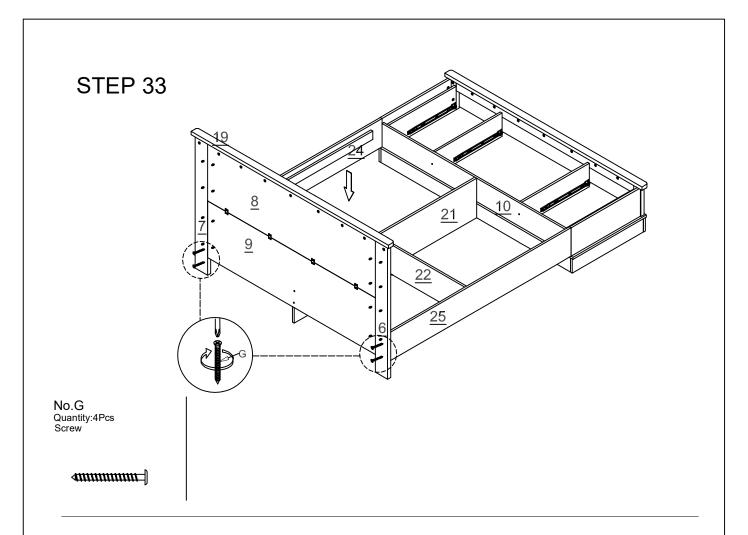


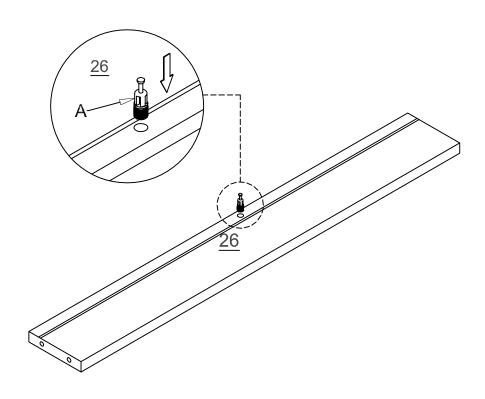



No.A Quantity:1Pcs Cam Bolt




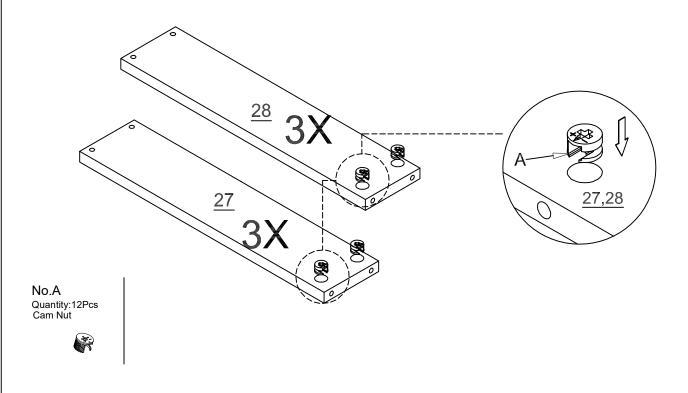

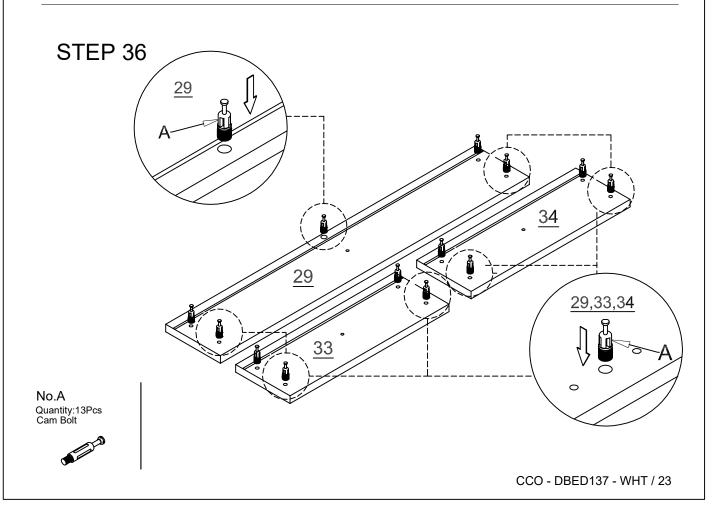

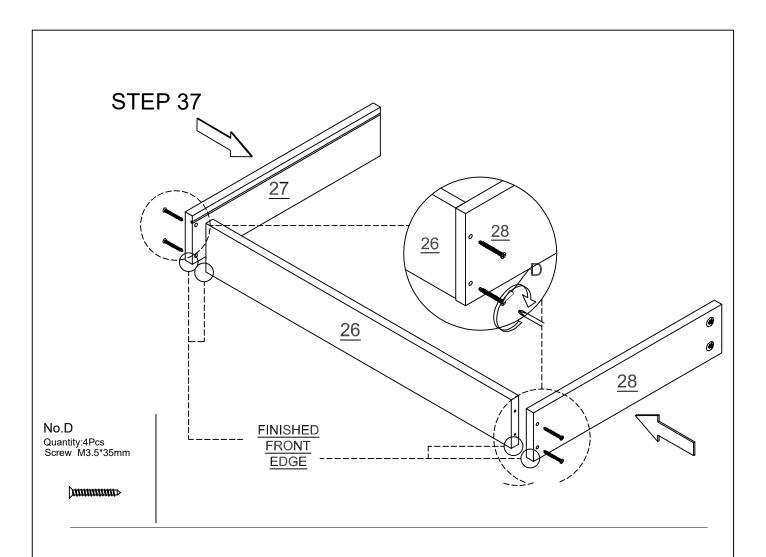


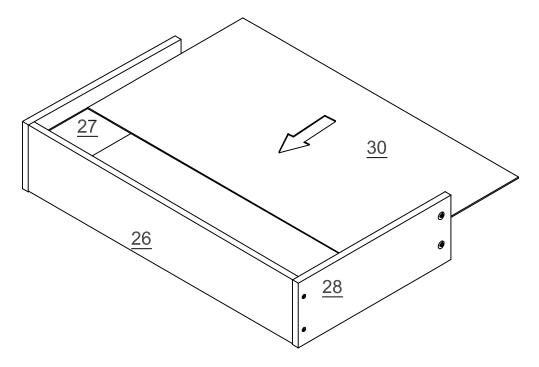


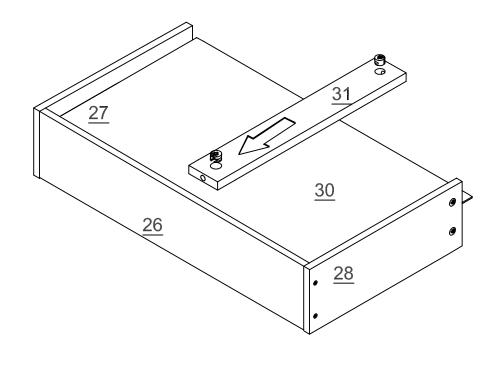







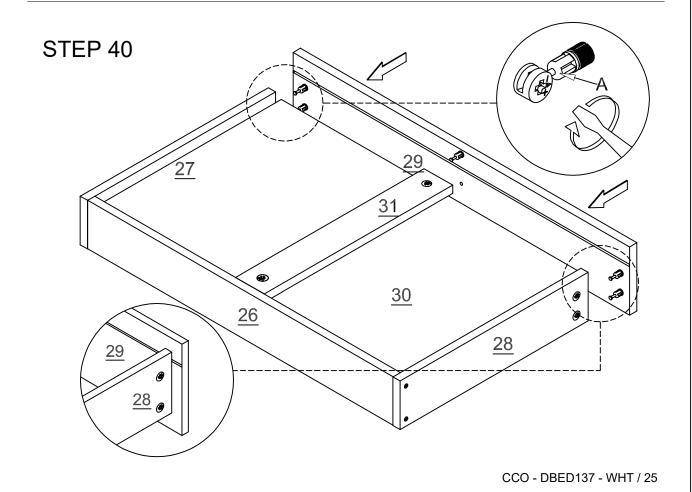


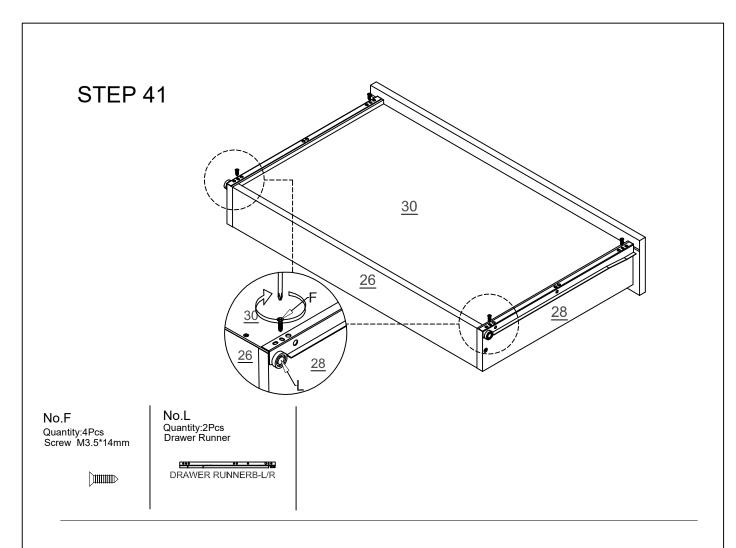

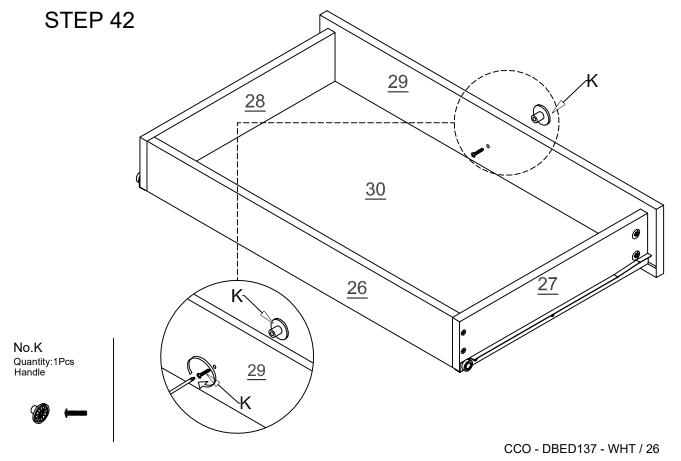

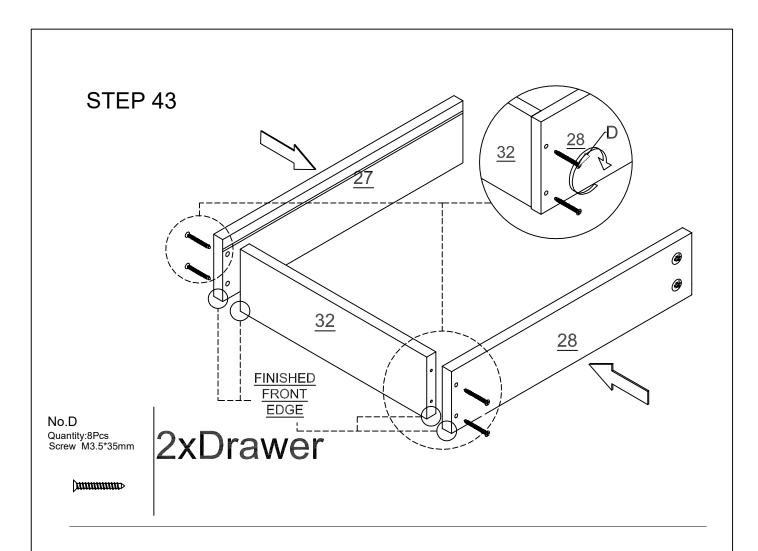





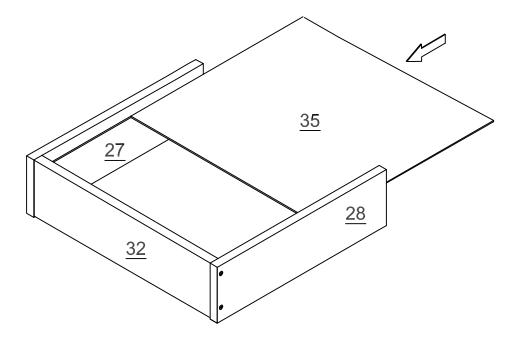



2xDrawer


CCO - DBED137 - WHT / 27

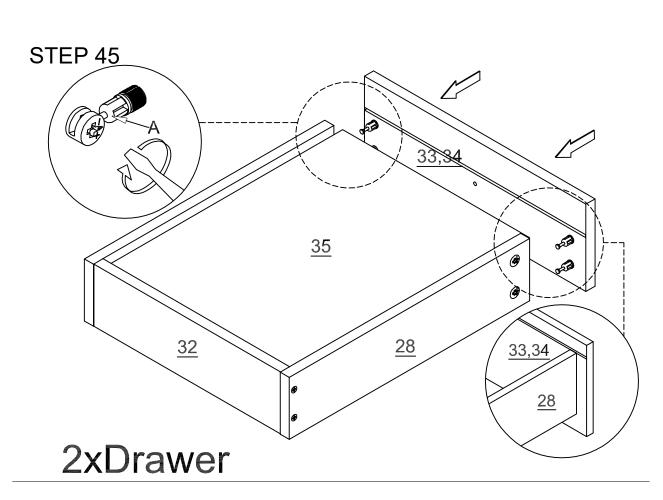

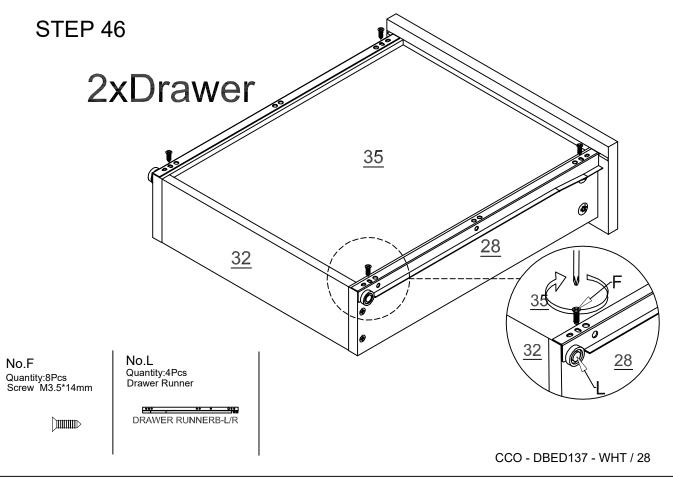

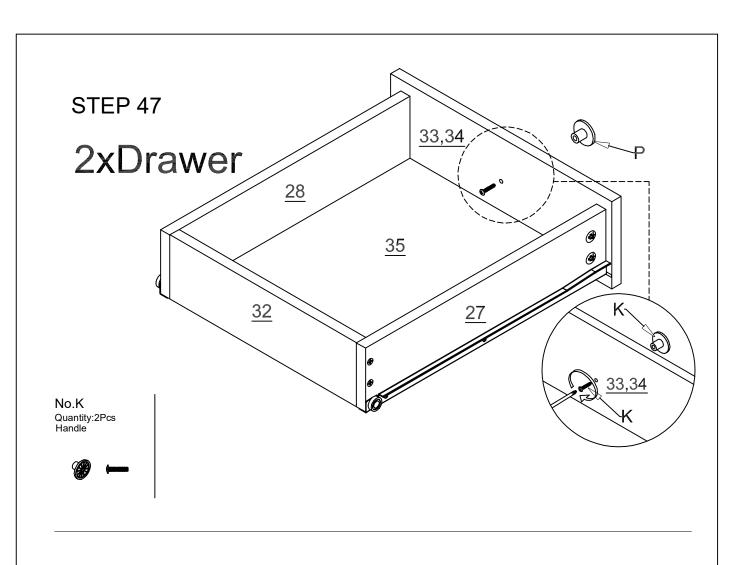

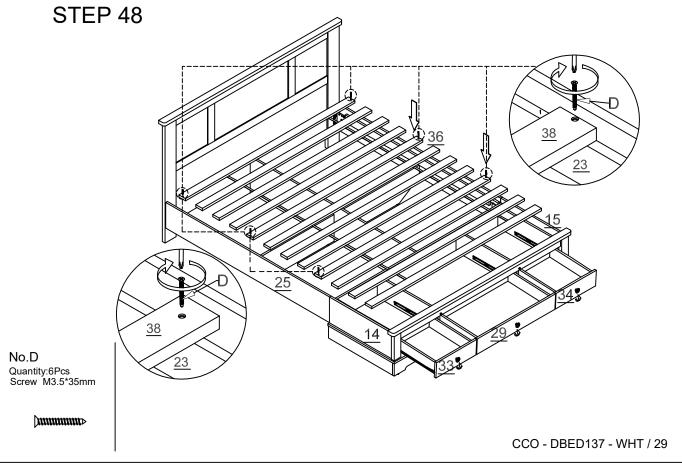

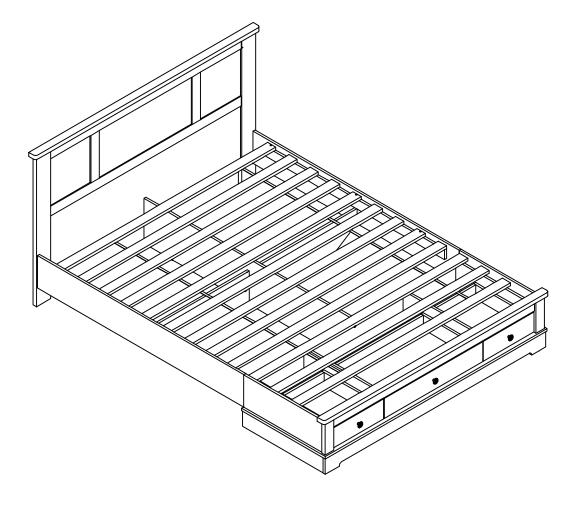

lifely.com.au

Great Job, You're done!

Don't forget to share how it looks in your space and tag us on Instagram.

@lifelyhome#homewithlifely!