


Assemble Instructions

Cuppa Series

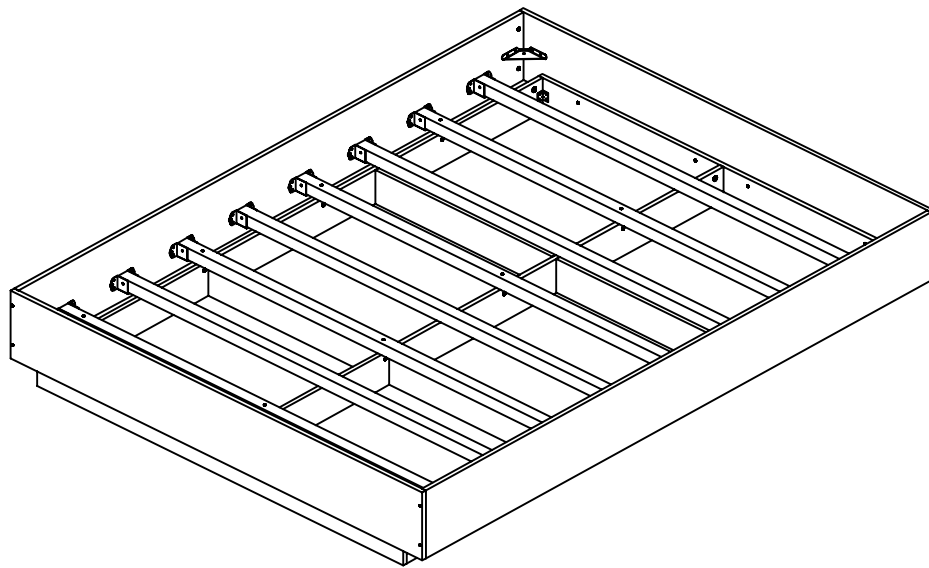

Lifely*

Product Code

CPA-BBASE153-WOK-Q

Cuppa Bed Base-Queen

Dimensions(W x D x H)


1570*2070*280mm

Important


Please read through instructions carefully
Before assembly and keep for future reference.

For our full catalogue of assembly instructions,
Visit:lifely.com.au/assembly.

Important Tips and Maintenance

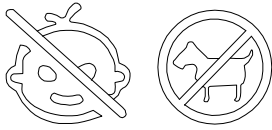


1.
Keep children and animals away from working area as smaller parts may cause choking if swallowed

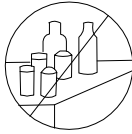


2.
Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.




3.
Never use ammonia based cleaning products as it will damage the finish.

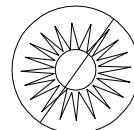


4.
To avoid fading, keep furniture out of direct sunlight.

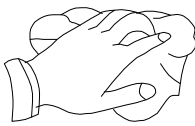

5.
Use a soft or damp cloth (dry cloth) when wiping or cleaning surface.

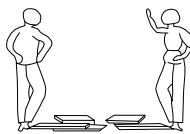

6.
Two people are required



7.
Lay a soft mat down to protect the furniture pieces before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead. E.g. "You're so good looking".

This 12-Step assembly should take around 55 minutes with an Allen Key-or 30 minutes with an electric drill. Godspeed.

Designed for everyday

Components Hardware

Please check you have all the fittings
part or tools are listed in below.

No.A

Quantity:18Pcs
Dowel 8*40mm



No.B

Quantity:20Pcs
Cam Bolt



No.C

Quantity:112Pcs
Screw M3.5*14mm



No.D

Quantity:20Pcs
Screw M5*50mm



No.E

Quantity:20Pcs
Plastic Countersunk Head



No.F

Quantity:8Pcs
Screw M6*25mm



No.G

Quantity:2Pcs
Dowel 8*60mm



No.H

Quantity:8Pcs
Cam Bolt



No.I

Quantity:28Pcs
Cam Nut



No.J

Quantity:16Pcs
U Shape Support Part



No.K

Quantity:4Pcs
Side Angle Iron With 2 Holes



No.L

Quantity:4Pcs
L Angle Iron




Components Panels & Part List


Please check you have all the panels
are listed below.

1. Head board -----x2 CTN 1/2
2. Bed side panel -----x2 CTN 1/2
3. Base -----x1 CTN 1/2
4. Base-1 -----x1 CTN 1/2
5. Base support-1 -----x2 CTN 1/2
6. Base support-2 -----x1 CTN 1/2


7. Bottom panel -----x4 CTN 2/2
8. Bed slats-1 -----x4 CTN 2/2
9. Bed slats-2 -----x4 CTN 2/2

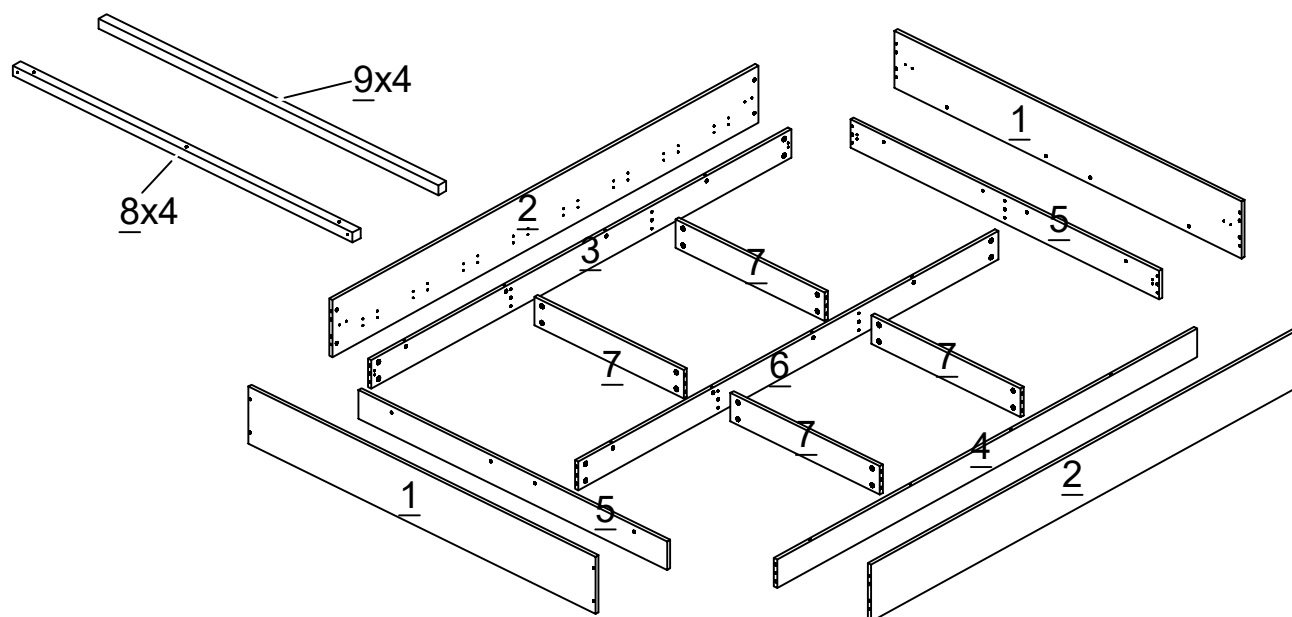


STEP1

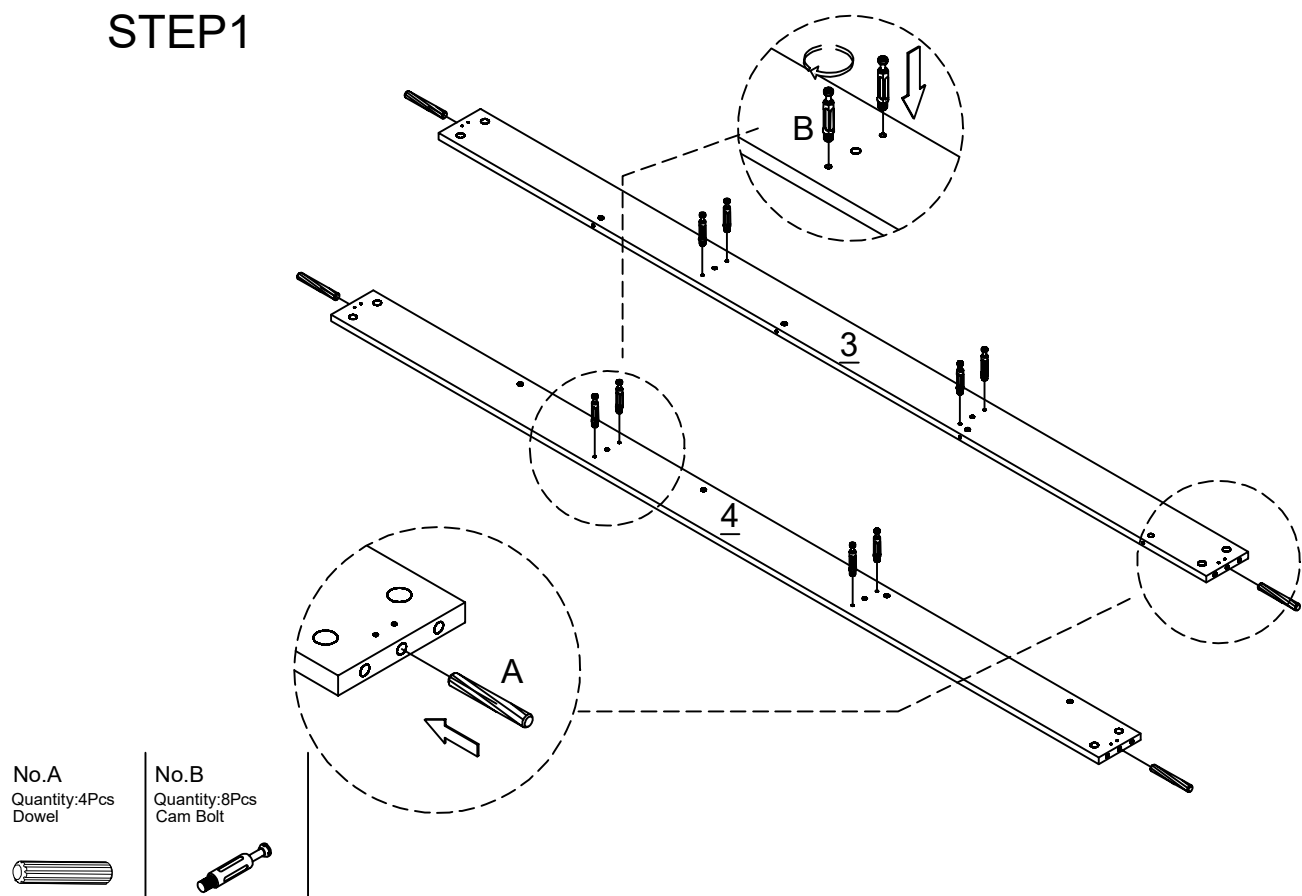

STEP2

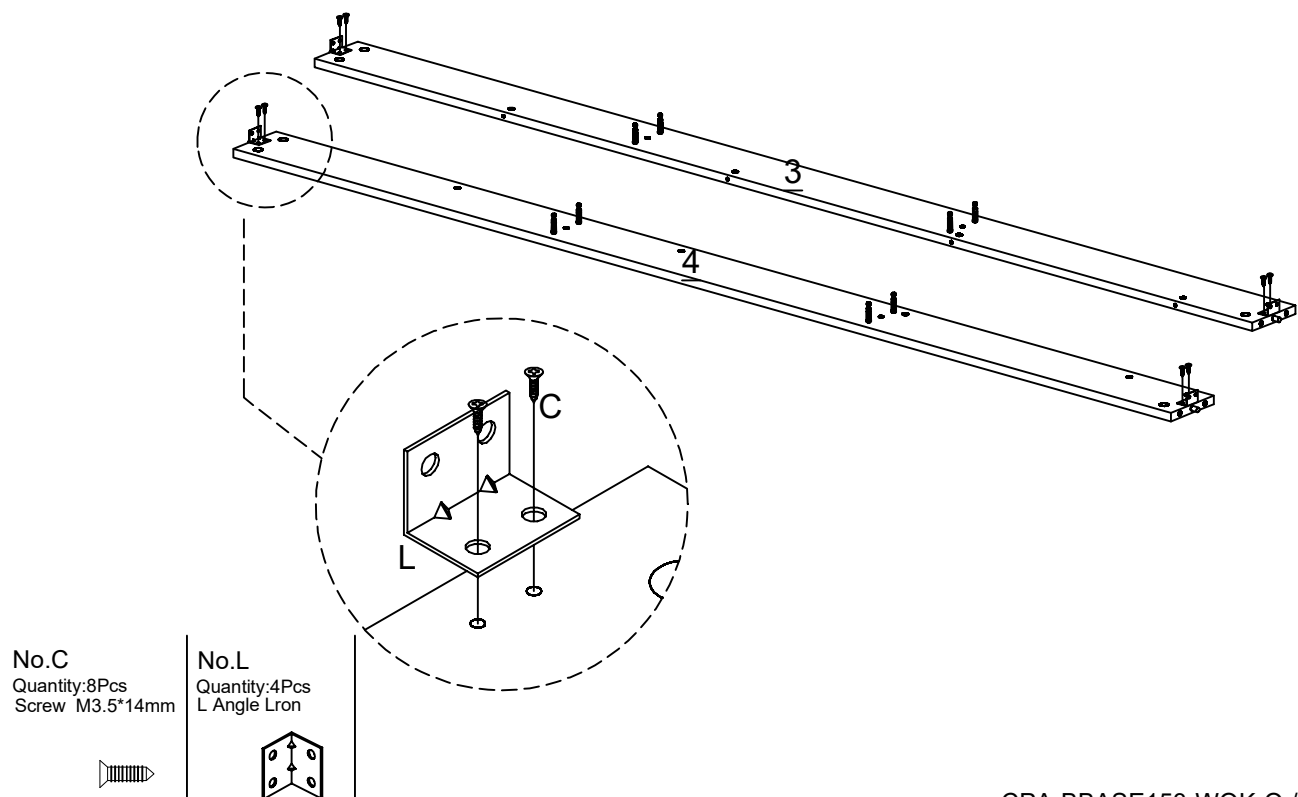

STEP3

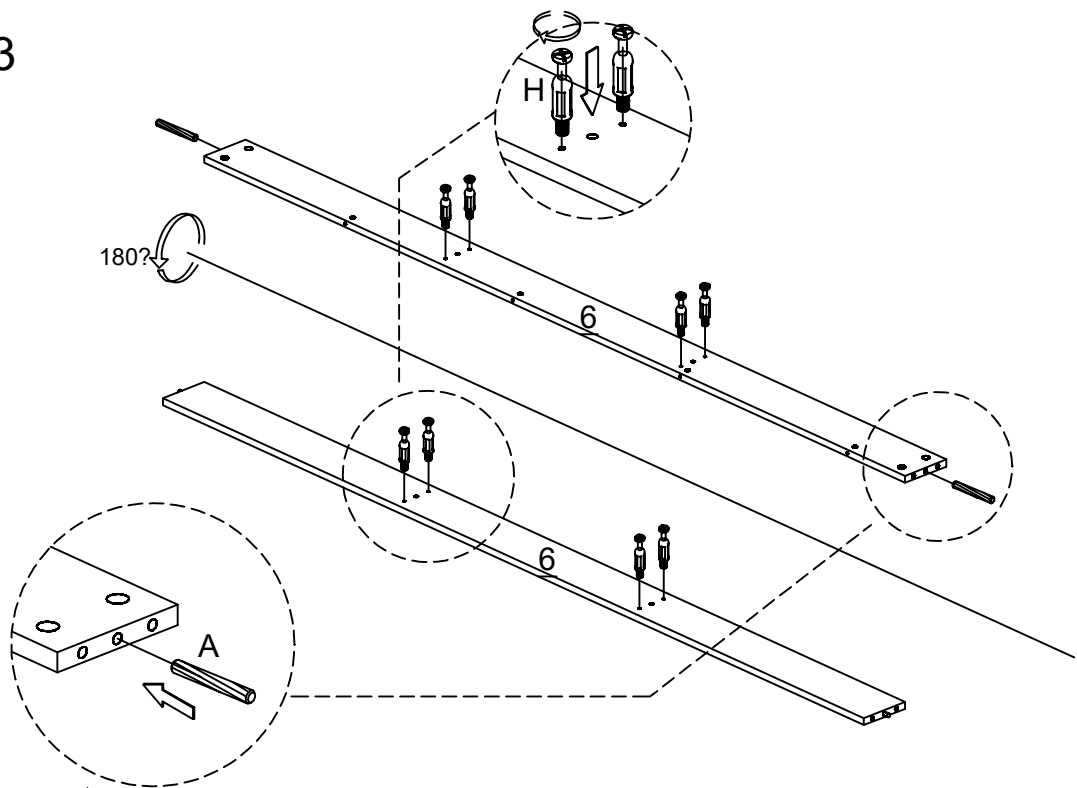


No.A
Quantity:2Pcs
Dowel



No.H
Quantity:8Pcs
Cam Bolt




STEP4

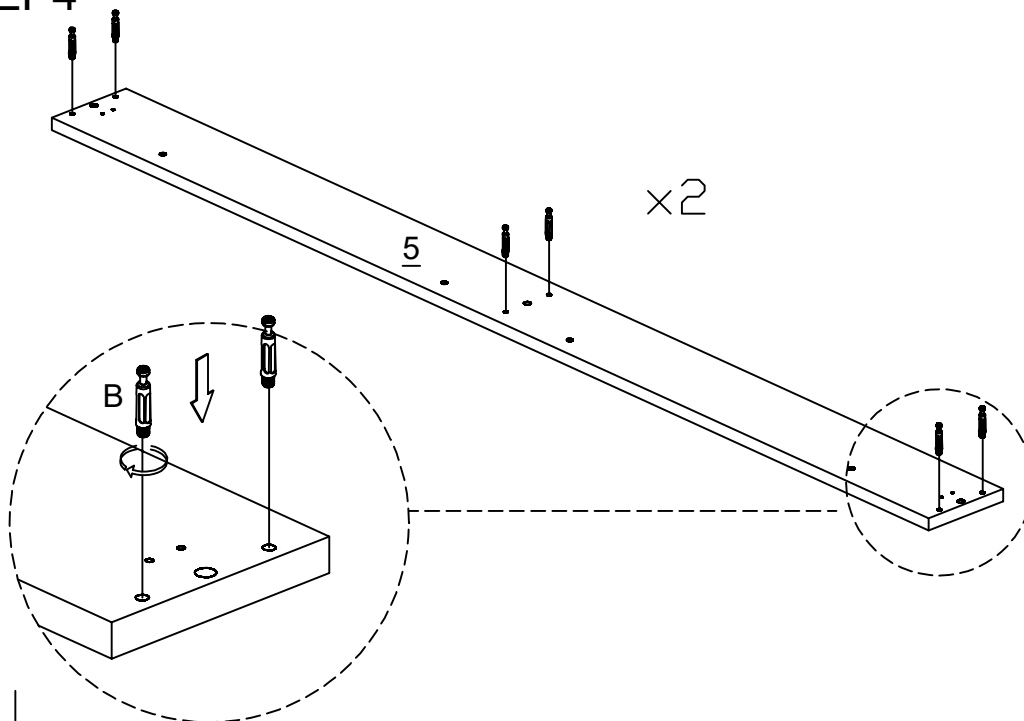

No.B
Quantity:12Pcs
Cam Bolt



STEP5

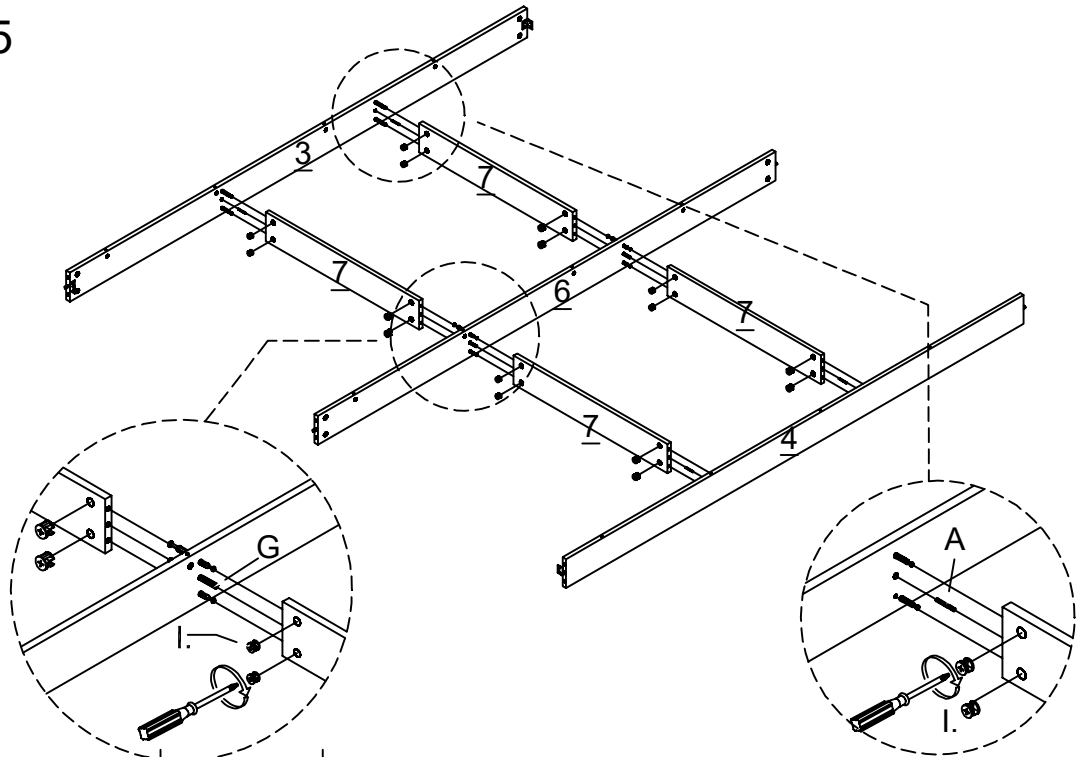

No.A
Quantity:4Pcs
Dowel 8*40mm




No.G
Quantity:2Pcs
Dowel 8*60mm



No.I
Quantity:16Pcs
Cam Nut



STEP6

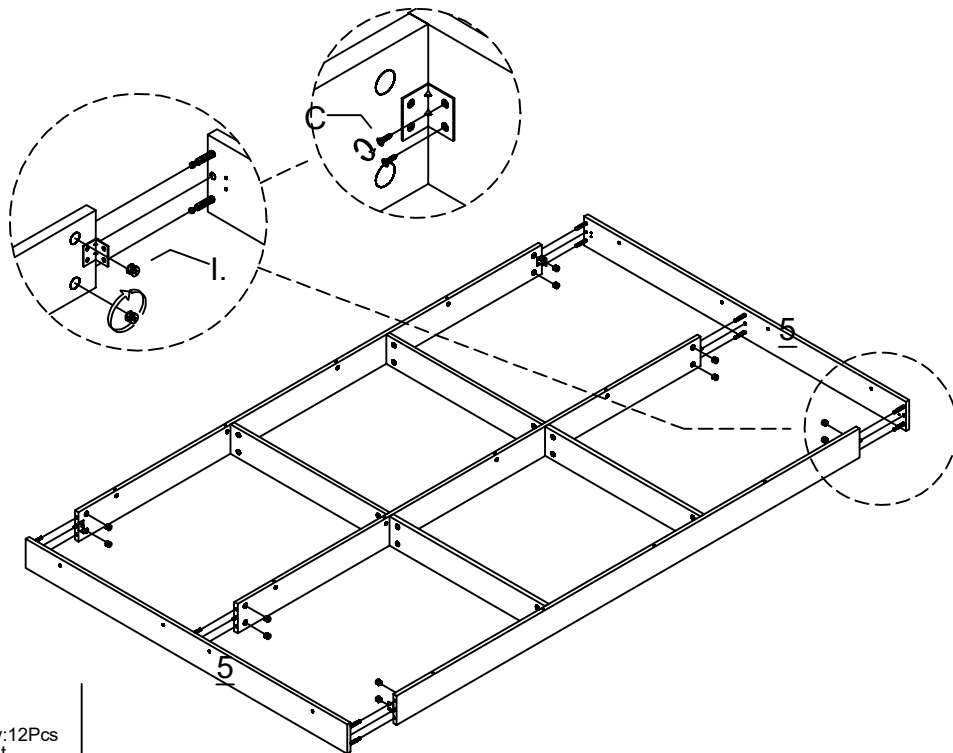


No.C
Quantity:8Pcs
Screw M3.5*14mm



No.I
Quantity:12Pcs
Cam Nut



STEP7

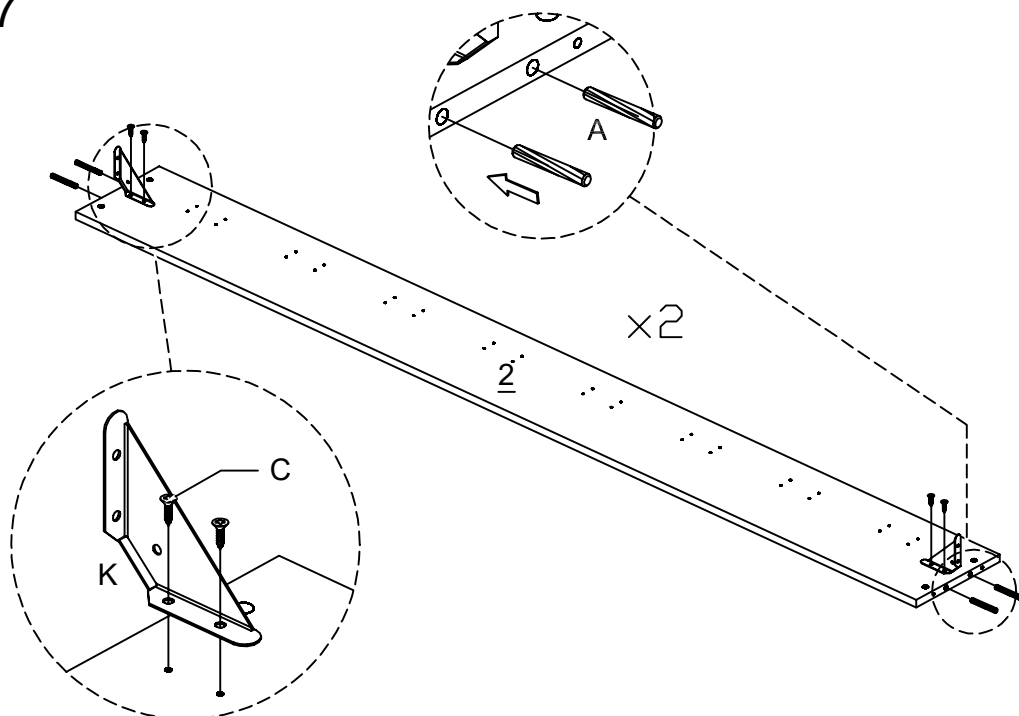

No.A
Quantity:8Pcs
Dowel 8*40mm




No.C
Quantity:8Pcs
Screw M3.5*14mm



No.K
Quantity:4Pcs
Side Angle Iron With 2 Holes



STEP8

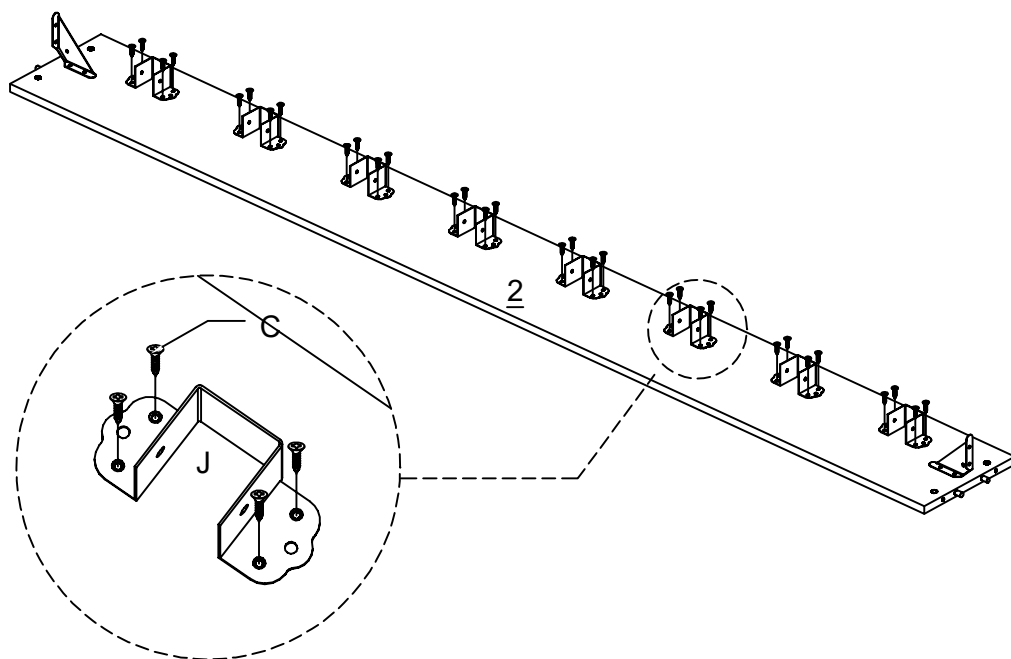


No.C
Quantity:64Pcs
Screw M3.5*14mm



No.J
Quantity:16Pcs
U Shape Support Part



STEP9

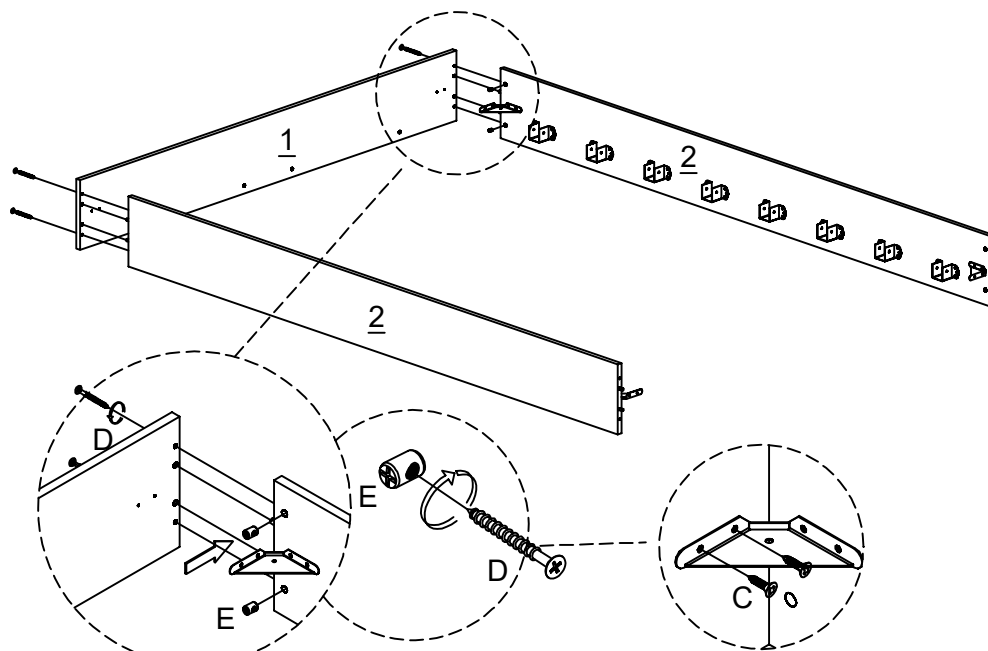

No.C
Quantity:4Pcs
Screw M3.5*14mm




No.D
Quantity:4Pcs
Screw M5*50mm



No.E
Quantity:4Pcs
Plastic Countersunk Head




STEP10

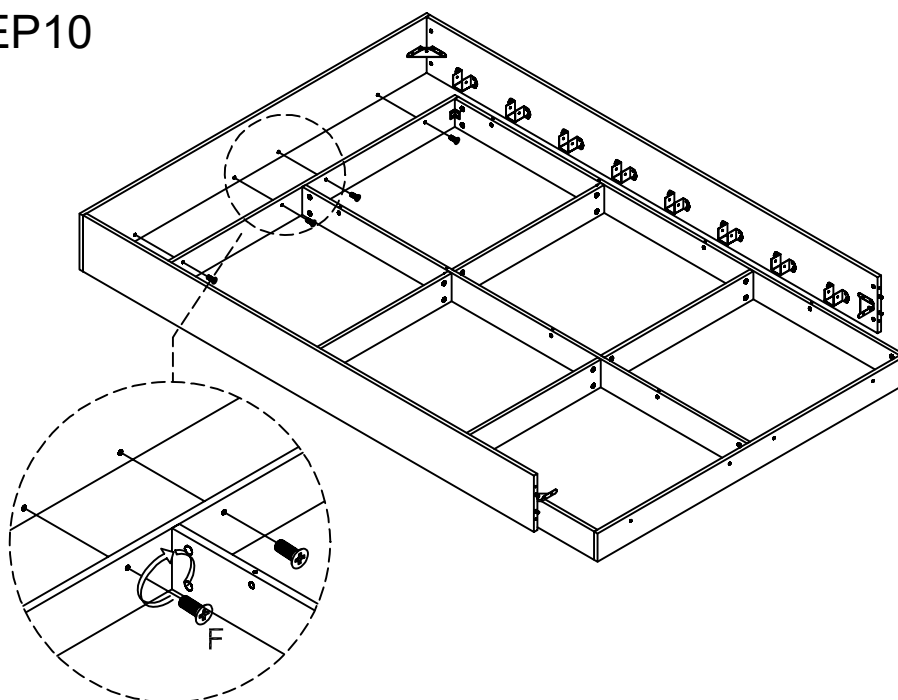

No.F
Quantity:4Pcs
Screw M6*25mm



STEP11

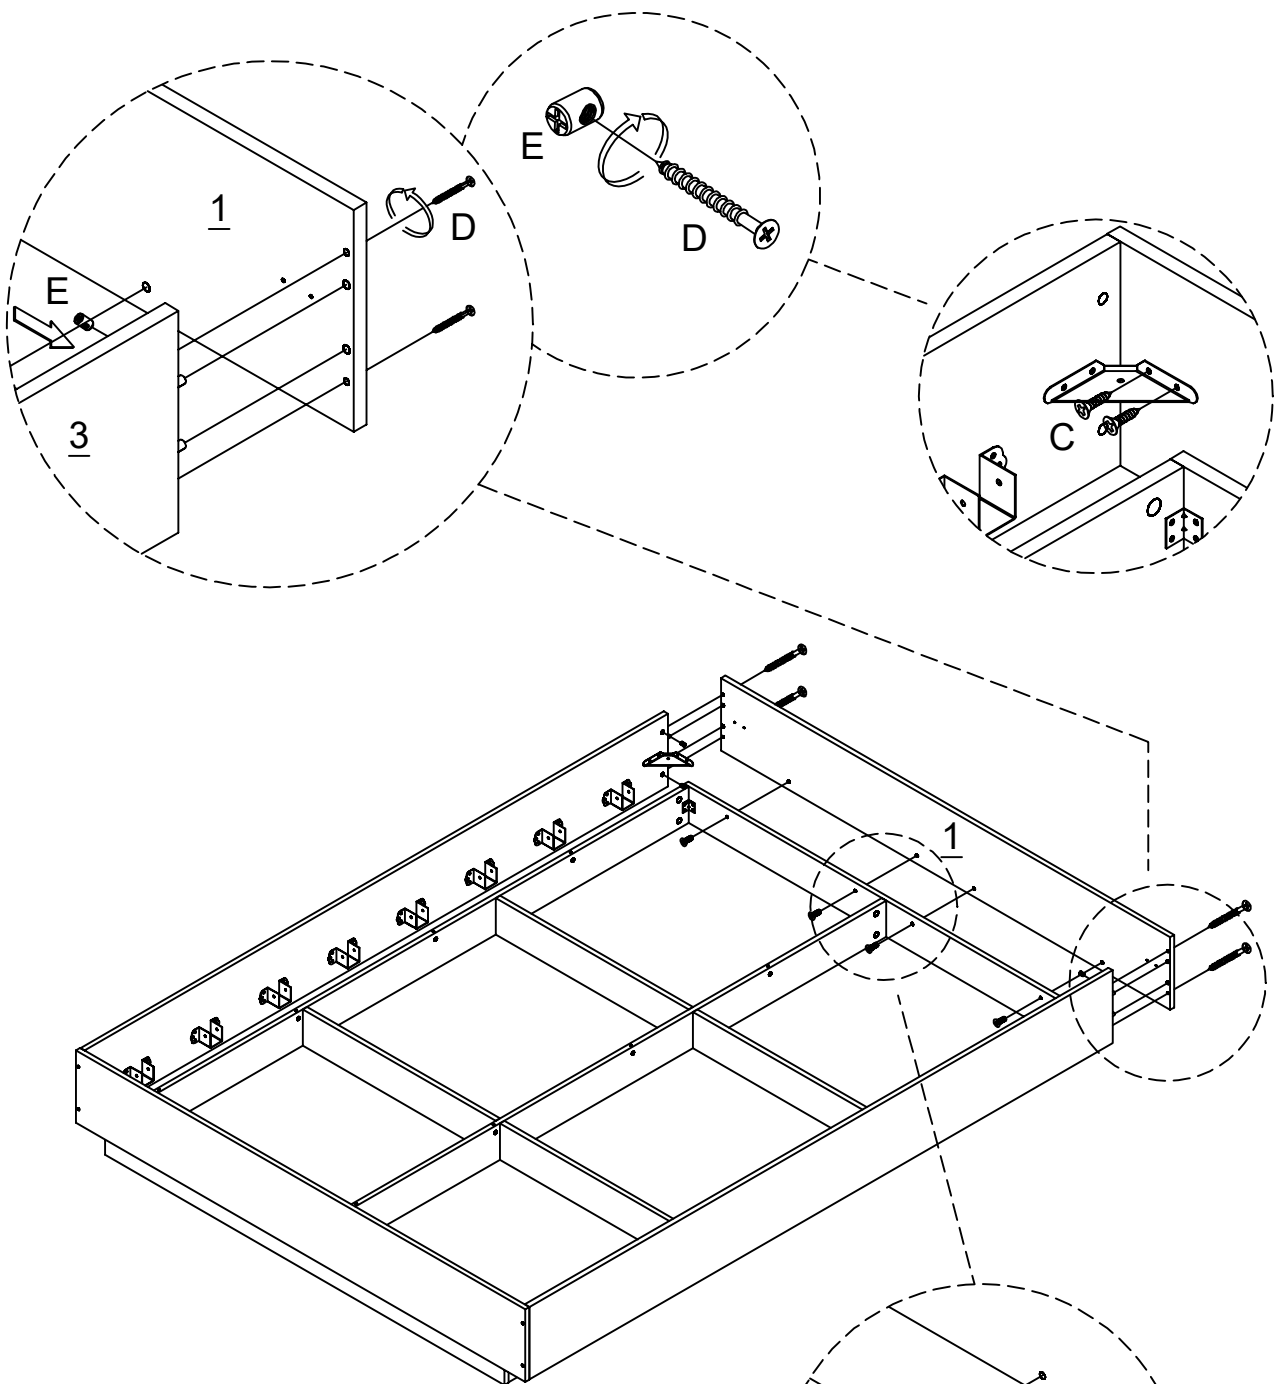

No.C
Quantity:4Pcs
Screw M3.5*14mm




No.D
Quantity:4Pcs
Screw M5*50mm




No.E
Quantity:4Pcs
Plastic Countersunk Head



No.F
Quantity:4Pcs
Screw M6*25mm

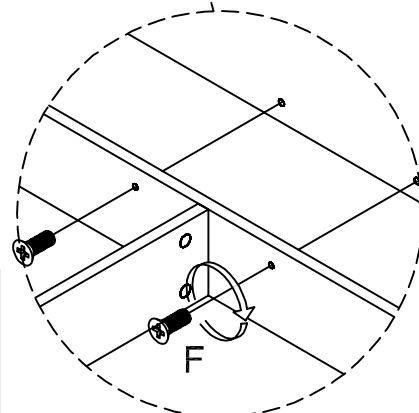

STEP12

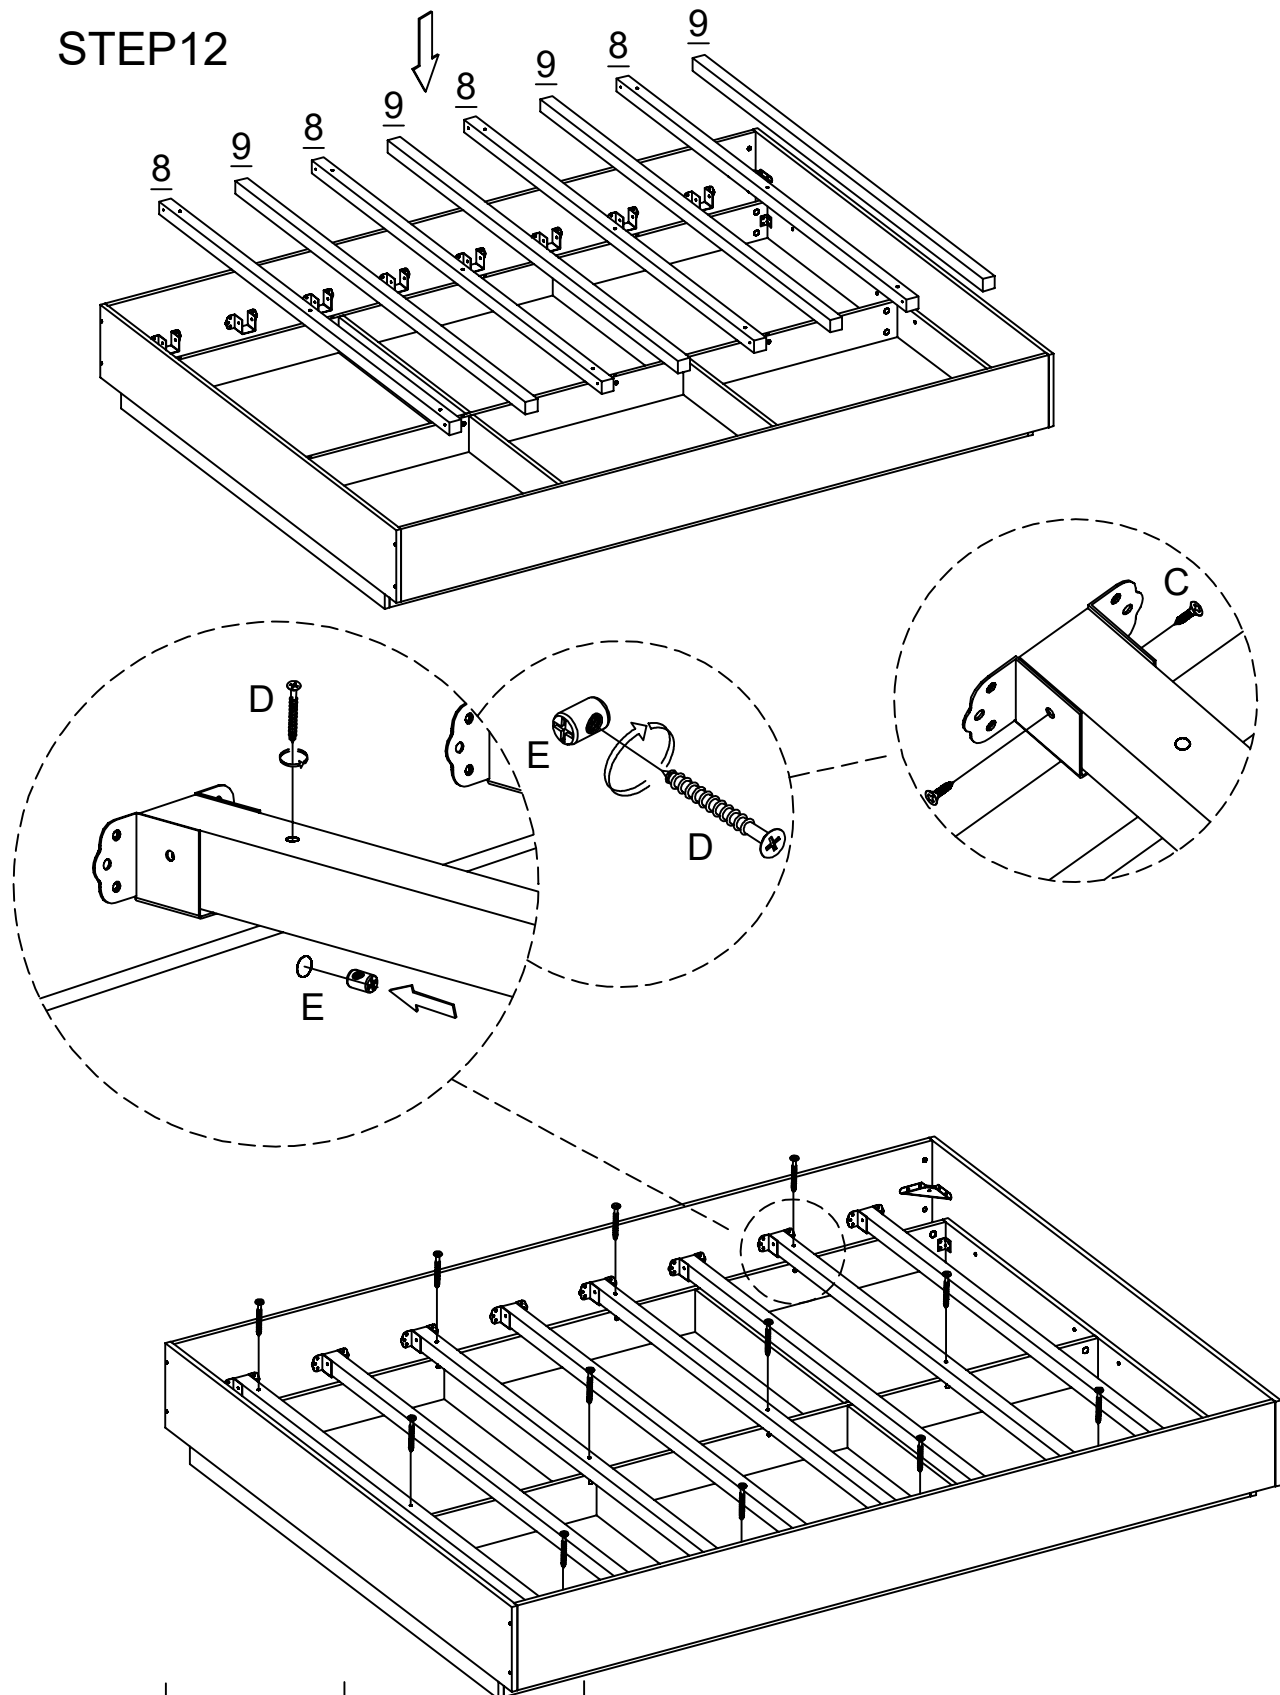

No.C
Quantity:16Pcs
Screw M3.5*14mm



No.D
Quantity:12Pcs
Screw M5*50mm



No.E
Quantity:12Pcs
Plastic Countersunk Head



lifely.com.au

Great Job, You're done!

Don't forget to share how it looks in
your space and tag us on Instagram.

@lifelyhome#homewithlifely!