


Assembly Instructions

Tate Series

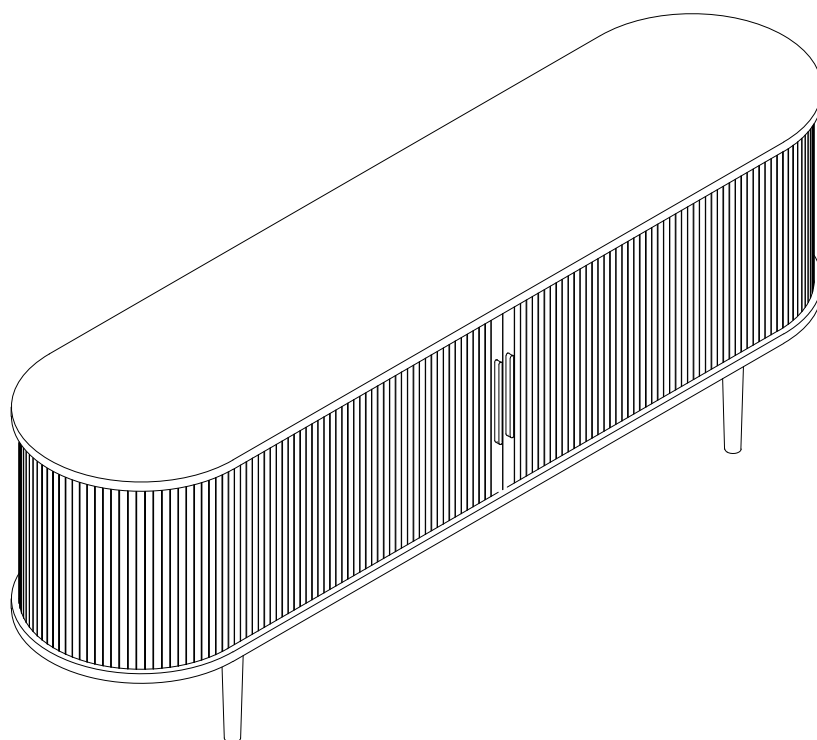

Lifely*

Product Code

TATE-TV-BLACK TV STAND
TATE-TV-NATURAL TV STAND

Dimensions(W x D x H)


1600x400x580mm

Important


Please read through instruction carefully
Before assembly and keep for future reference.

For our full catalogue of assembly instructions,
Visit: lifely.com.au/assembly.

Important Tips and Maintenance

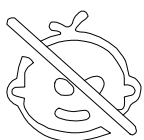


1.
Keep children and animals away from working area as smaller parts may cause choking if swallowed.

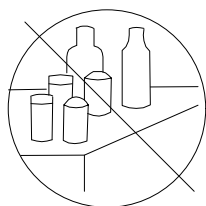


2.
Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.




3.
Never use ammonia based cleaning products as it will damage the finish.

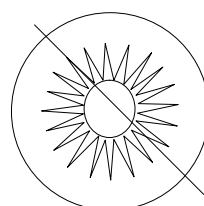


4.
To avoid fading, keep furniture out of direct sunlight.

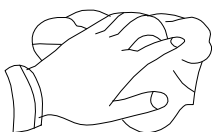

5.
Use a soft or damp cloth(dry cloth)when wiping or cleaning surfaces.

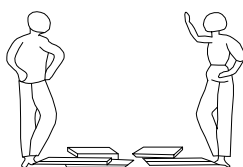

6.
Two person are required.

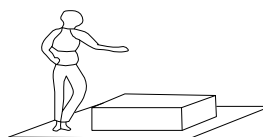

7.
Lay a soft matt down to protect the furniture piece before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead. E.g. "You're so good looking"

This 14-step assembly should take around 1.5 hour with an Allen Key - or 60 minutes with an electric drill. Godspeed.


Designed for everyday

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

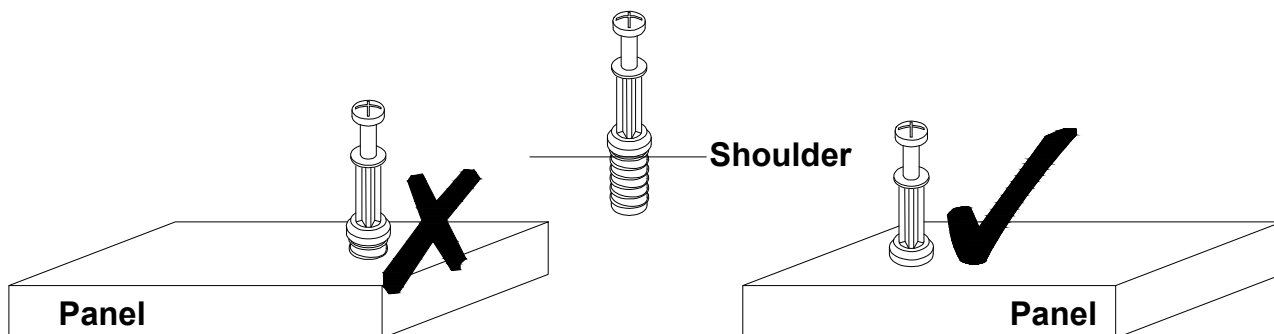

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

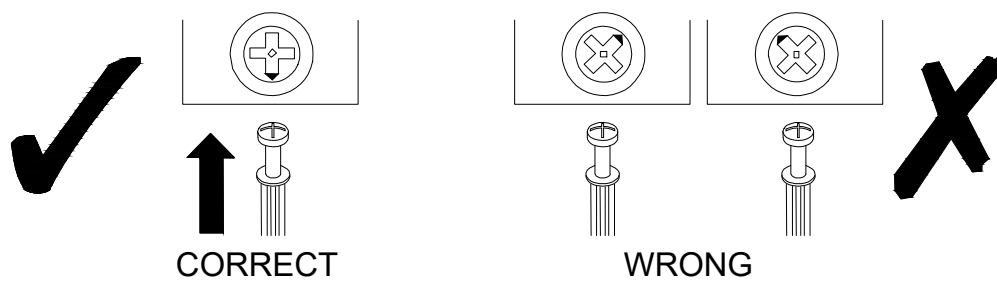

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.



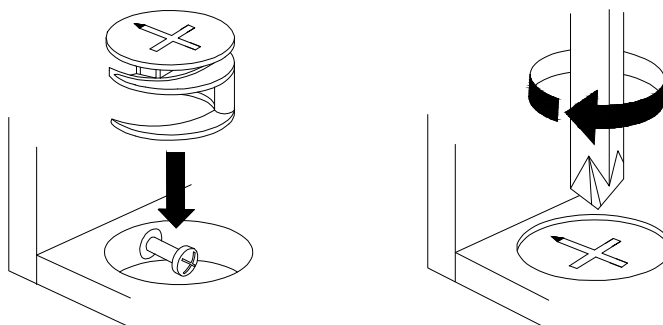















Cam lock should be inserted before quickfit.



Turn cam lock clockwise to tighten.

Component Hardware


Please check you have all the fittings
part or tools are listed in below.

<div>No. A</div> <div>Quantity:10Pcs</div> <div>Cam Lock Dowel</div> <div>8*28mm</div> <div></div>	<div>No. B</div> <div>Quantity:2Pcs</div> <div>Full Thread Screw</div> <div>M6*35mm</div> <div></div>	<div>No. C</div> <div>Quantity:10Pcs</div> <div>Cam</div> <div>φ15</div> <div></div>	<div>No. D</div> <div>Quantity:2Pcs</div> <div>Full Thread Screw</div> <div>M6*55mm</div> <div></div>	<div>No. E</div> <div>Quantity:12Pcs</div> <div>Screw</div> <div>M6*50mm</div> <div></div>
<div>No. F</div> <div>Quantity:1Pc</div> <div>Allen Key</div> <div>4#</div> <div></div>	<div>No. G</div> <div>Quantity:6Pcs</div> <div>Assembly Assistor</div> <div></div>	<div>No. H</div> <div>Quantity:3Pcs</div> <div>Full Thread Screw</div> <div>8*30mm</div> <div></div>	<div>No. I</div> <div>Quantity:2Pcs</div> <div>Screw</div> <div>M6*35mm</div> <div></div>	<div>No. J</div> <div>Quantity:4Pcs</div> <div>Screw</div> <div>M8*35mm</div> <div></div>
<div>No. K</div> <div>Quantity:4Pcs</div> <div>Foot Plate</div> <div>70*70mm</div> <div></div>	<div>No. L</div> <div>Quantity:16Pcs</div> <div>Screw</div> <div>4*16mm</div> <div></div>	<div>No. M</div> <div>Quantity:4Pcs</div> <div>Foot Pad</div> <div>φ20</div> <div></div>	<div>No. N</div> <div>Quantity:2Pcs</div> <div>Handle</div> <div>200*20mm</div> <div></div>	<div>No. O</div> <div>Quantity:4Pcs</div> <div>Screw</div> <div>4*14</div> <div></div>
<div>No. P</div> <div>Quantity:1Set</div> <div>Anti-falling Parts</div> <div></div>	<div>No. Q</div> <div>Quantity:10Pcs</div> <div>Sticker</div> <div></div>	<div>No. R</div> <div>Quantity:1Pc</div> <div>Allen Key</div> <div>5#</div> <div></div>		


Component Panels & Part List

Please check you have all the panels are listed below.

- | | | | | |
|-----|---------------------|-------|----|---------|
| 1. | Top Panel | ————— | x1 | CTN 1/2 |
| 2. | Bottom Panel | ————— | x1 | CTN 1/2 |
| 3. | Shelf | ————— | x1 | CTN 1/2 |
| 4. | Back Panel | ————— | x1 | CTN 2/2 |
| 5. | Division Panel_up | ————— | x1 | CTN 2/2 |
| 6. | Division Panel_down | ————— | x1 | CTN 2/2 |
| 7. | Supporting Pillar | ————— | x4 | CTN 2/2 |
| 8. | Leg | ————— | x4 | CTN 2/2 |
| 9L. | Tambor Door_left | ————— | x1 | CTN 2/2 |
| 9R. | Tambor Door_right | ————— | x1 | CTN 2/2 |

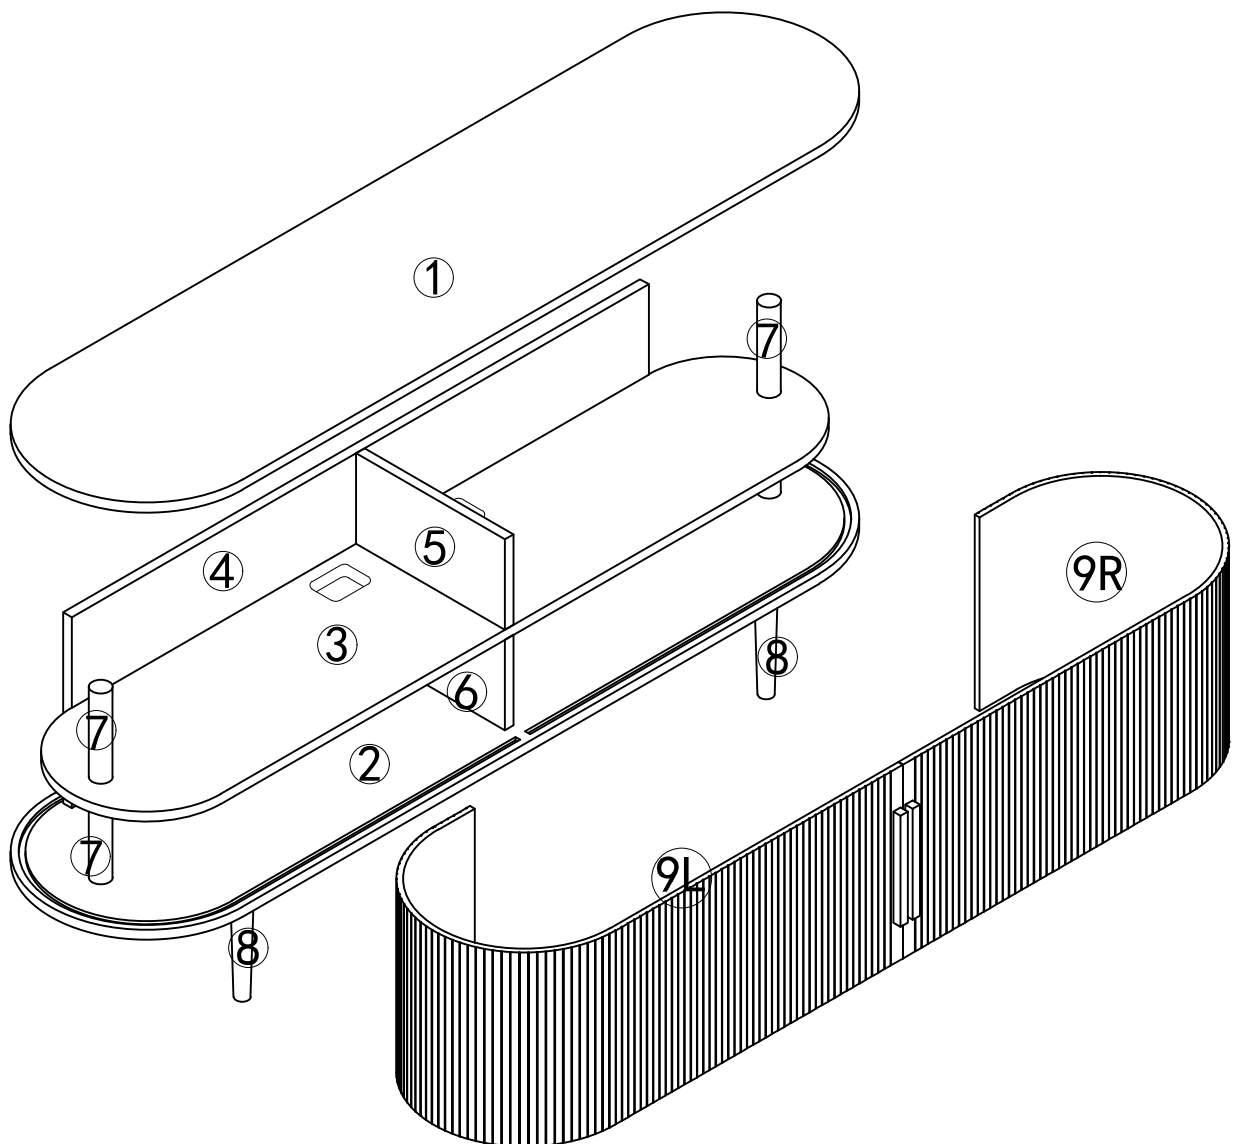

STEP 1

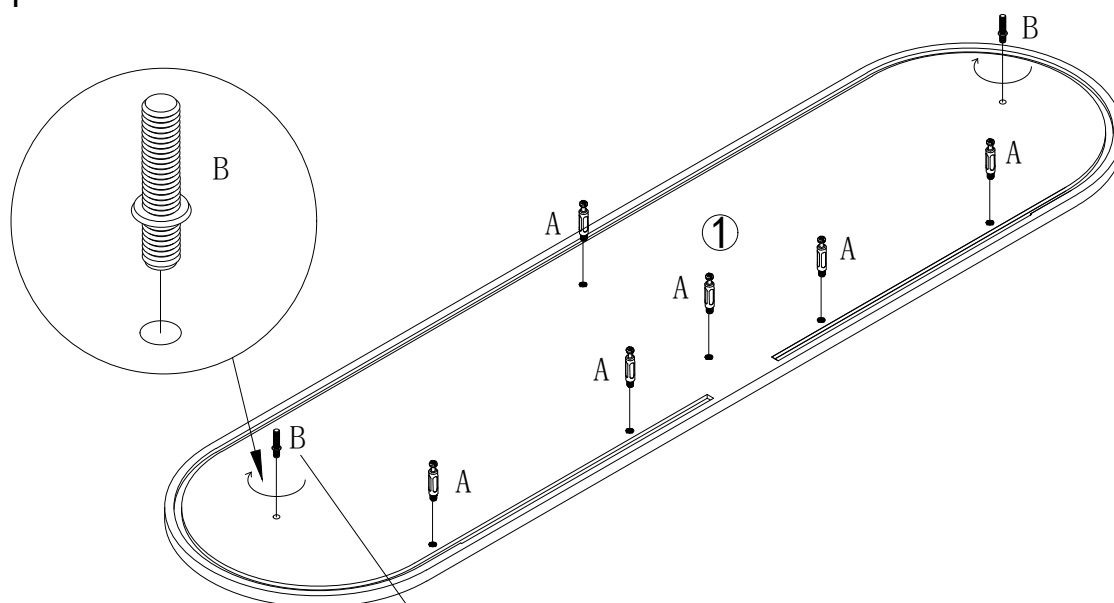

Please note the screw B have different thread length at both side, ensure the shorter thread side towards down as drawing shows.

No. A

Quantity:6 Pcs

Cam Lock Dowel
8*28 mm




No. B

Quantity:2 Pcs

Full Thread Screw
M6*35 mm



STEP 2

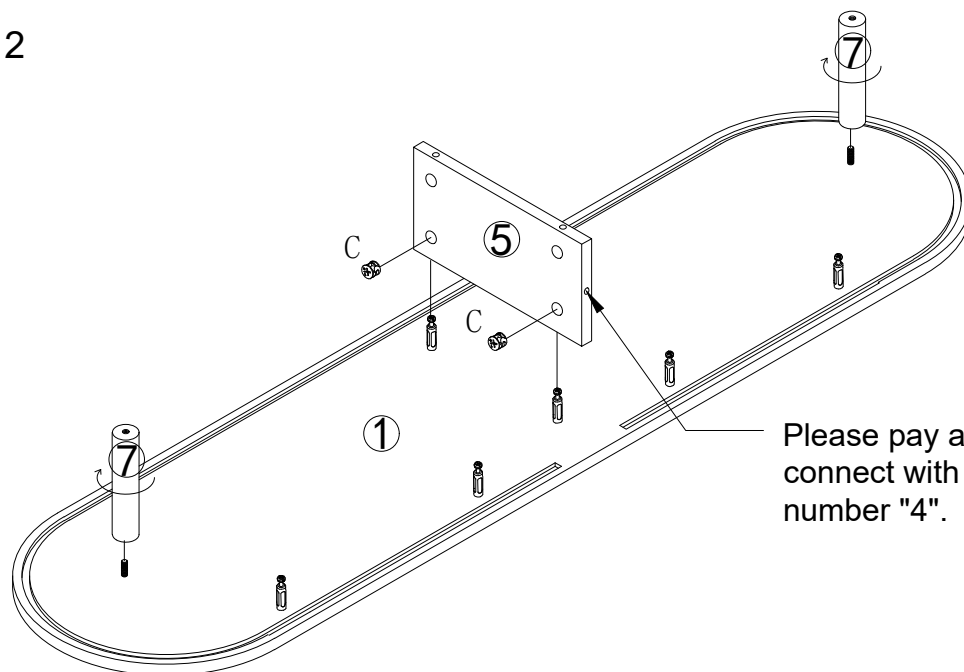

Please pay attention to this hole to connect with the back panel number "4".


No. C

Quantity:2 PcS

Cam




STEP 3

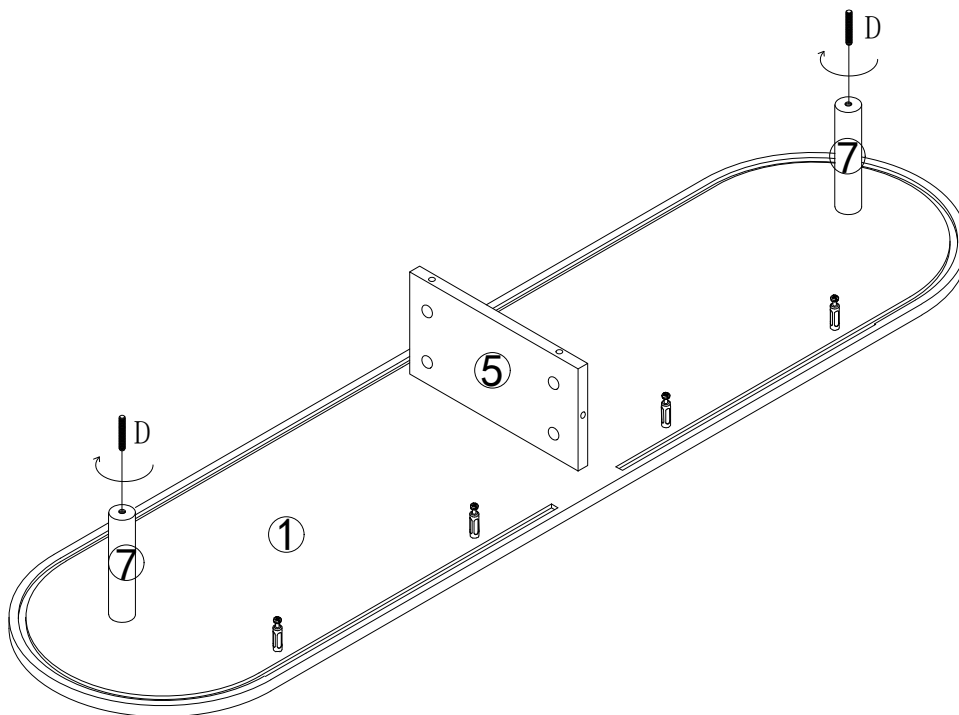


No. D

Quantity: 2 Pcs

Full Thread Screw
M6*55 mm



STEP 4

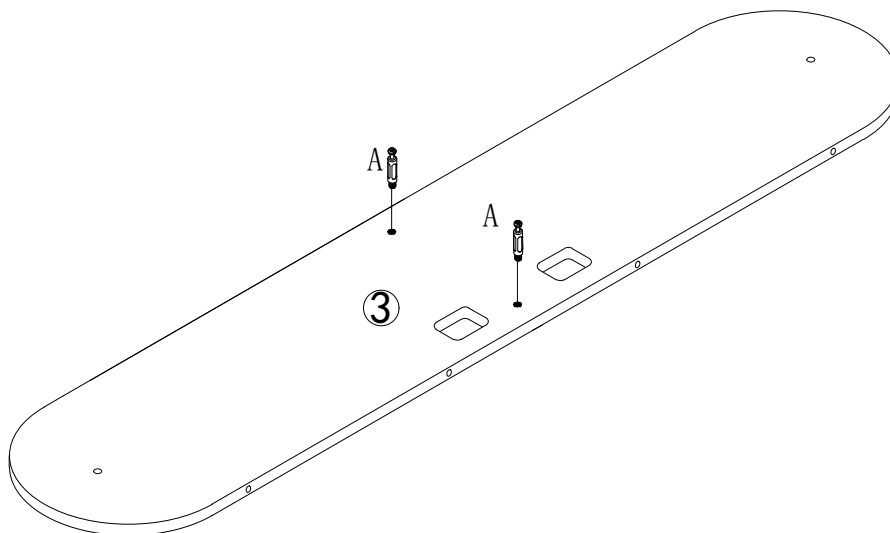


No. A

Quantity: 2 Pcs

Cam Lock Dowel
8*28 mm



STEP 5

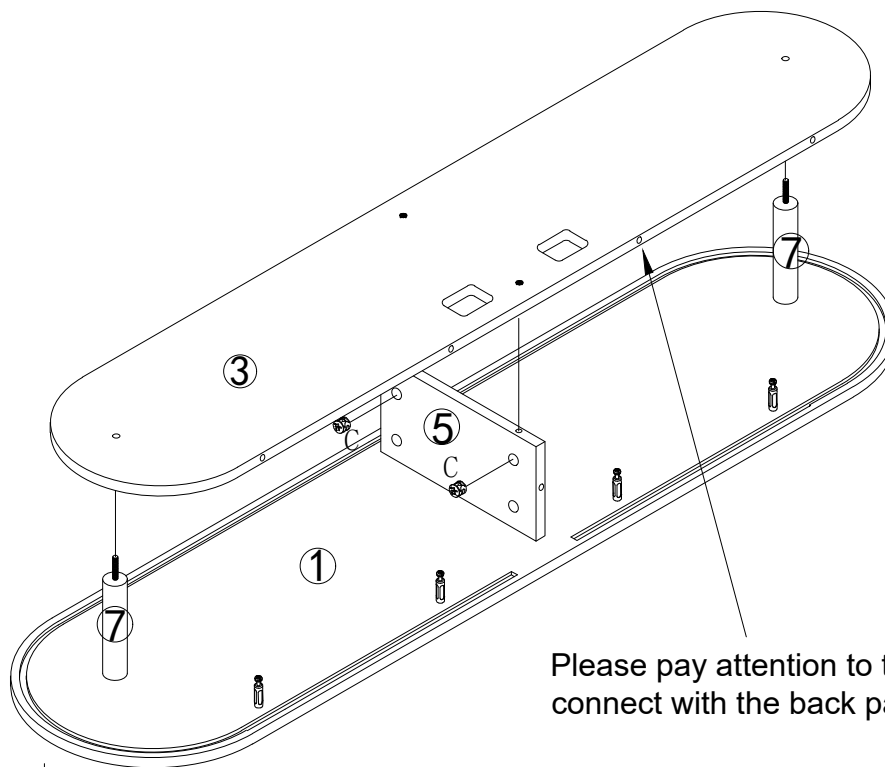


No. C

Quantity:2 Pcs

Cam



STEP 6

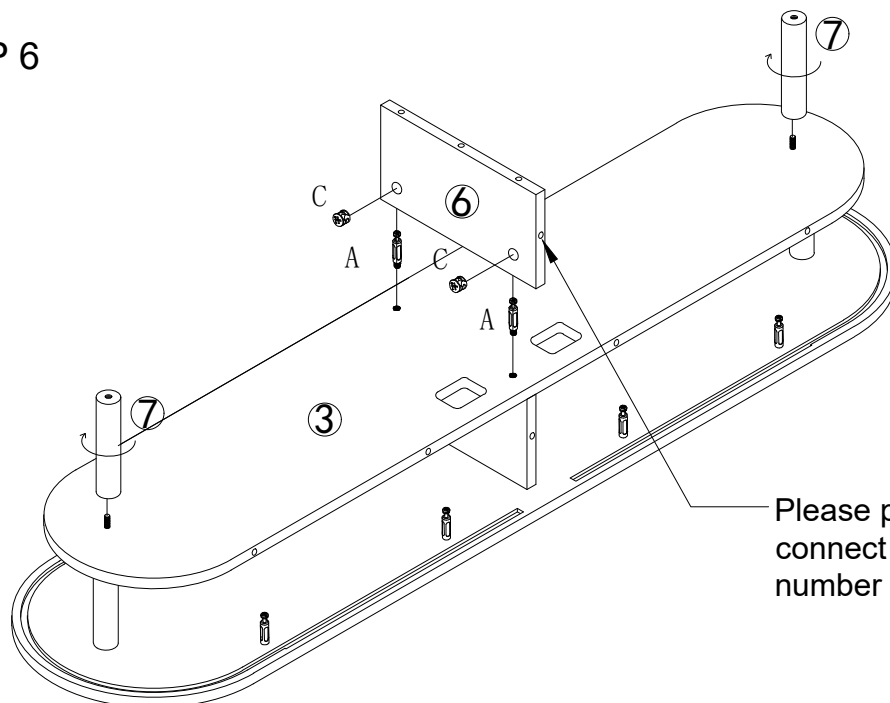

No. A

Quantity:2 Pcs

Cam Lock Dowel
8*28 mm




No. C

Quantity:2 PcS

Cam



STEP 7

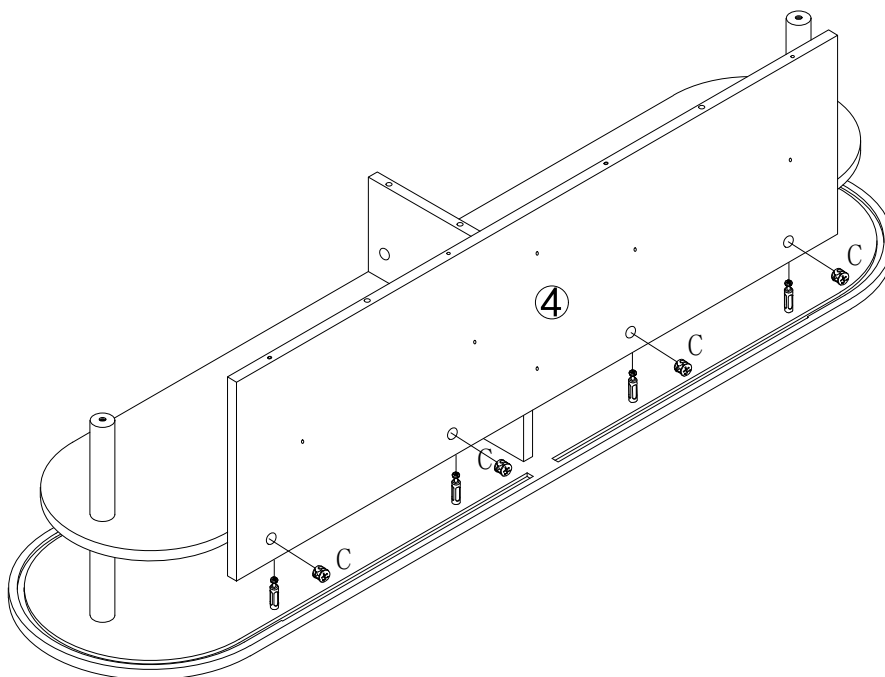


No. C

Quantity:4 Pcs

Cam



STEP 8

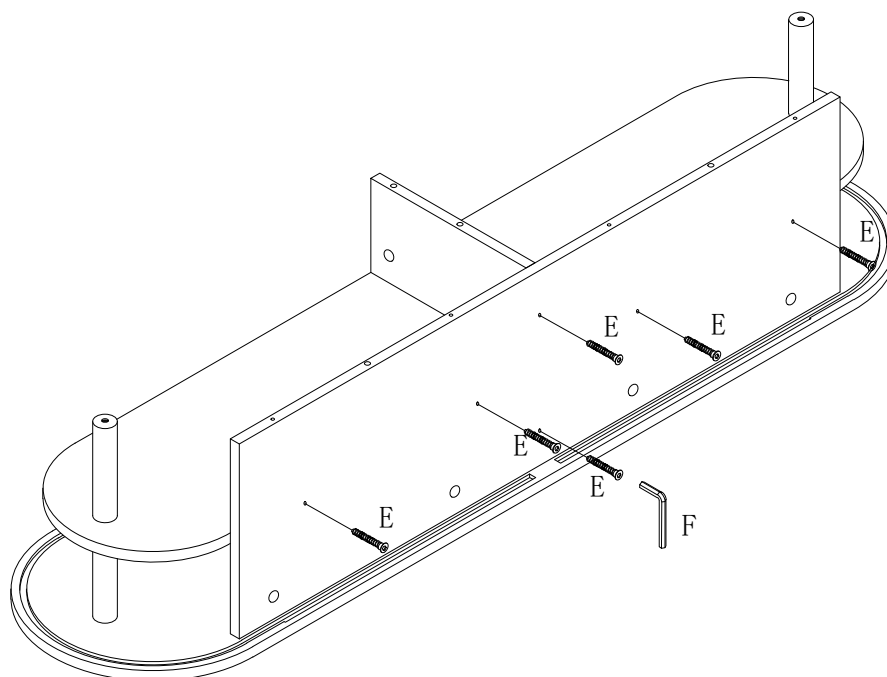

No. E

Quantity:6 Pcs

Screw
M6*50mm






No. F

Quantity:1 Pc

Allen Key
4#



STEP 9

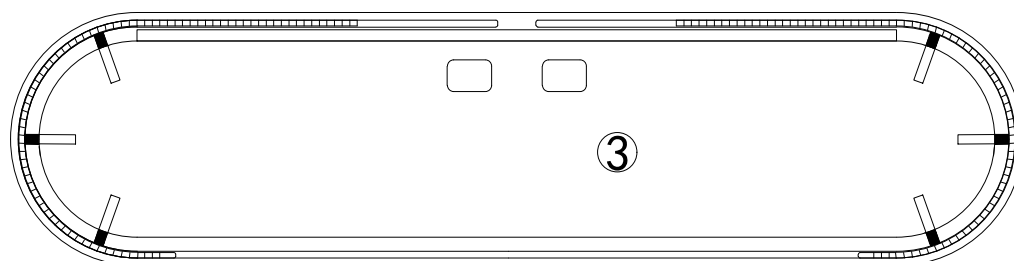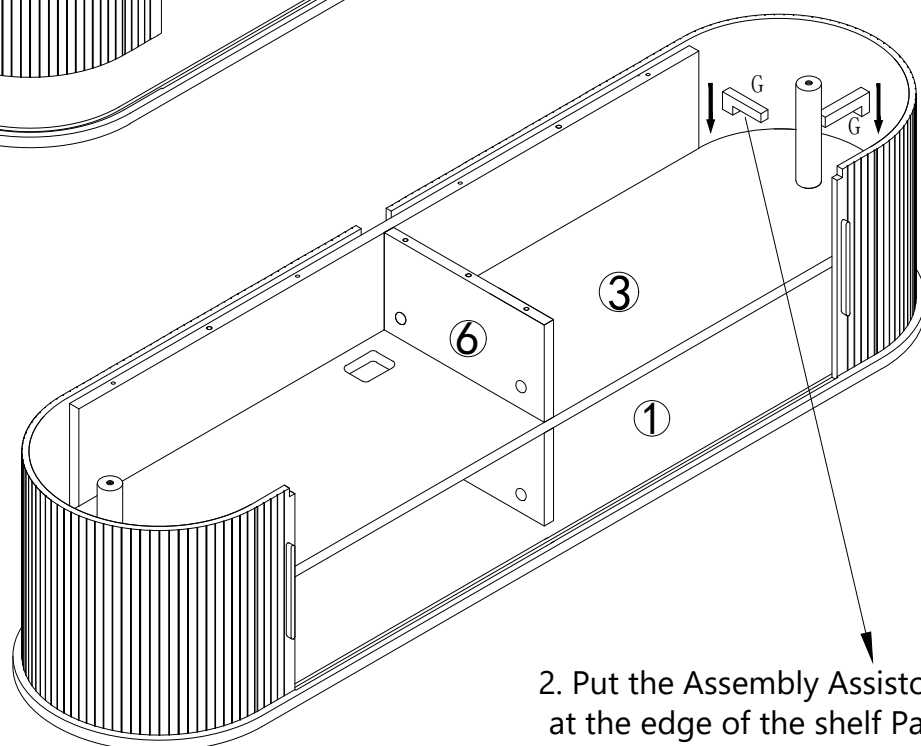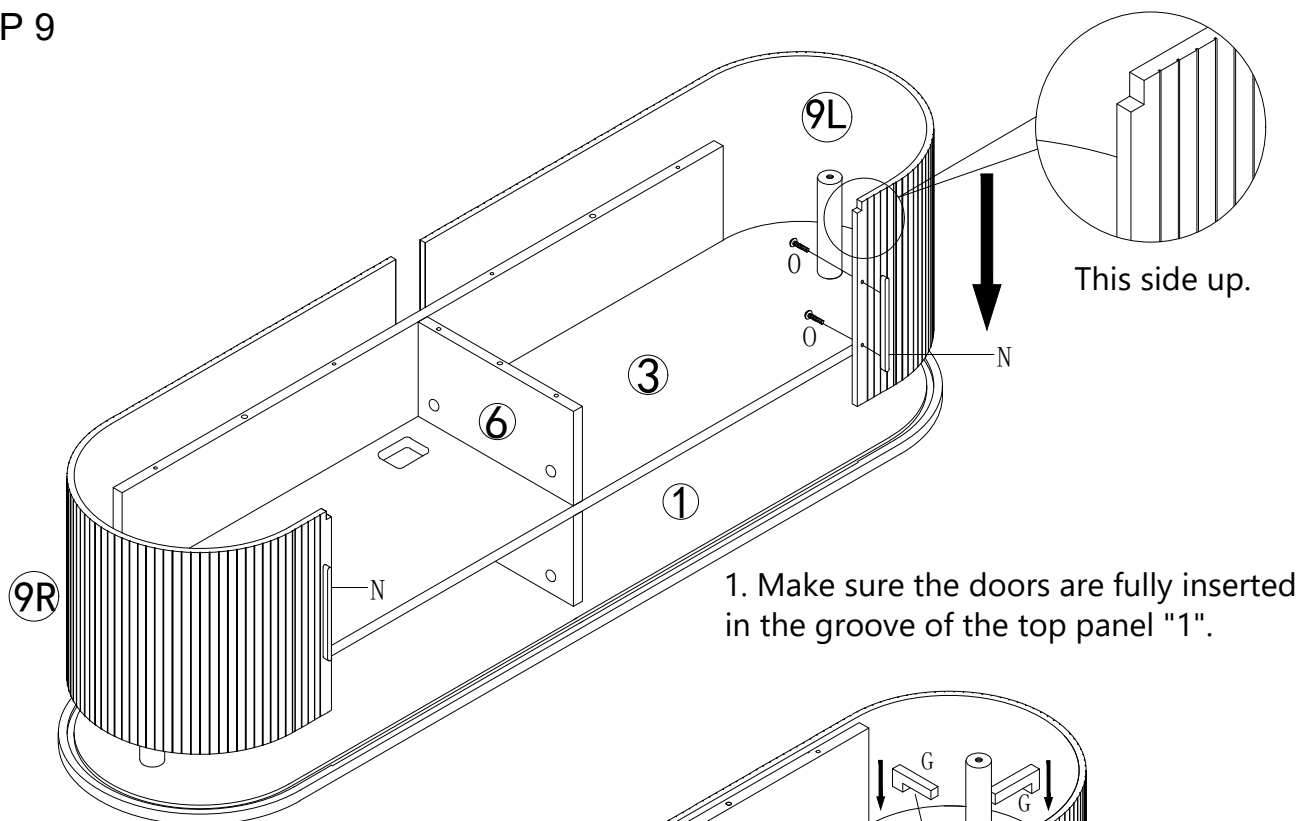

No. G
Quantity:6 Pcs
Assembly Assistor




No. N
Quantity:2 Pcs
Handle
200*20 mm



No. O
Quantity:4 Pcs
Screw
4*14 mm



STEP 10

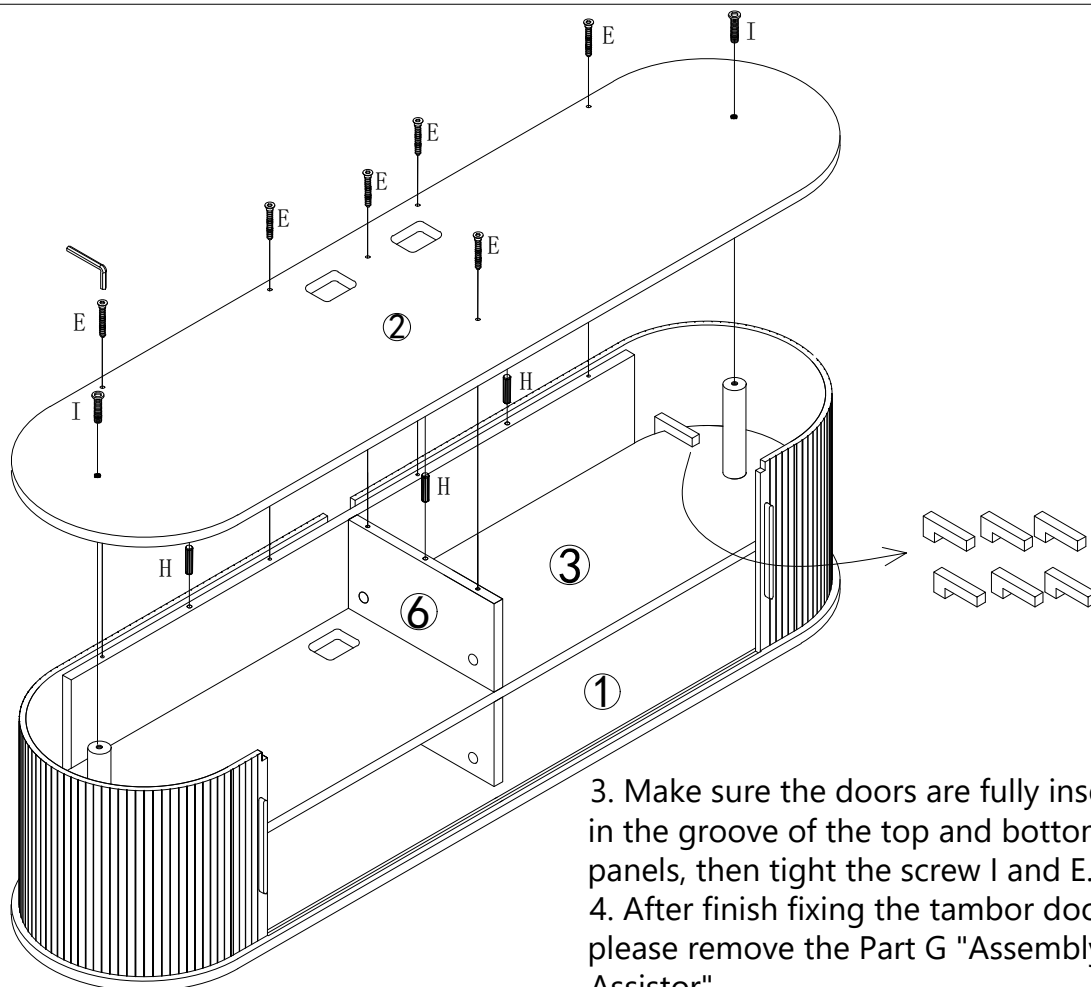

3. Make sure the doors are fully inserted in the groove of the top and bottom panels, then tight the screw I and E.
4. After finish fixing the tambor doors, please remove the Part G "Assembly Assistor"

No. E

Quantity:6 Pcs

Screw
M6*50mm



No. H

Quantity:3 Pcs

Dowel
8*30mm




No. I

Quantity:2 Pcs

Screw
M6*35mm



STEP 11

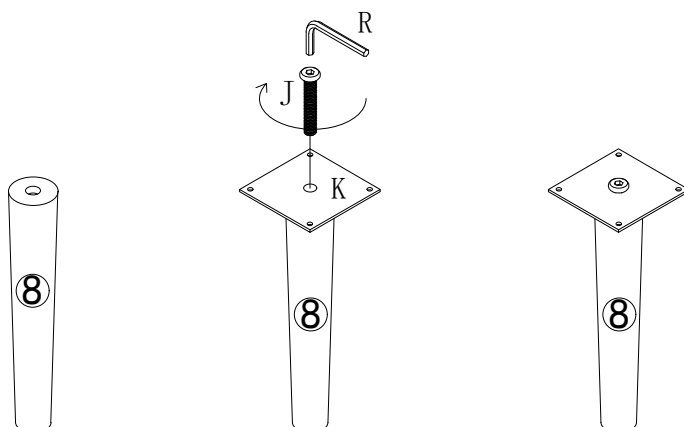

No. J

Quantity:4 Pcs


Full Thread Screw
M8*35mm



No. K

Quantity:4 Pcs

Foot Plate



No. R


Quantity:1 Pc

Allen Key
5#



x4

STEP 12

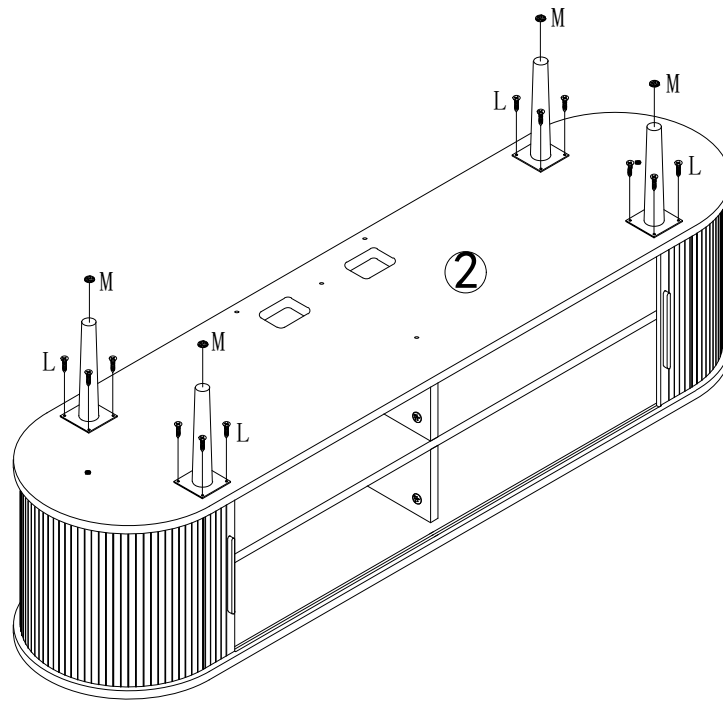

No. L

Quantity: 16 Pcs

Screw
4*16 mm




No. M

Quantity: 4 Pcs

Foot Pad
φ20



STEP 13

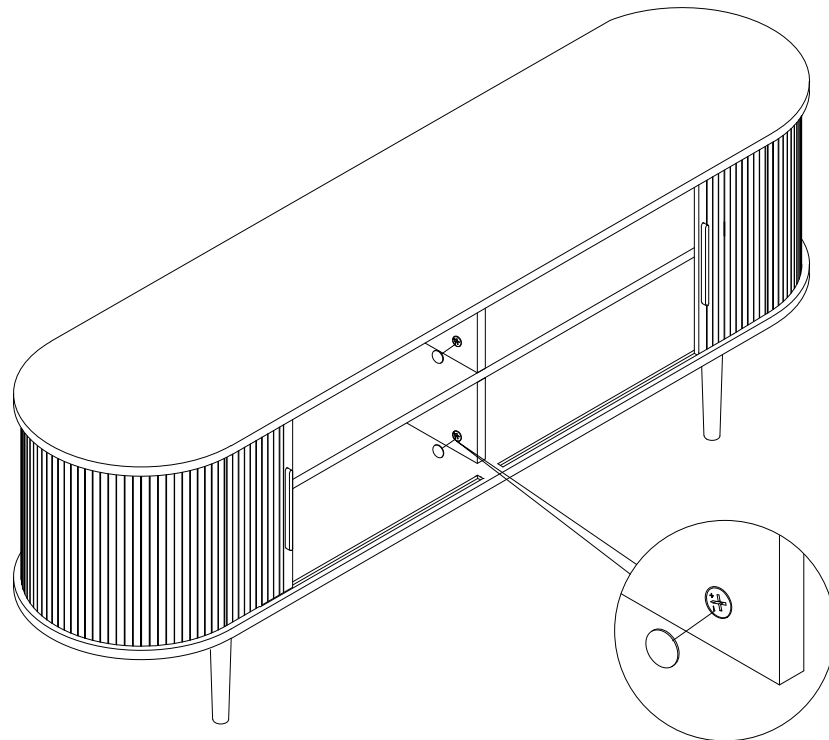





No. Q

Quantity: 10 Pcs


Sticker
φ20



STEP 14

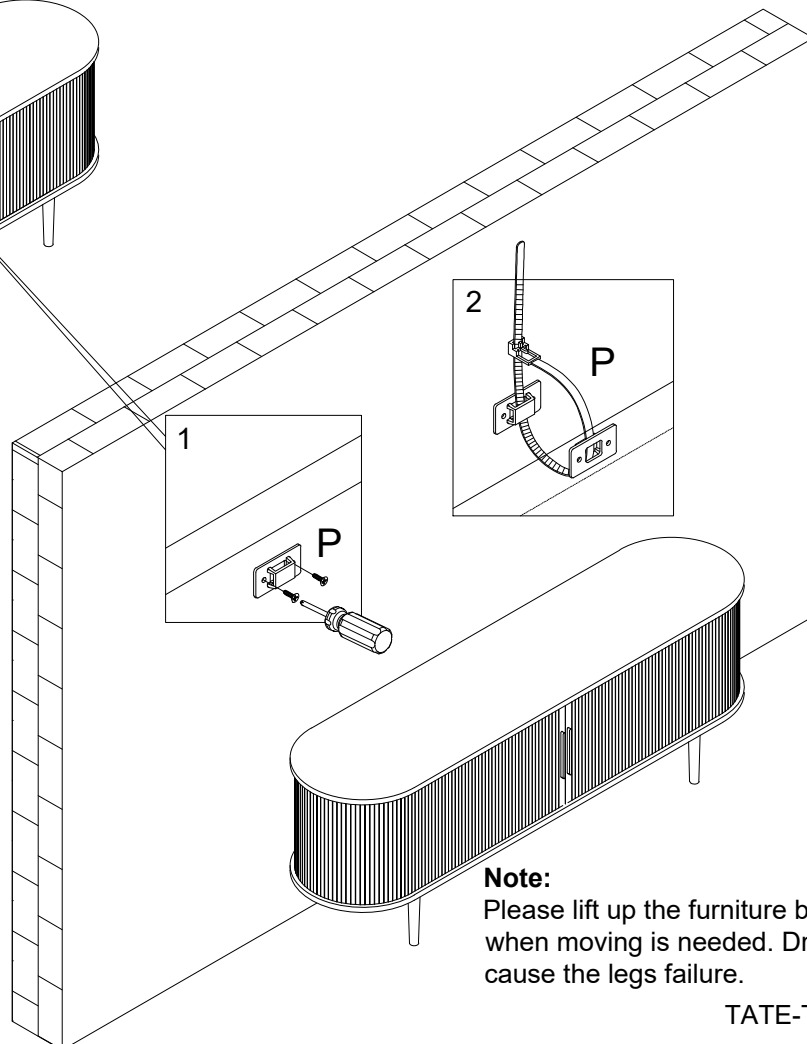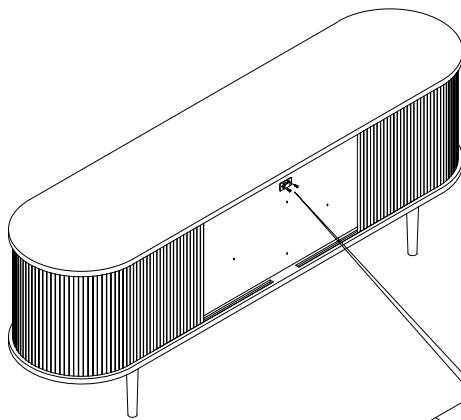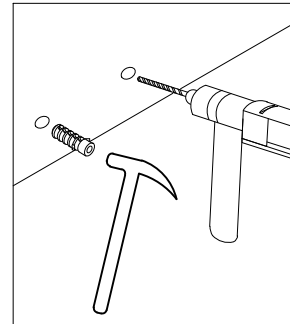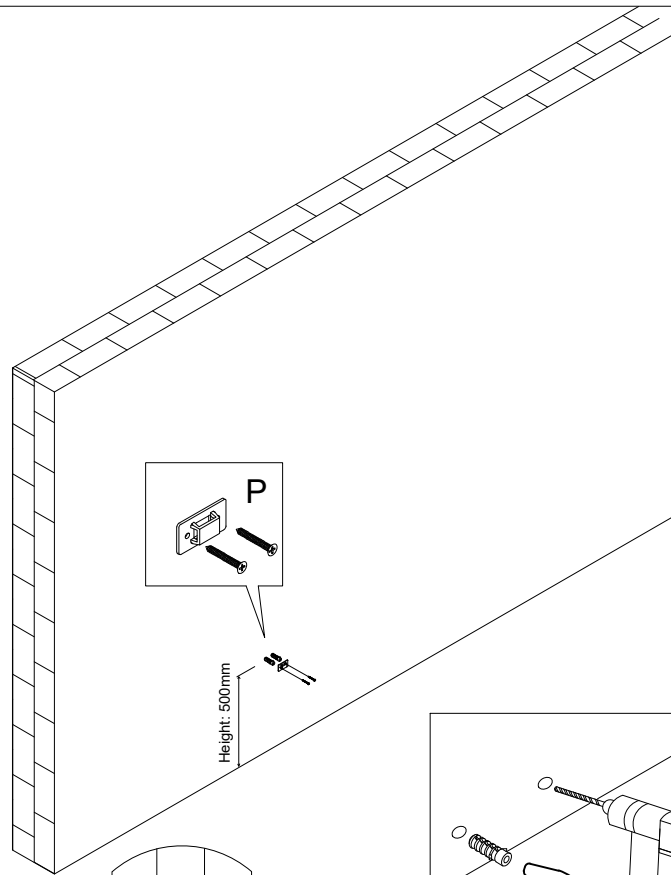

No. P
Quantity: 1 Set
Anti-falling Parts



Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.

TATE-TV-BLACK 14

lifely.com.au

Great job. You're done!

Don't forget to share how it looks in
your space and tag us on Instagram.
@lifelyhome#homewithlifely!