
Assembly Instructions

Jessi Office Chair

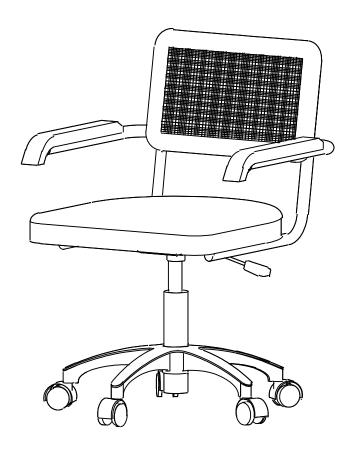

Lifely*

Product Code
JESI-OC Jessi Office Chair

Dimensions(WxDxH) 560x570x785mm

Important

Please read through instruction carefully Before assembly and keep for future reference.

For our full catalogue of assembly instructions Visit: lifely.com.au/assembly.

Important Tips and Maintenance






Keep children and animals away from working area as smaller parts may cause choking if swallowed.



Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.



Never use ammonia based cleaning products as it will damage the finish.



To avoid fading, keep furniture out of direct sunlight.



Use a soft or damp cloth(dry cloth)when wiping or cleaning surfaces.



Two person are required.



Lay a soft matt down to protect the furniture piece before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea(or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on,try a compliment instead .E.g. "You're so good looking"

This 9-Step assembly should take around 50 minutes with an Allen Key or 40 minutes with an electric drill. Godspeed

Designed for everyday

Component Hardware

Please check you have all the fittings part or tools are listed in below.

NO.A Quantity: 8pcs Screw M6x35mm NO.B Quantity: 4 pcs Screw M6x40mm NO.C Quantity: 2pcs Screw M6x25mm

NO.D Quantity: 4 pcs Screw M6x20mm NO.E Quantity: 2 pcs Washer



NO.F Quantity: 4 pcs Washer




NO.G Quantity: 1pc Allen Key M4





Component Panels & part List


Please check you have all the panels are listed below.

1. Rattan backrest	x1
2. Wooden armrest	x2
3. Stainless steel armrest	x2
4. Seat	x1
5. Metal plate	x 1
6. Gas Cylinder	x 1
7. Base	x 1
8. Wheel	x 5

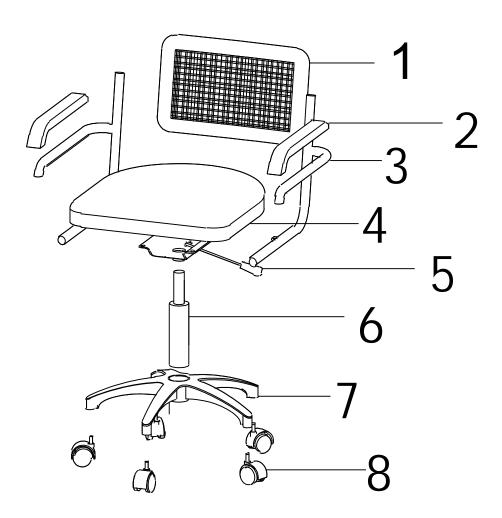


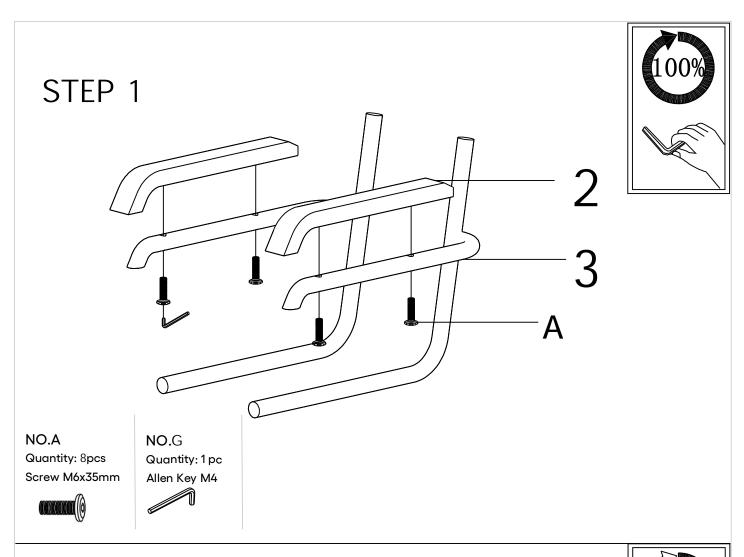

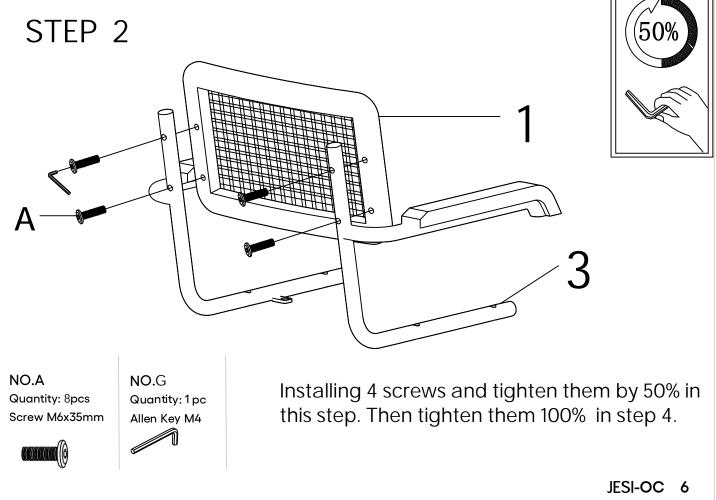

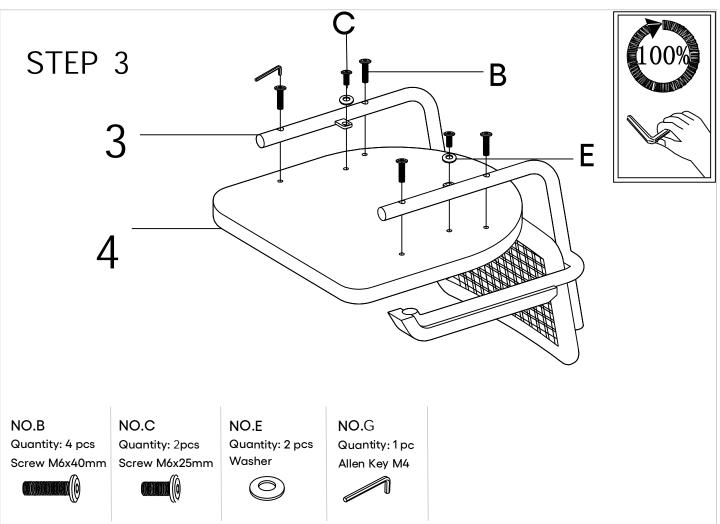




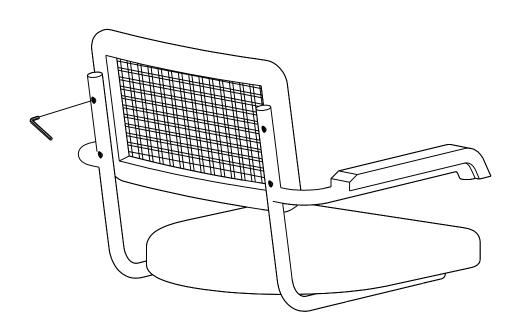




NO.G Quantity: 1pc Allen Key M4


Tighten the back screws by 100% in this step.

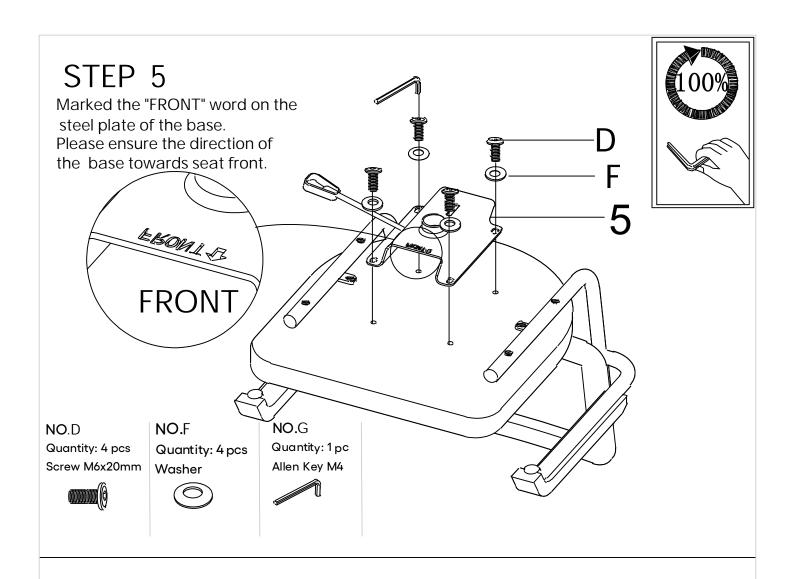


STEP 6

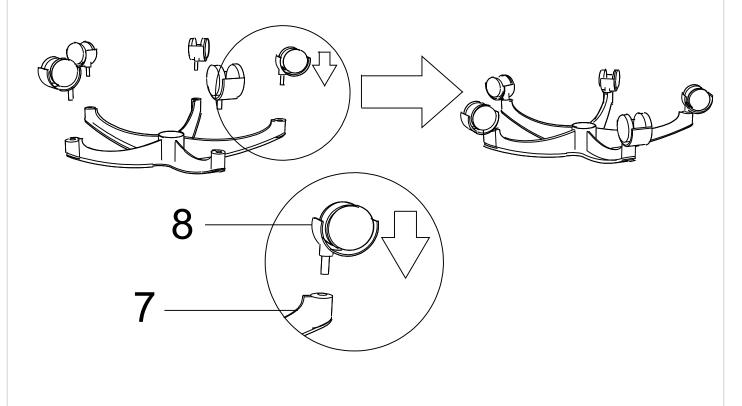


STEP 7

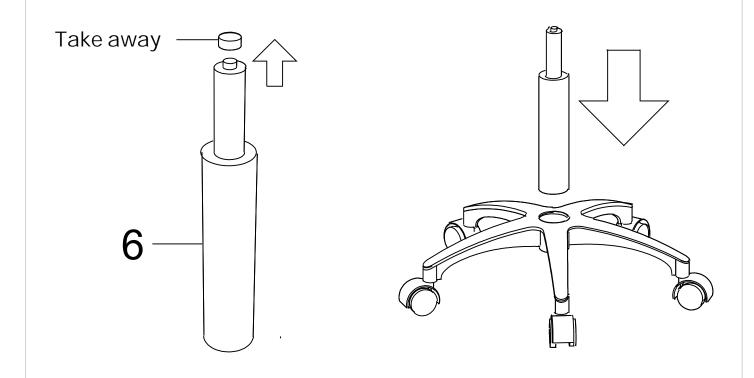

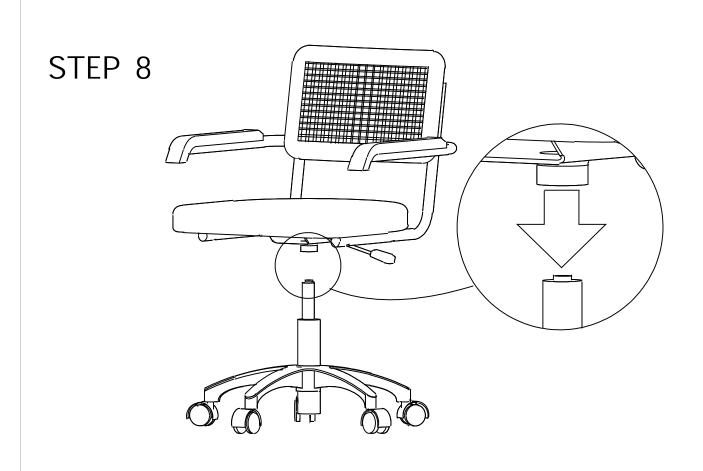

STEP 9

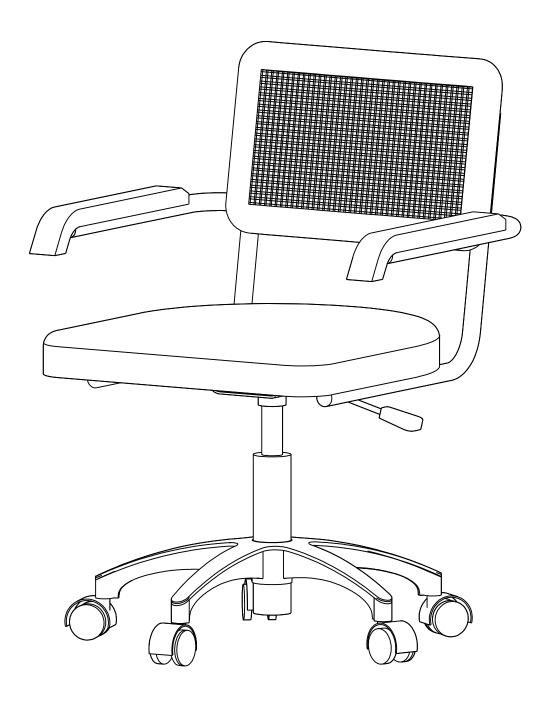

lifely.com.au

Great job. You're done!

Don't forget to share how it looks in your space and tag us on Instagram.
@lifelyhome#homewithlifely!