STEP 1

(5)
Foot 2PCS

(2)M4*40
Tapping screw
2PCS

(12)Cross wrench
1PC

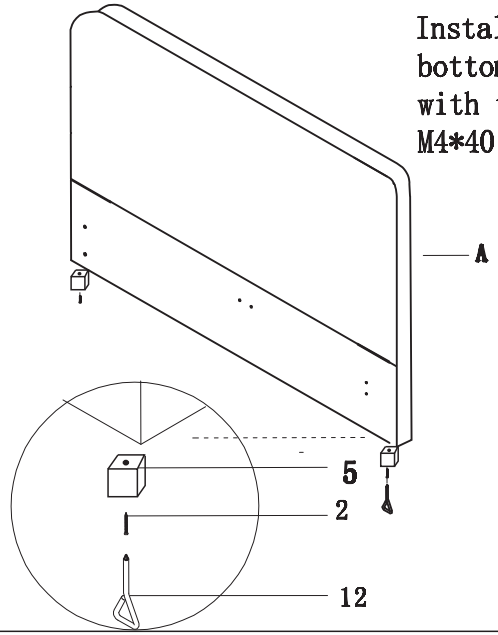

Install the feet to the bottom of the headboard with the tapping screws M4*40

STEP 2

(5) 50*50
Foot 2PCS

(2)M4*40
Tapping screw
2PCS

(12)Cross wrench
1PC

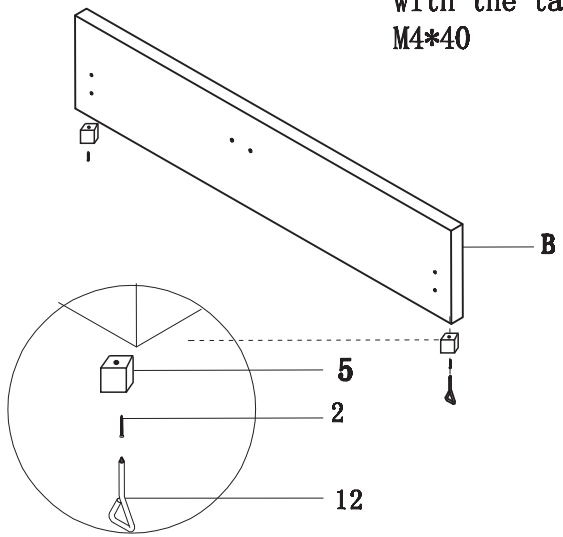

Install the feet to the bottom of the footboard with the tapping screws M4*40

STEP 3

(6)M8*20
Screw 8PCS

(1) M5
Hex key
1PC

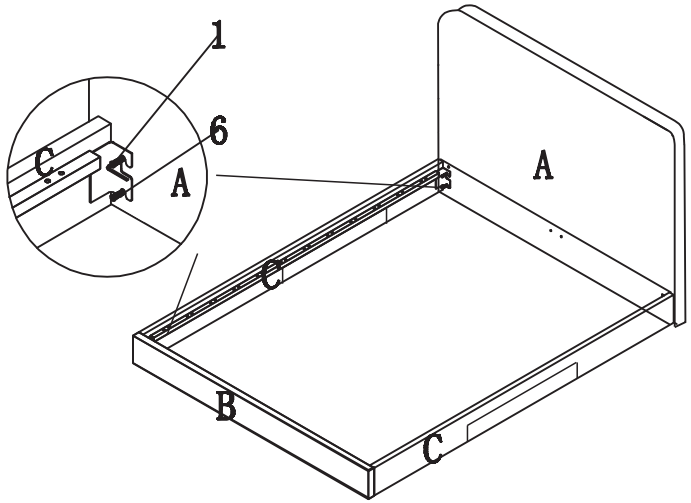

Install the two side boards of the bed with the screws M8*20 symmetrically on both ends of the headboard

STEP 4

(1) M5 hex key 1PC

(3)M8 flat washer 4PCS

(4)M8 screw nut 4PCS

(7)M8*40 screw 4PCS

(8)socket spanner 1PC

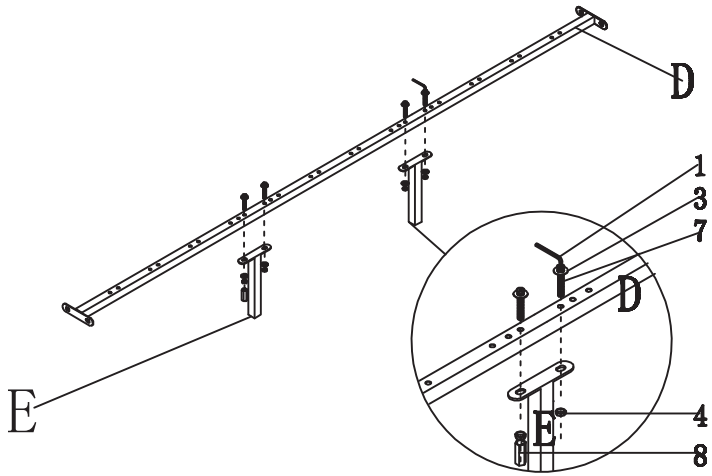

Connect the middle supporting legs and the **iron tube** with the screws M8*40

STEP 5

(15) 8 PCS

(2)M4*40
Tapping screw
8PCS

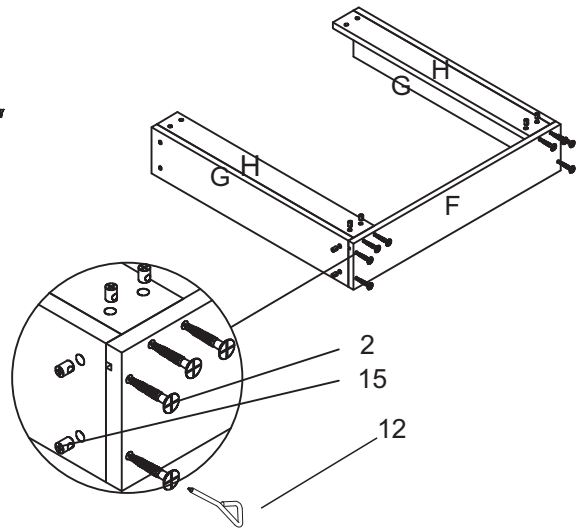

STEP 6

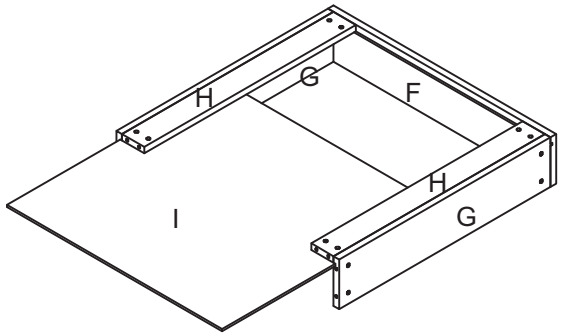

STEP 7

(15) 8 PCS

(2)M4*40
Tapping screw
8 PCS

(12) Cross wrench
1PC

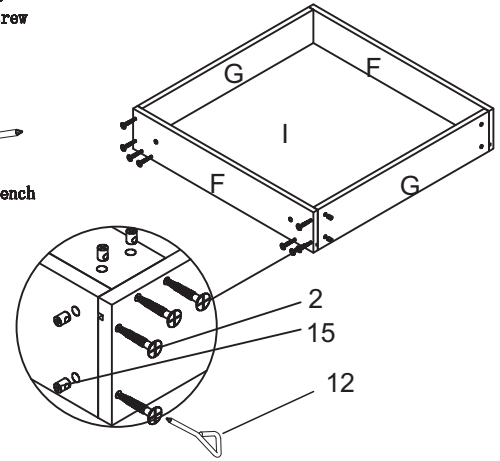

STEP 8

(16) 4 PCS

(14) M4*10 16PCS

(12) Cross wrench
1PC

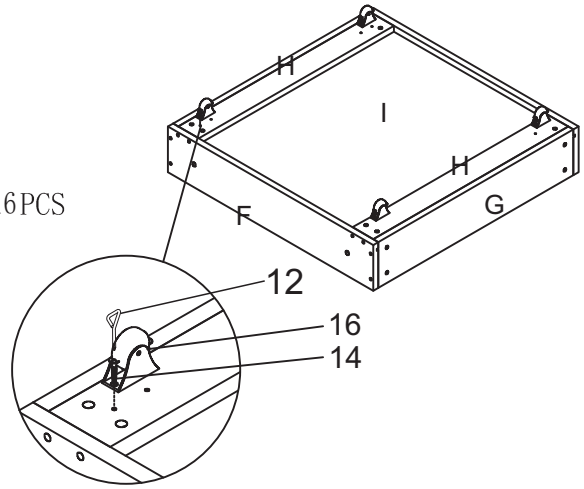

STEP 9

(13)M8*25
Screw 2PCS

(1) M5 hex
key 1PC

(3)M8 flat
washer 2PCS

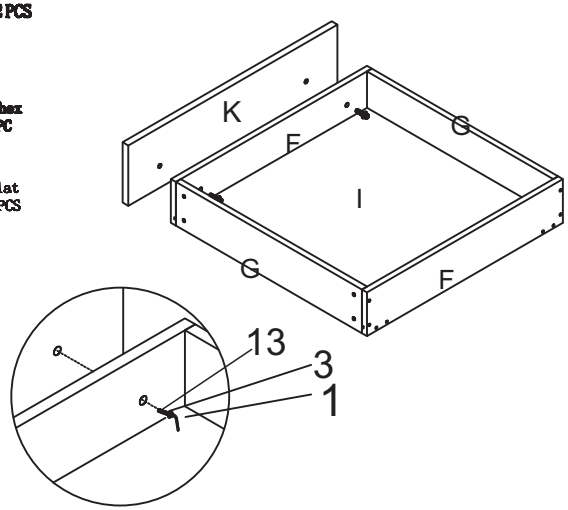

STEP 10

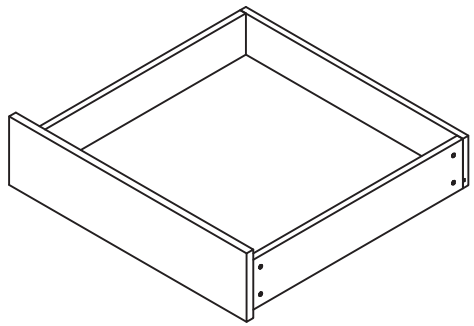

STEP 11

(6)M8*20
Screw 4PCS

(1)M5
Hex key
1PC

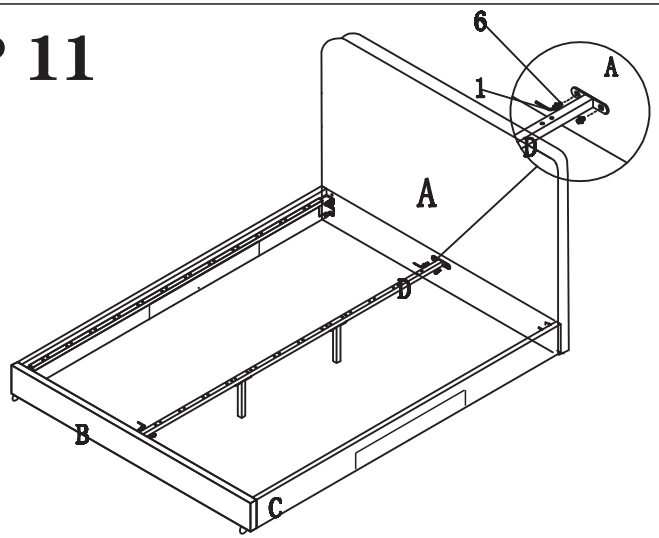

Connect the iron tube and the two ends of the bed with M8*20 screws

STEP 12

(11) 24 PCS

(10) 24PCS

(9) 12PCS

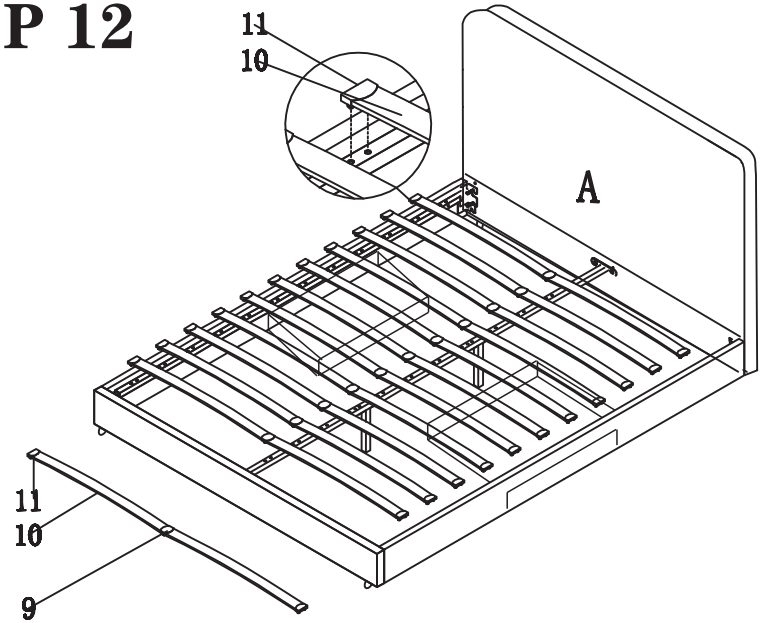

Insert this ribs with spare parts(11)(9)into the metal frame,please pay attention to insert the two ends before inserting the middle plastic caps.

PART LIST

A 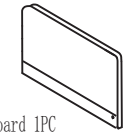 Headboard 1PC	B  Footboard 1PC	C Sideboard 2PCS	D Iron tube 1PC
E Leg 2PCS	F 4PCS	G 4PCS	H 4PCS
I  2PCS	J  2PCS	K  2PCS	
1 M5 Hex key 1PC	2 M4*40 Tapping screw 36PCS	3 M8 Flat washer 8PCS	4 M8 Screw nut 4PCS
5 M50*50 Foot 4PCS	6 M8*20 Screw 12PCS	7 M8*40 Screw 4PCS	8 Socket spanner 1PC
9 12PCS	10  24PCS	11 24PCS	12 Cross wrench 1PC
13 M8*25 4PCS	14 M4*10 32PCS	15 32PCS	16 8PCS